


CROWN LEAF CONNECTION

1) You will find 6 crown leaves vacuum packed with an allen wrench.



2) Locate the 1 Thick Disc on the center body. Insert 6 leaves into top of disk by narrow end. Tighten pre-embedded set screws on the wall of disc until secure. Use Allen wrench supplied.

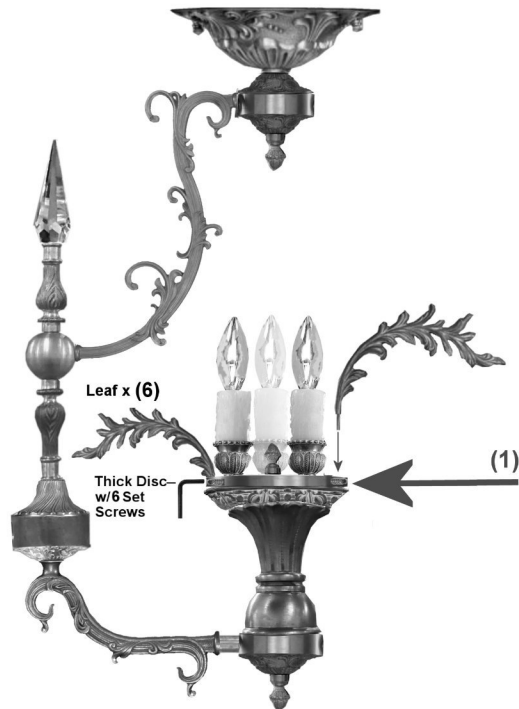

American Brass & Crystal


Casting a Finer Light



FM7610

American Brass and Crystal provides the finest quality components manufactured, designed and finished by master artisans. We take great pride in our production abilities and we empower our valued customers with the ability to custom create the light that is perfect for them.

Enclosed are detailed instructions on how to properly assemble and install your chandelier. If you have any questions please call our toll free customer service hotline at: **1-(877)-465-5617**

 American Brass and Crystal
835 Lehigh Avenue, Union, NJ 07083

www.abclighting.net



American Brass & Crystal

Casting a Finer Light

Crystal Component Detail



Letter: A
Qty: 1

(1 x 14mm Bead+
1 x 24mm Rosette+
1 x 14mm Bead+
30mm Ball)

**Connect to bottom
center finial.**



Letter: B
Qty: 24

(1 x 14mm Bead+
1 x 24mm Rosette+
1 x 14mm Bead+
2" Crystal Drop)

**Connect to 3 holes
on small inner arms.**

**Connect to front hole
on 6 center leaves**

**Connect to back hole on
6 center leaves**

**Connect to top outer
hole on 3 upright arms**




Letter: SPIKE
Qty: 3

**Connect one to
each of the 3 arms.**

Crystal Trimming Directions

Begin trimming your chandelier after all of the electrical connections have been made, the lights have been tested and the chandelier is in good working order. Begin trimming in Alphabetical order. Do not unwrap the next letter until previous one is complete.

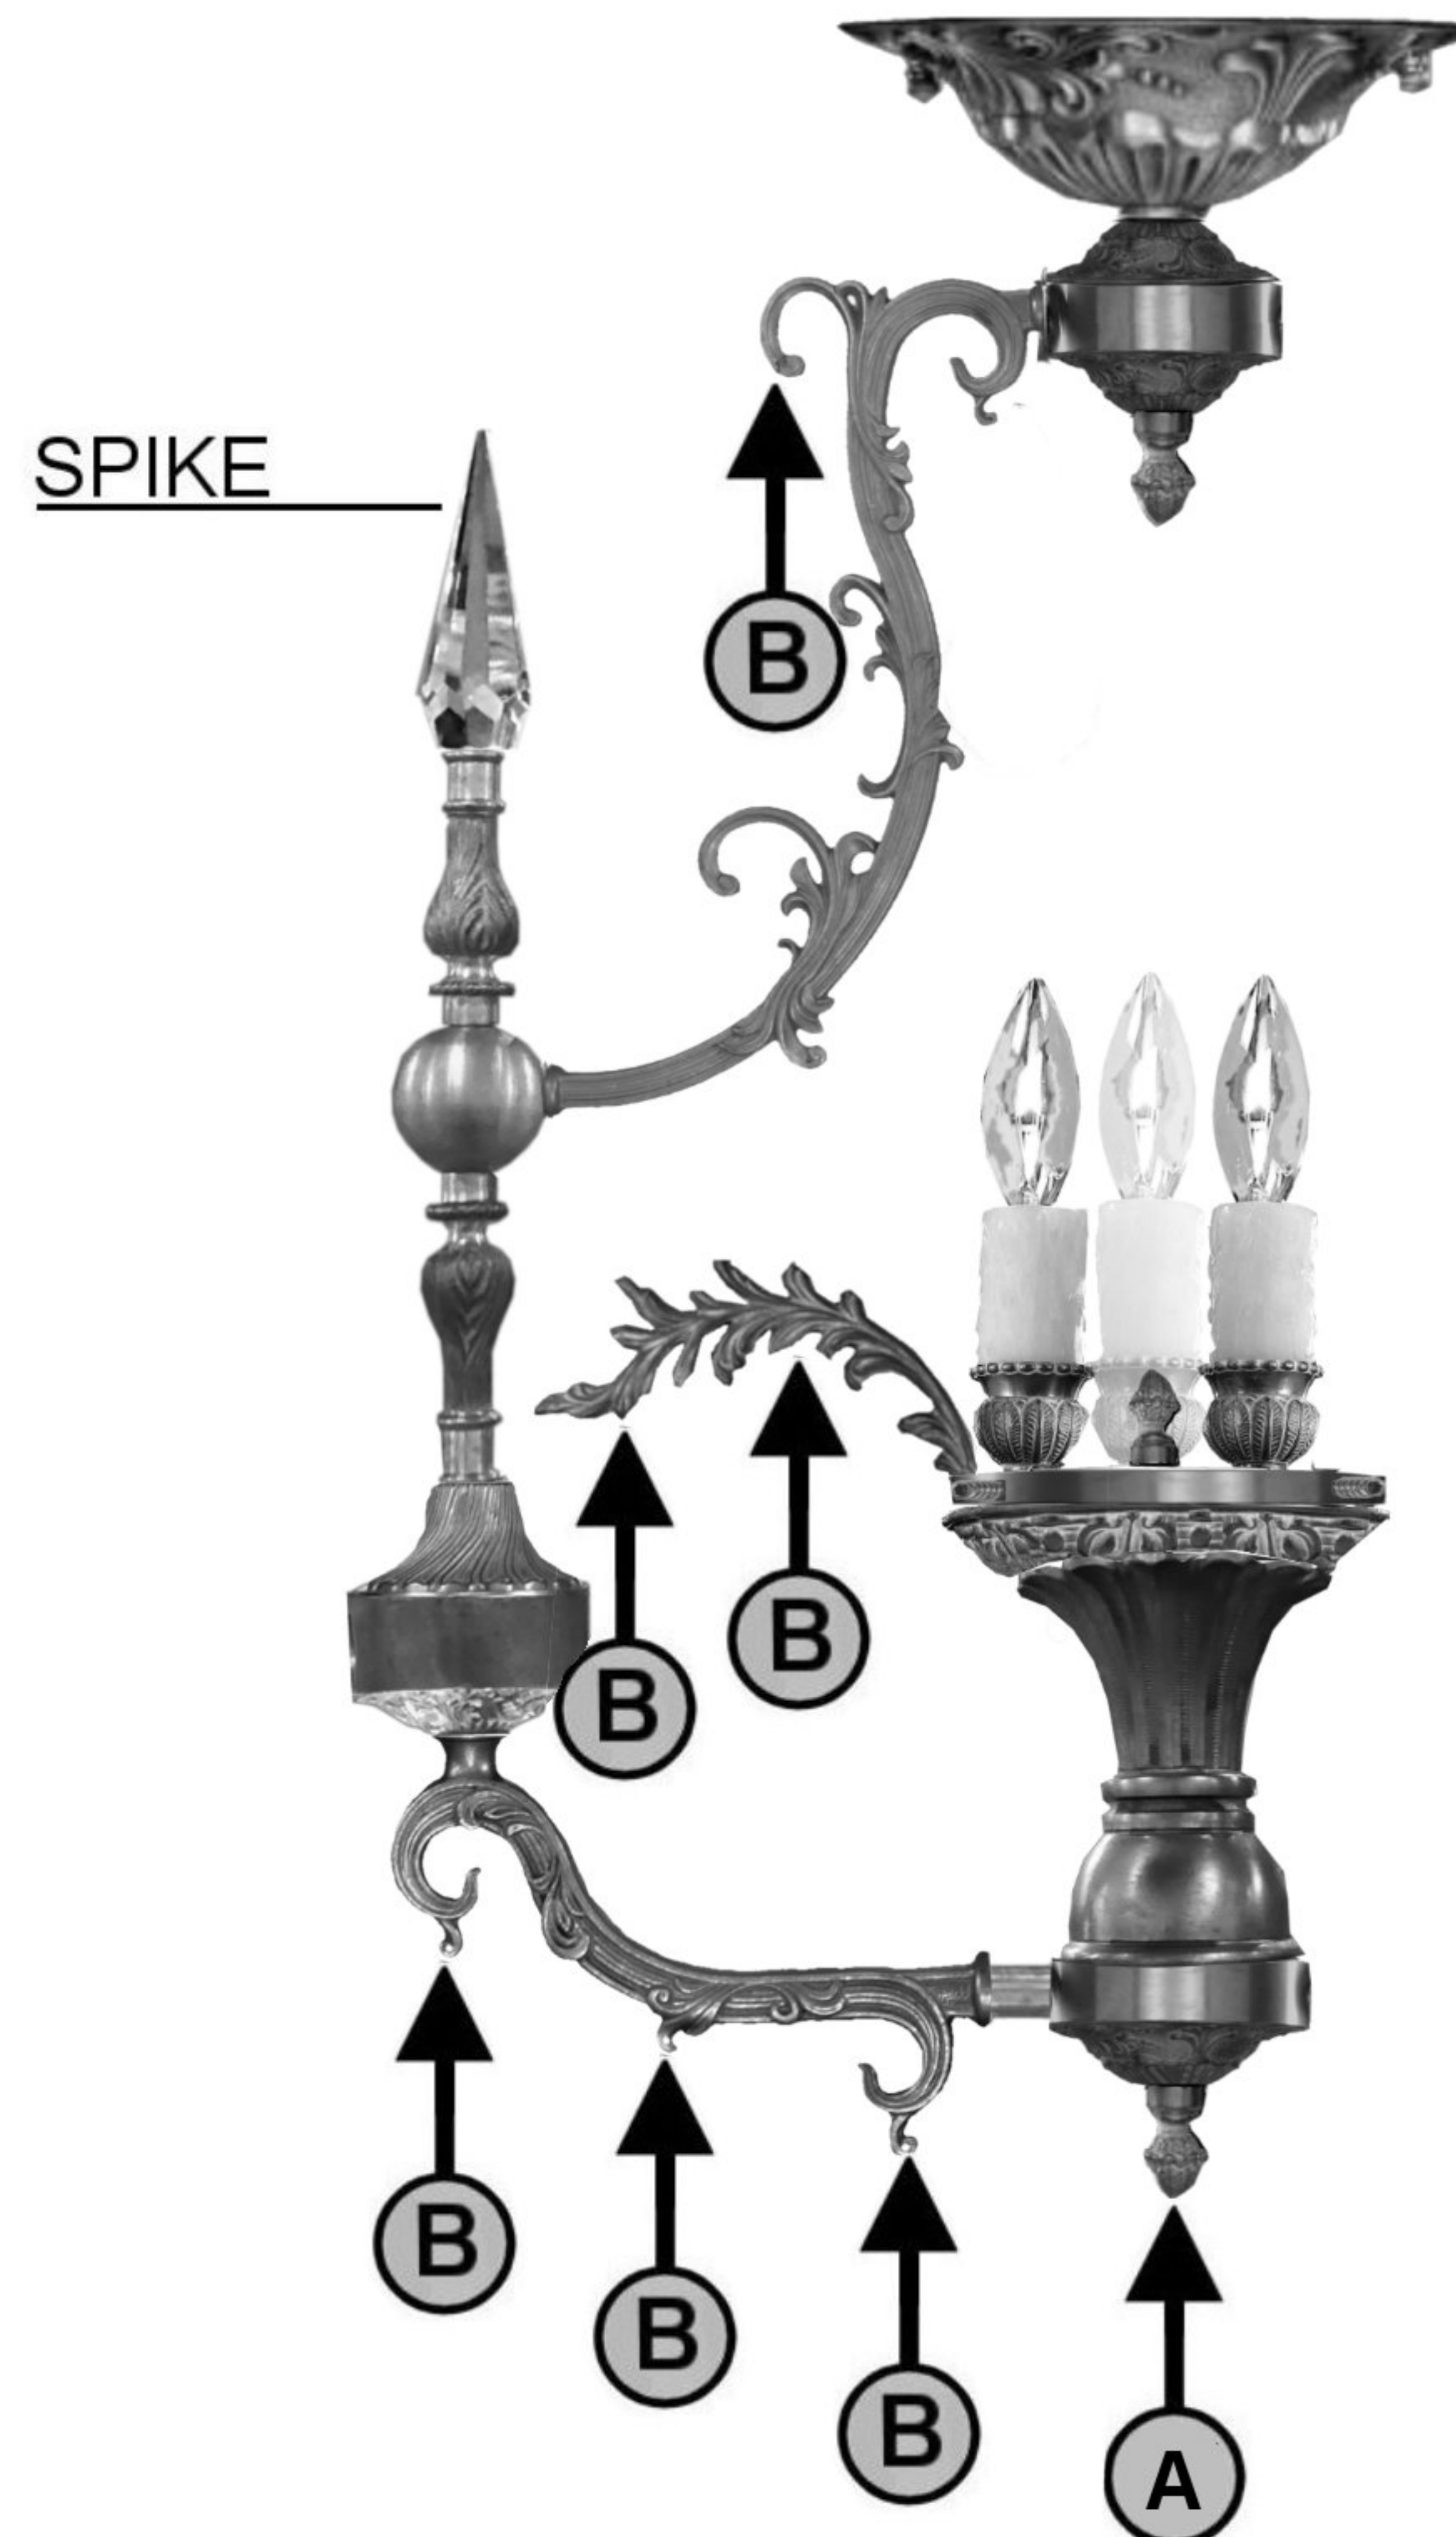

Note: Diagrams are just representative