


American Brass & Crystal

AB

CH-9562

www.abclighting.net

835 Lehigh Avenue
Union, N.J. 07083
Toll Free (877)465-5617

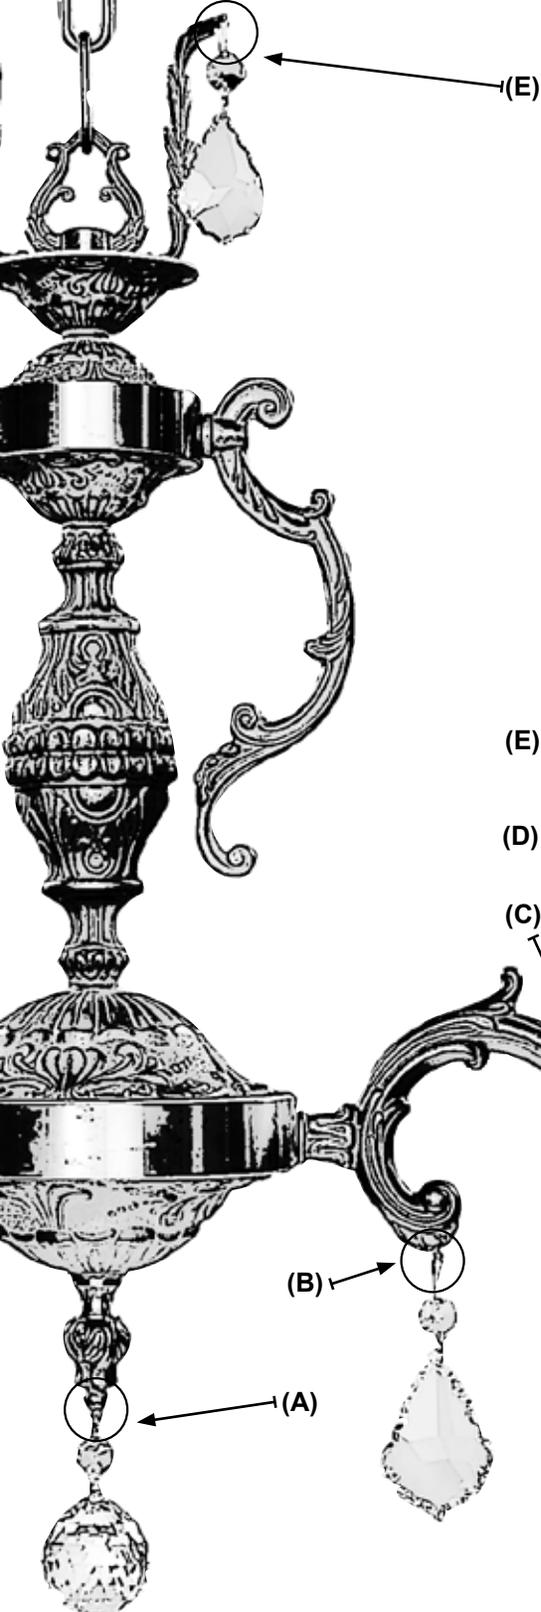

CRYSTAL TRIMMING DIRECTIONS:

Begin trimming chandelier after all the electrical connections have been made, the lights have been tested and the chandelier is in good working order.

Begin dressing Alphabetically

Do not unwrap the next crystal section until the proceeding section is complete

Step 1: Package (A) Attach the ball to the (finial).

Step 2: Package (B) Attach the (10) crystal sections to the (back of arms)

Open package labeled "B" Attach each crystal section using the long thin pin. Leave the loose chain of crystal to hang unattached until all crystal sections are attached to the frame.


Once all sections are attached begin connecting the loose chain of crystal to the 4 hole octagon on the crystal section to the right. (Diagram 1).

Step 3: Package (C) Attach the (10) crystal sections to the (middle of arms)
Same directions as step 2

Step 4: Package (D) Attach the (10) crystal sections to the (front tip of arms)
Same directions as step 2

Step 5: Package (E)
Attach 4 "E" crystals to each (bobeche).
Attach 1 "E" crystals to each (crown leaf).

(Diagram 1)

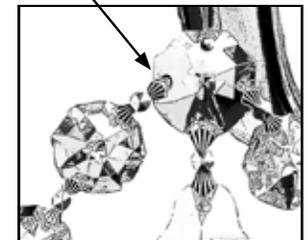

CRYSTAL PACKAGE _____ PIN COLOR _____ INITIALS _____