


Curved Glass Panel Installation

Once the central light kit has been installed, the crystal has been attached, the bulbs have been screwed in and the lantern is hung only then should you begin installing the curved glass panels.


STEP 1

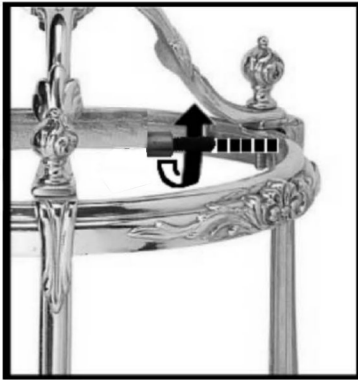

Locate the padded screw caps on the top behind each upright arm. Remove them by turning counter-clockwise. This will clear the way for you to install the glass panels sliding them up from the bottom into the grooves around the top and bottom main rings.




STEP 2

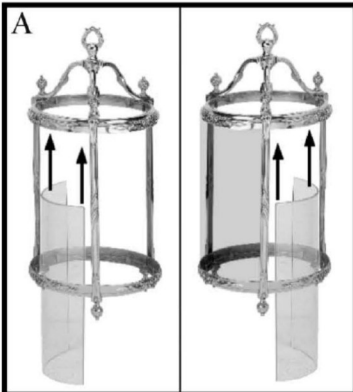

A) Coming up from the open bottom, slide the first glass panel up between the uprights with the clips. First fitting it into the grooves at the top and then the bottom.

Repeat until all glass panels are installed.

STEP 3

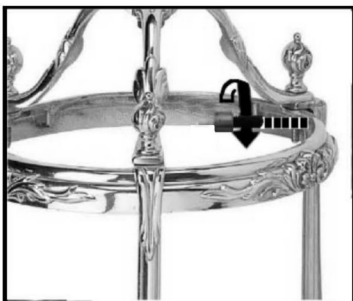

Replace the padded screw caps on the top of each upright to secure the glass in place. Tighten by turning clock-wise. Do not over tighten



American Brass & Crystal


Casting a Finer Light



LT-2208

American Brass and Crystal provides the finest quality components manufactured, designed and finished by master artisans. We take great pride in our production abilities and we empower our valued customers with the ability to custom create the light that is perfect for them.

Enclosed are detailed instructions on how to properly assemble and install your chandelier. If you have any questions please call our toll free customer service hotline at: **1-(877)-465-5617**

 American Brass and Crystal
835 Lehigh Avenue, Union, NJ 07083


www.abclighting.net



Crystal Component Detail


Letter: A

Quantity: 1

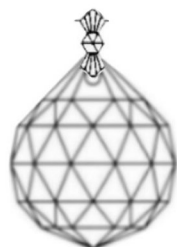

30mm Ball w/ pin

Connect to the
bottom finial

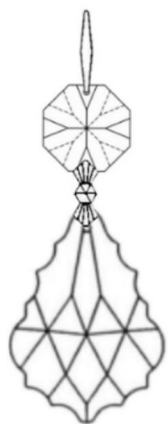

Letter: B

Quantity: 6

2" Drop w/
14mm Octagon

Connect to all 6
holes around bottom
cover.

Note: Diagrams are just representative

Crystal Trimming Directions

Begin trimming your fixture after all of the electrical connections have been made, the lights have been tested and the fixture is in good working order. Begin trimming in Alphabetical order. Do not unwrap the next letter until previous one is complete.

