ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: GADWC01	NAME:GLAZE SMALL SCONCE

MATERIAL TYPE: METAL FINISH:ANTIQUE BRASS


SOCKET TYPE: G9

SOCKET QTY:1PC

BULB WATTAGE: 6W G9

VOLTAGE: 120V

ITEM NET WEIGHT: 2.2LBS

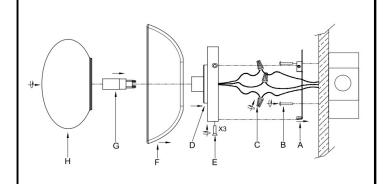

PARTS INCLUDED:

Mounting Plate(A)	Qty: 1
Mounting screw(B)	Qty: 3
Wire cap(C)	Qty: 3
Fixture(D)	Qty: 1
Canopy screw(E)	Qty: 3
Ceramic shade(F)	Qty: 1
Bulb(G)	Qty: Not included
Glass shade(H)	Qty: 1

HARDWARE INCLUDED:

Mounting Screws	Qty: 3	
Plastic Wire Cap	Qty: 3	

TOOLS NEEDED (Not Included):

1 Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.





TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.

2.Attach the mounting plate (A) to the wall junction box using the enclosed mounting screws (B) and tighten screws with screwdriver.

3. Connect ground wire from wall to ground wire from lamp using wire $\mathsf{caps}(\mathsf{C}).$

4. Attach house wire to lamp wires as shown. Fasten the pairs together with a wire ${\sf caps}({\sf C}).$


DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

5. Attach the fixture(D) to the mounting plate (A) and secure with 3 canopy $\mbox{screws}(E).$

6. Install 1 light bulb (G) into socket (G9 LED 6W – bulb is not included).

7. Attach the ceramic shade (F) to the fixture (D) and secure it with the glass shade (H) until it is tight.

8. Restore power to junction box and test fixture.

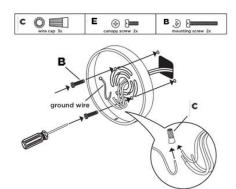

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.