SCHONBEK






CAUTION... RISK OF ELECTRICAL SHOCK. Make sure the electrical supply to the chandelier is turned off at the main fuse or circuit breaker before doing any installation. All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes. HANGING WEIGHT: 56 lbs.

BULBS:	35 - Candle shaped car	
	for best appearance.	
	60 - Watts Maximum	
WARNING:	This chandelier meets	
	UL/CSA certification.	

Please	e reco	IM and the following
CODE	# _	Fou

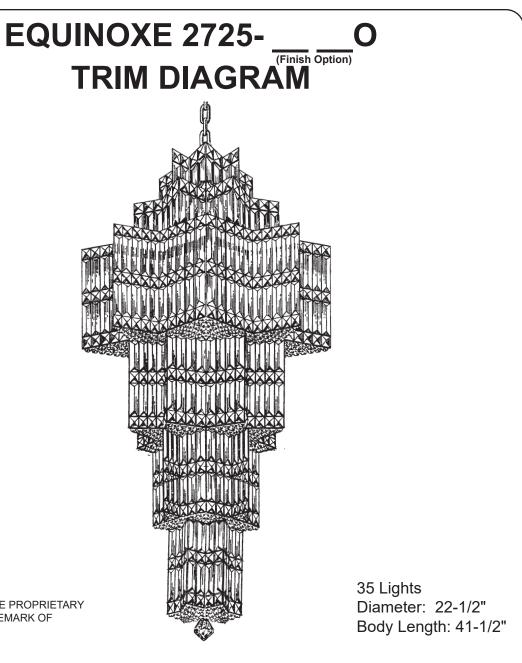



SCHONBEK 1


andelabra base B10 bulbs, recommend 25 watts

UL/CSA requirements. Any tampering will void

IPORTANT ing information for future service. ur-digit number on outside of carton.

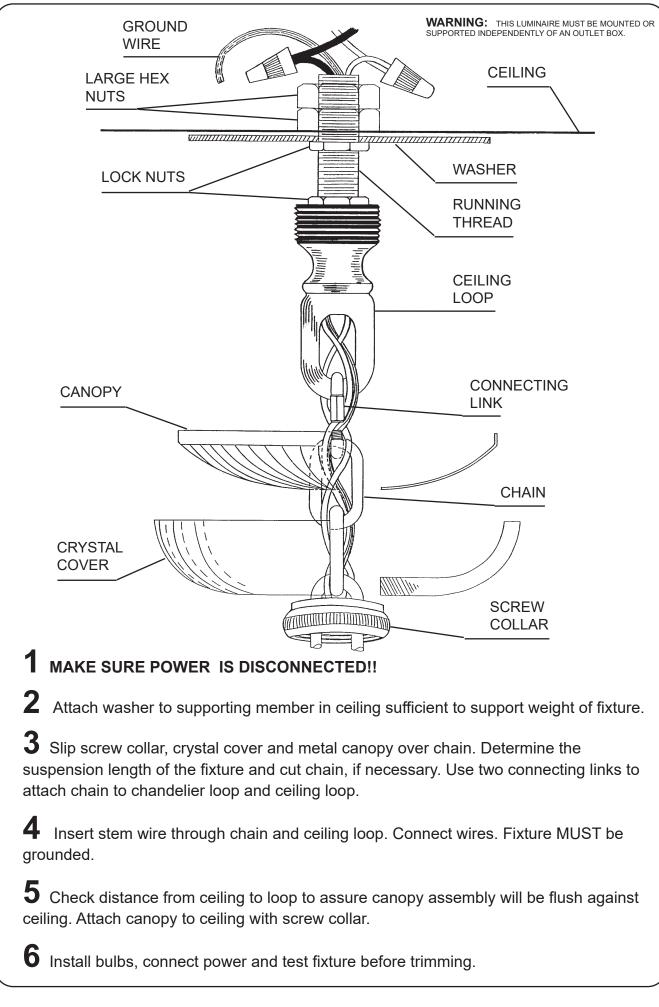


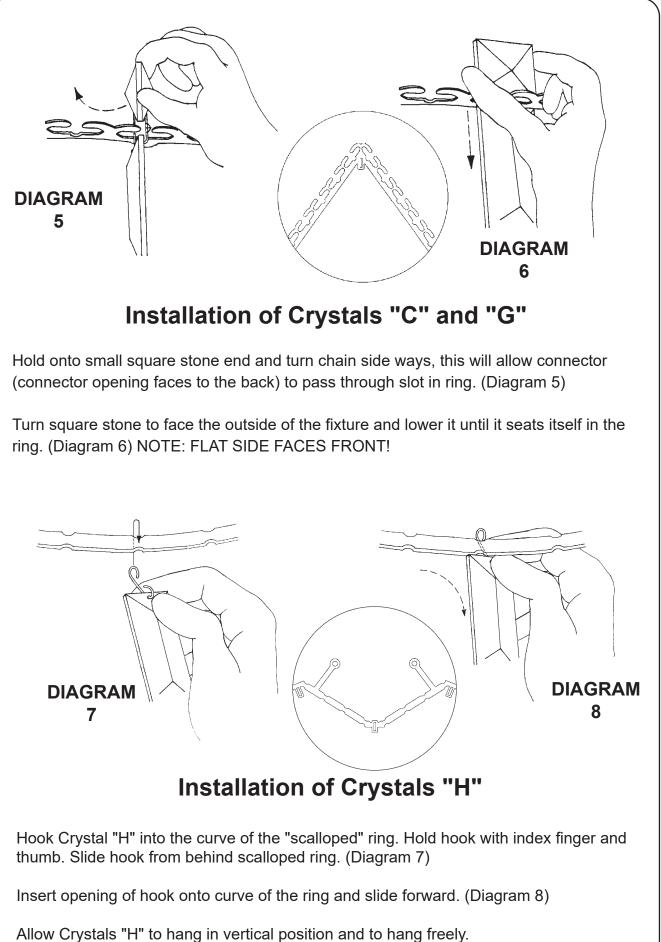


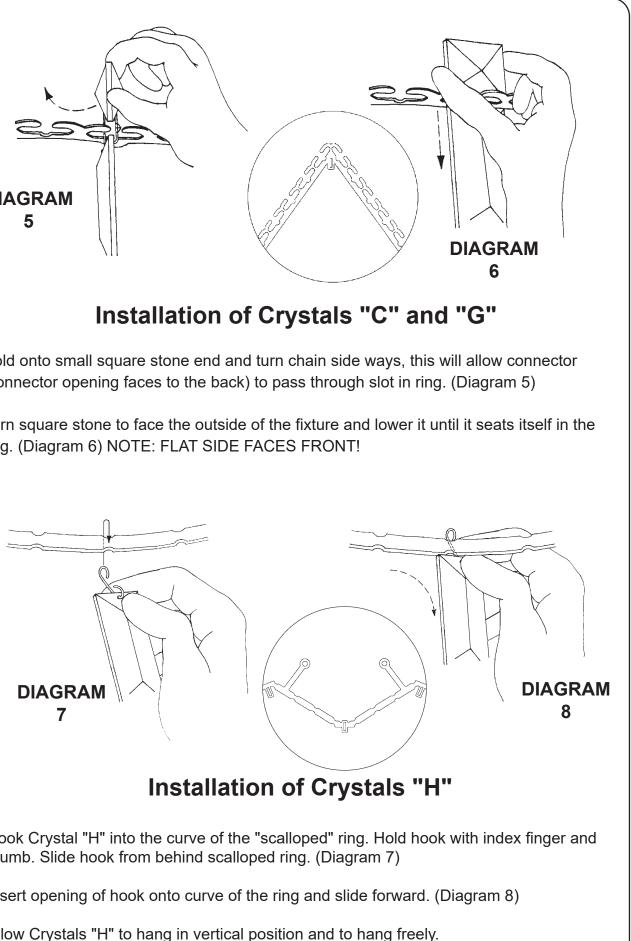

NOTE: FLAT SIDE FACES FRONT!

2725-___0

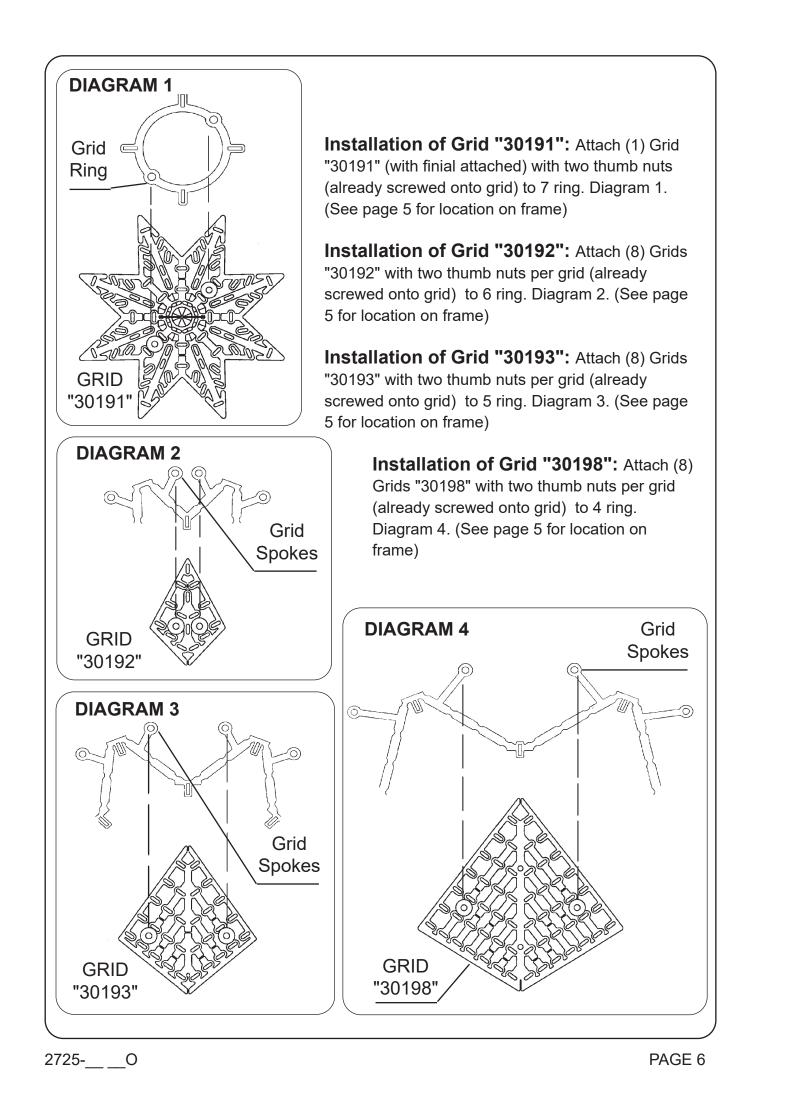

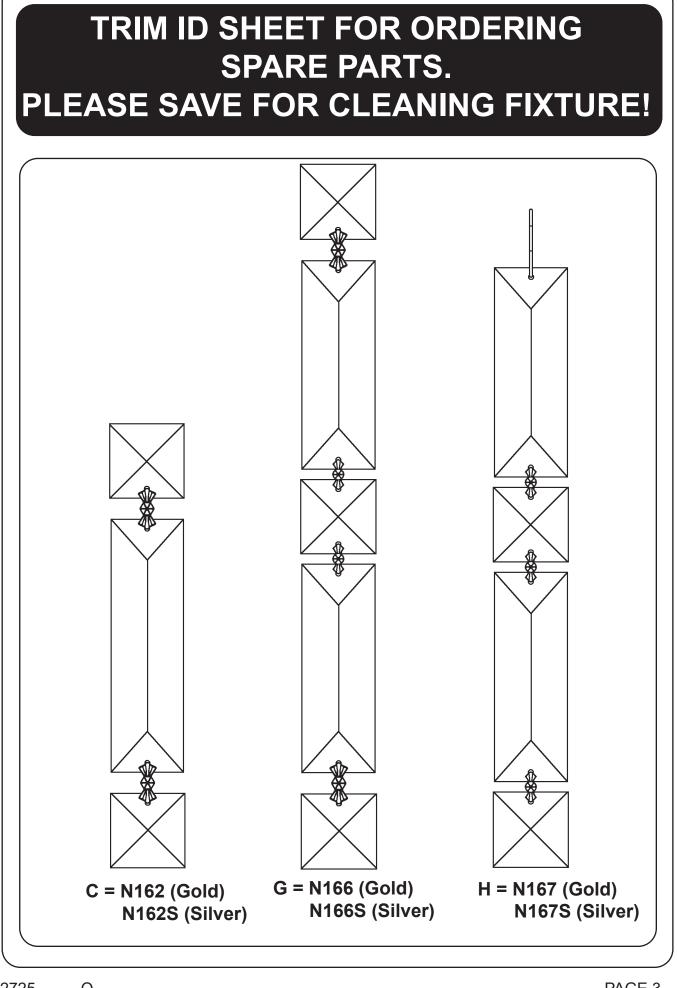

2725-___O

PAGE 3

IMPORTANT: FOLLOW ALL STEPS IN SEQUENCE

7 TEST POWER TO INSURE PROPER WIRING BEFORE HANGING TRIM ON FIXTURE. MAKE SURE ALL BULBS ARE IN PLACE.

8 Hook Chains "C" into the slots on ring 1, see diagrams 5 & 6 on page 7 for detailed instructions. NOTE: FLAT SIDE FACES FRONT!


9 Hook Chains "C" into the slots on ring 2, see diagrams 5 & 6 on page 7 for detailed instructions. NOTE: FLAT SIDE FACES FRONT!

10 Attach (1) Grid "30191" per instructions on page 6, see diagram 1 for detailed instructions. Hook Chains "H" into scallopes on ring 6, see diagrams 7 & 8 on page 7 for detailed instructions. NOTE: FLAT SIDE FACES FRONT!

11 Attach (8) Grids "30192" per instructions on page 6, see diagram 2 for detailed instructions. Hook Chains "H" into scallopes on ring 5, see diagrams 7 & 8 on page 7 for detailed instructions. NOTE: FLAT SIDE FACES FRONT!

12 Attach (8) Grids "30193" per instructions on page 6, see diagram 3 for detailed instructions. Hook Chains "H" into scallopes on ring 4, see diagrams 7 & 8 on page 7 for detailed instructions. NOTE: FLAT SIDE FACES FRONT!

13 Attach (8) Grid "30198" per instructions on page 6, see diagram 4 for detailed instructions. Hook Chains "G" into the slots on ring 3, see diagrams 5 & 6 on page 7 for detailed instructions. NOTE: FLAT SIDE FACES FRONT!

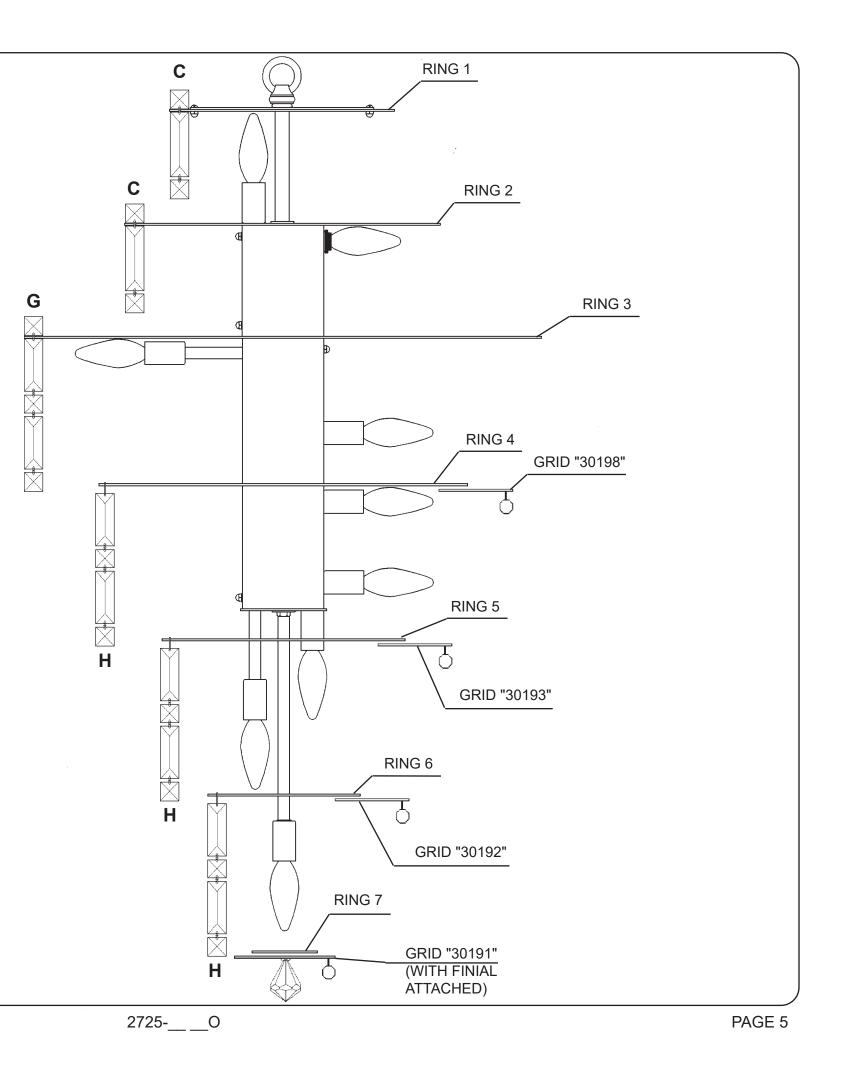

2725-___0