




CHANDELIER 6860-____H TRIM DIAGRAM

(Finish Option)

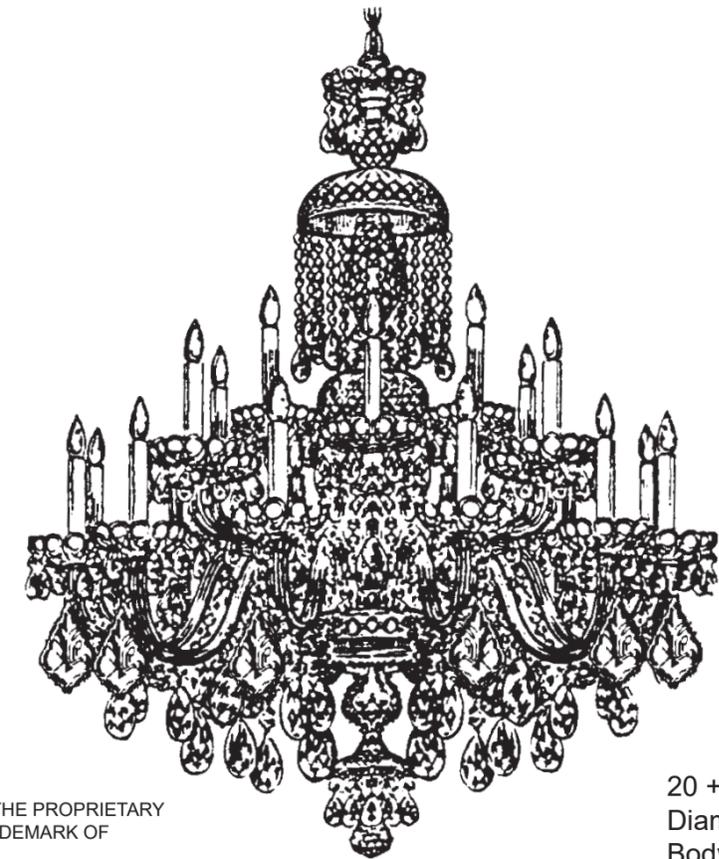

THIS DESIGN IS THE PROPRIETARY TRADE DRESS/TRADEMARK OF W SCHONBEK LLC.

20 + 5 Lights
Diameter: 35-1/2"
Body Length: 46"



CAUTION... RISK OF ELECTRICAL SHOCK. Make sure the electrical supply to the chandelier is turned off at the main fuse or circuit breaker before doing any installation. All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

HANGING WEIGHT: 62 pounds.

BULBS: (5) Tubular shaped candelabra base C7 bulbs, 7-1/2 Watt Maximum.
(20) Candle shaped candelabra base B10 bulbs, recommend 25 watts for best appearance.
60 - Watts Maximum

WARNING: This chandelier meets UL/CSA requirements. Any tampering will void UL/CSA certification.

**Follow steps in exact order
Save this trim diagram for future reference**


1

IMPORTANT

Please record the following information for future service.

CODE # _____ Four-digit number on outside of carton.
PACKER # _____ See crystal package label.
ORDER # _____ See crystal package label.


Instructions for electrician
STEPS 2 - 7

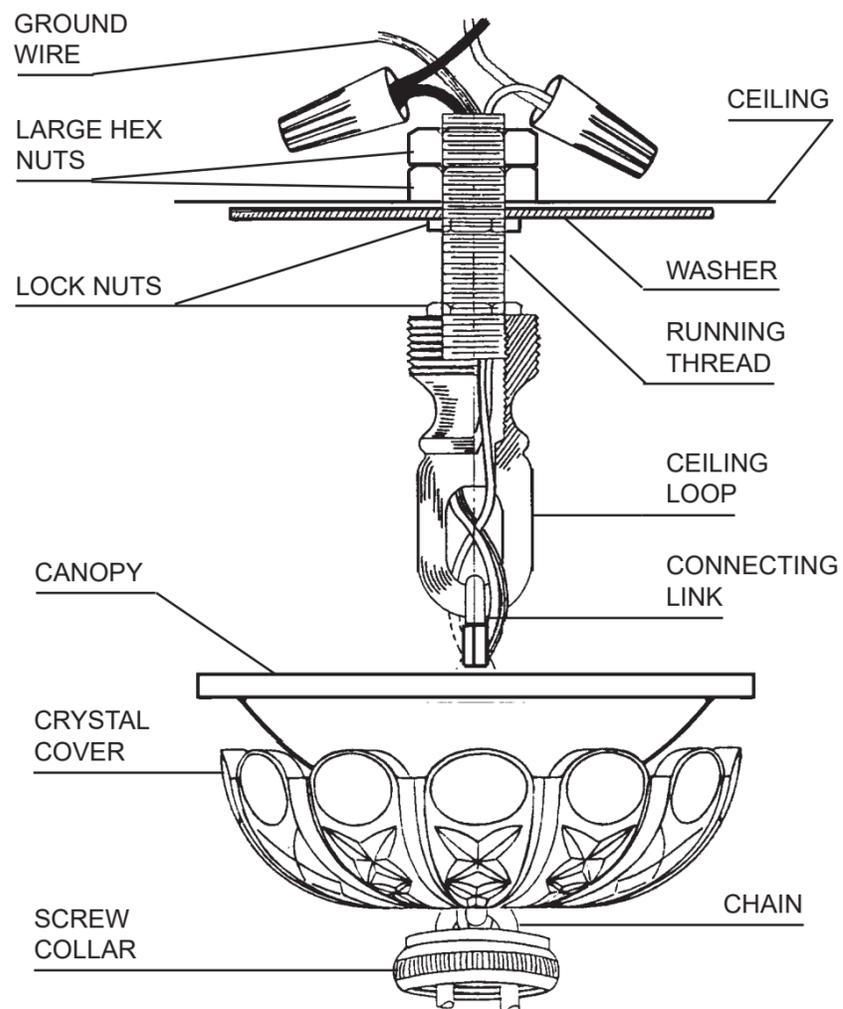

- 2** MAKE SURE POWER IS DISCONNECTED!!
- 3** Attach washer to supporting member in ceiling sufficient to support weight of fixture.
- 4** Slip screw collar, prismatic cover and metal canopy over chain. Determine the suspension length of the fixture and cut chain, if necessary. Use two connecting links to attach chain to chandelier loop and ceiling loop.
- 5** Insert stem wire through chain and ceiling loop. Connect wires. Fixture MUST be grounded.
- 6** Check distance from ceiling to loop to assure canopy assembly will be flush against ceiling.
- 7** Attach canopy to ceiling with screw collar.

FRAGILE:

CAUTION: Glass parts are fragile. To avoid breakage use care when assembling or cleaning.

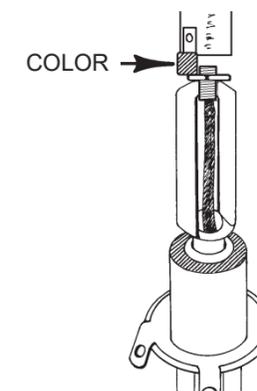

WHEN ORDERING REPLACEMENT ARM(S):

- | Give arm number from trim diagram
- | Give color code from the arm itself

MAINTENANCE:

Use a soft, lint - free cloth to clean the metal frame.

UNDER NO CIRCUMSTANCES SHOULD METAL POLISHES, CLEANERS, ABRASIVES OR AEROSOL SPRAYS BE USED.


While the latest finishing techniques have been used on the metal frame, such finish cannot be unconditionally guaranteed. The main cause of deterioration, apart from certain atmospheric conditions, is improper cleaning.

To clean the crystals, polish with a damp chamois.

You are cleaning delicate jewelry... Take the greatest care.

IMPORTANT:

Do not clean crystals in a dishwasher. The finish of the metal clips and hangers will be ruined and the crystals may be damaged.

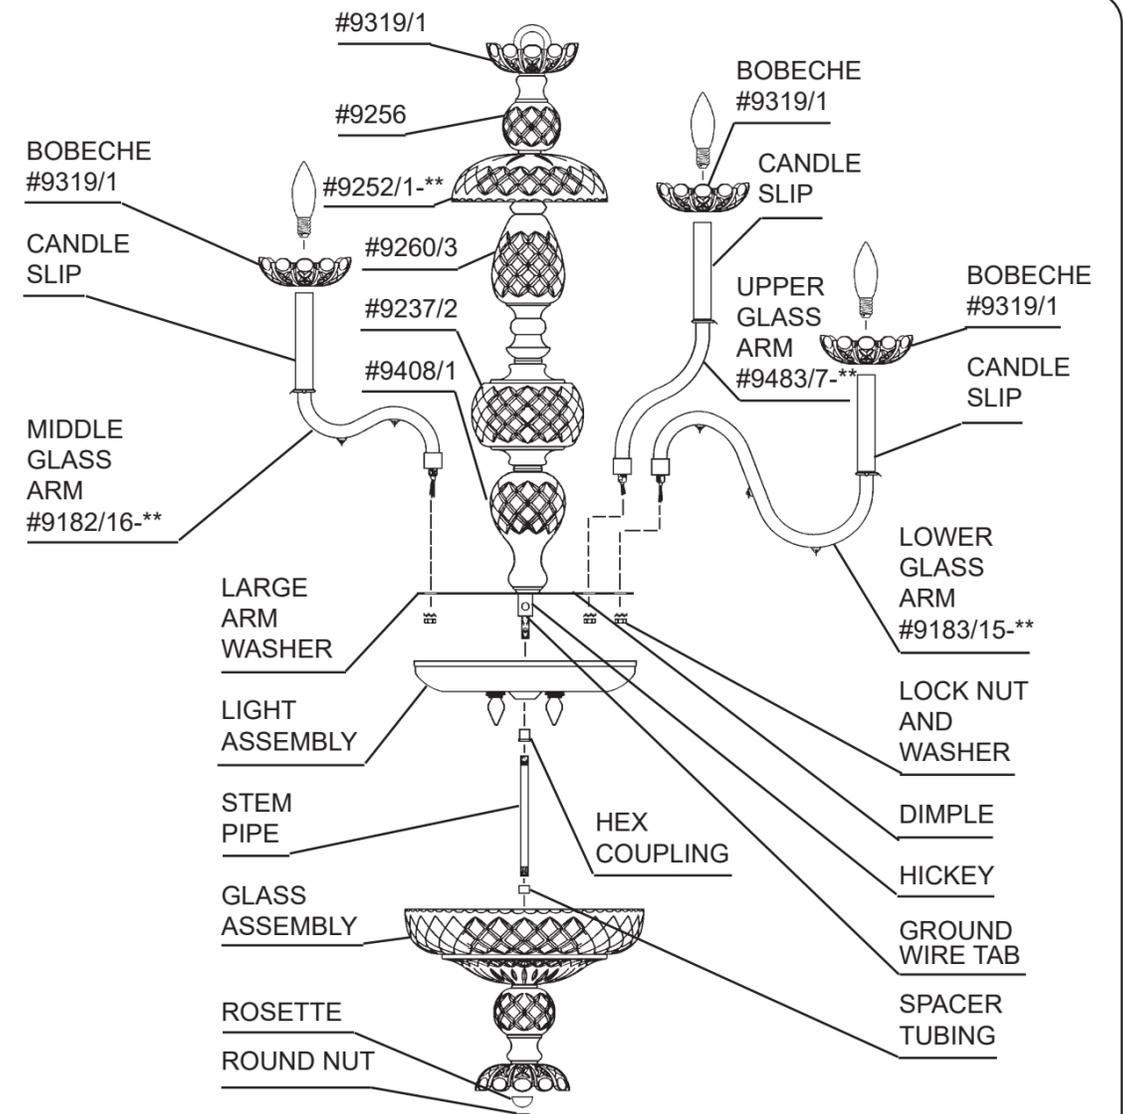


8 Install upper arms into the inside holes on the washer. **ALTERNATELY** install the middle and lower arms into the outside holes on the washer. **NOTE: THE FIRST LOWER ARM INSTALLED SHOULD LINE UP WITH A UPPER ARM.** Line up holes in arms with dimple in washer. Use lock washer and nut to secure arms in place. Unscrew nut on nipple, place ground wire tab over nipple, secure with nut.

9 Connect bare ground wire in each arm to bare ground wire in center column. Use electrical tape to secure wire nuts. **NO MORE THAN 5 - WIRES PER WIRE NUT.** Sufficient quantities of jumper wires and wire nuts are provided. Connect white arm and light assembly wires to neutral column wire (ribbed or marked is neutral). Connect black arm and light assembly wires to power wire in column. Carefully press wires as close as possible to the underside of washer.

10 Attach light assembly with washer and hex coupling. Install 5 - C7 bulbs. Install bulbs, connect power and test the fixture **BEFORE** attaching glass assembly. If any of the bulbs do **NOT** light - **DISCONNECT POWER.** Double check the wire connections.

11 Install stem pipe into hex coupling. Slide silver spacer tubing over stem pipe. Attach glass assembly with rosette and round nut.

Instructions for crystal trimming
STEPS 12 - 26

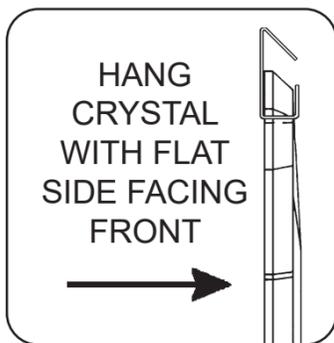

12 Hook Crystal "A" into bracket on the upper column bobèche.

13 Hook Chain "B" into every other ring on the center column bobèche.

14 Hook Crystal "C" into every other ring on the center column bobèche.

15 Hook Crystal Ball "D" onto the bottom of chandelier. Tighten setscrew with allen wrench provided.

16 Hook Crystal "E" into rings on the lower column bobèche.

17 Hook Crystal "F" into tab under bobèche on upper arm.

18 Hook Crystal "G" into inside ring on middle arm.

19 Hook Crystal "H" into middle ring on middle arm.

20 Hook Crystal "J" into center tab under bobèche on middle arm.

21 Hook Crystal "K" into inside ring on lower arm.


22 Hook Crystal "L" into middle ring on lower arm.

23 Hook Crystal "M" into outside ring on lower arm.

24 Hook Crystal "N" into center tab under bobèche on lower arm.

25 Hook Chain "O" into side tab under bobèche on lower arm. Hook other end of Chain "O" into side tab under bobèche on middle arm. NOTE: Chain "O" swags between middle and lower arms.


26 Hook Crystal "E" into brackets on upper, middle and lower arm bobèches.

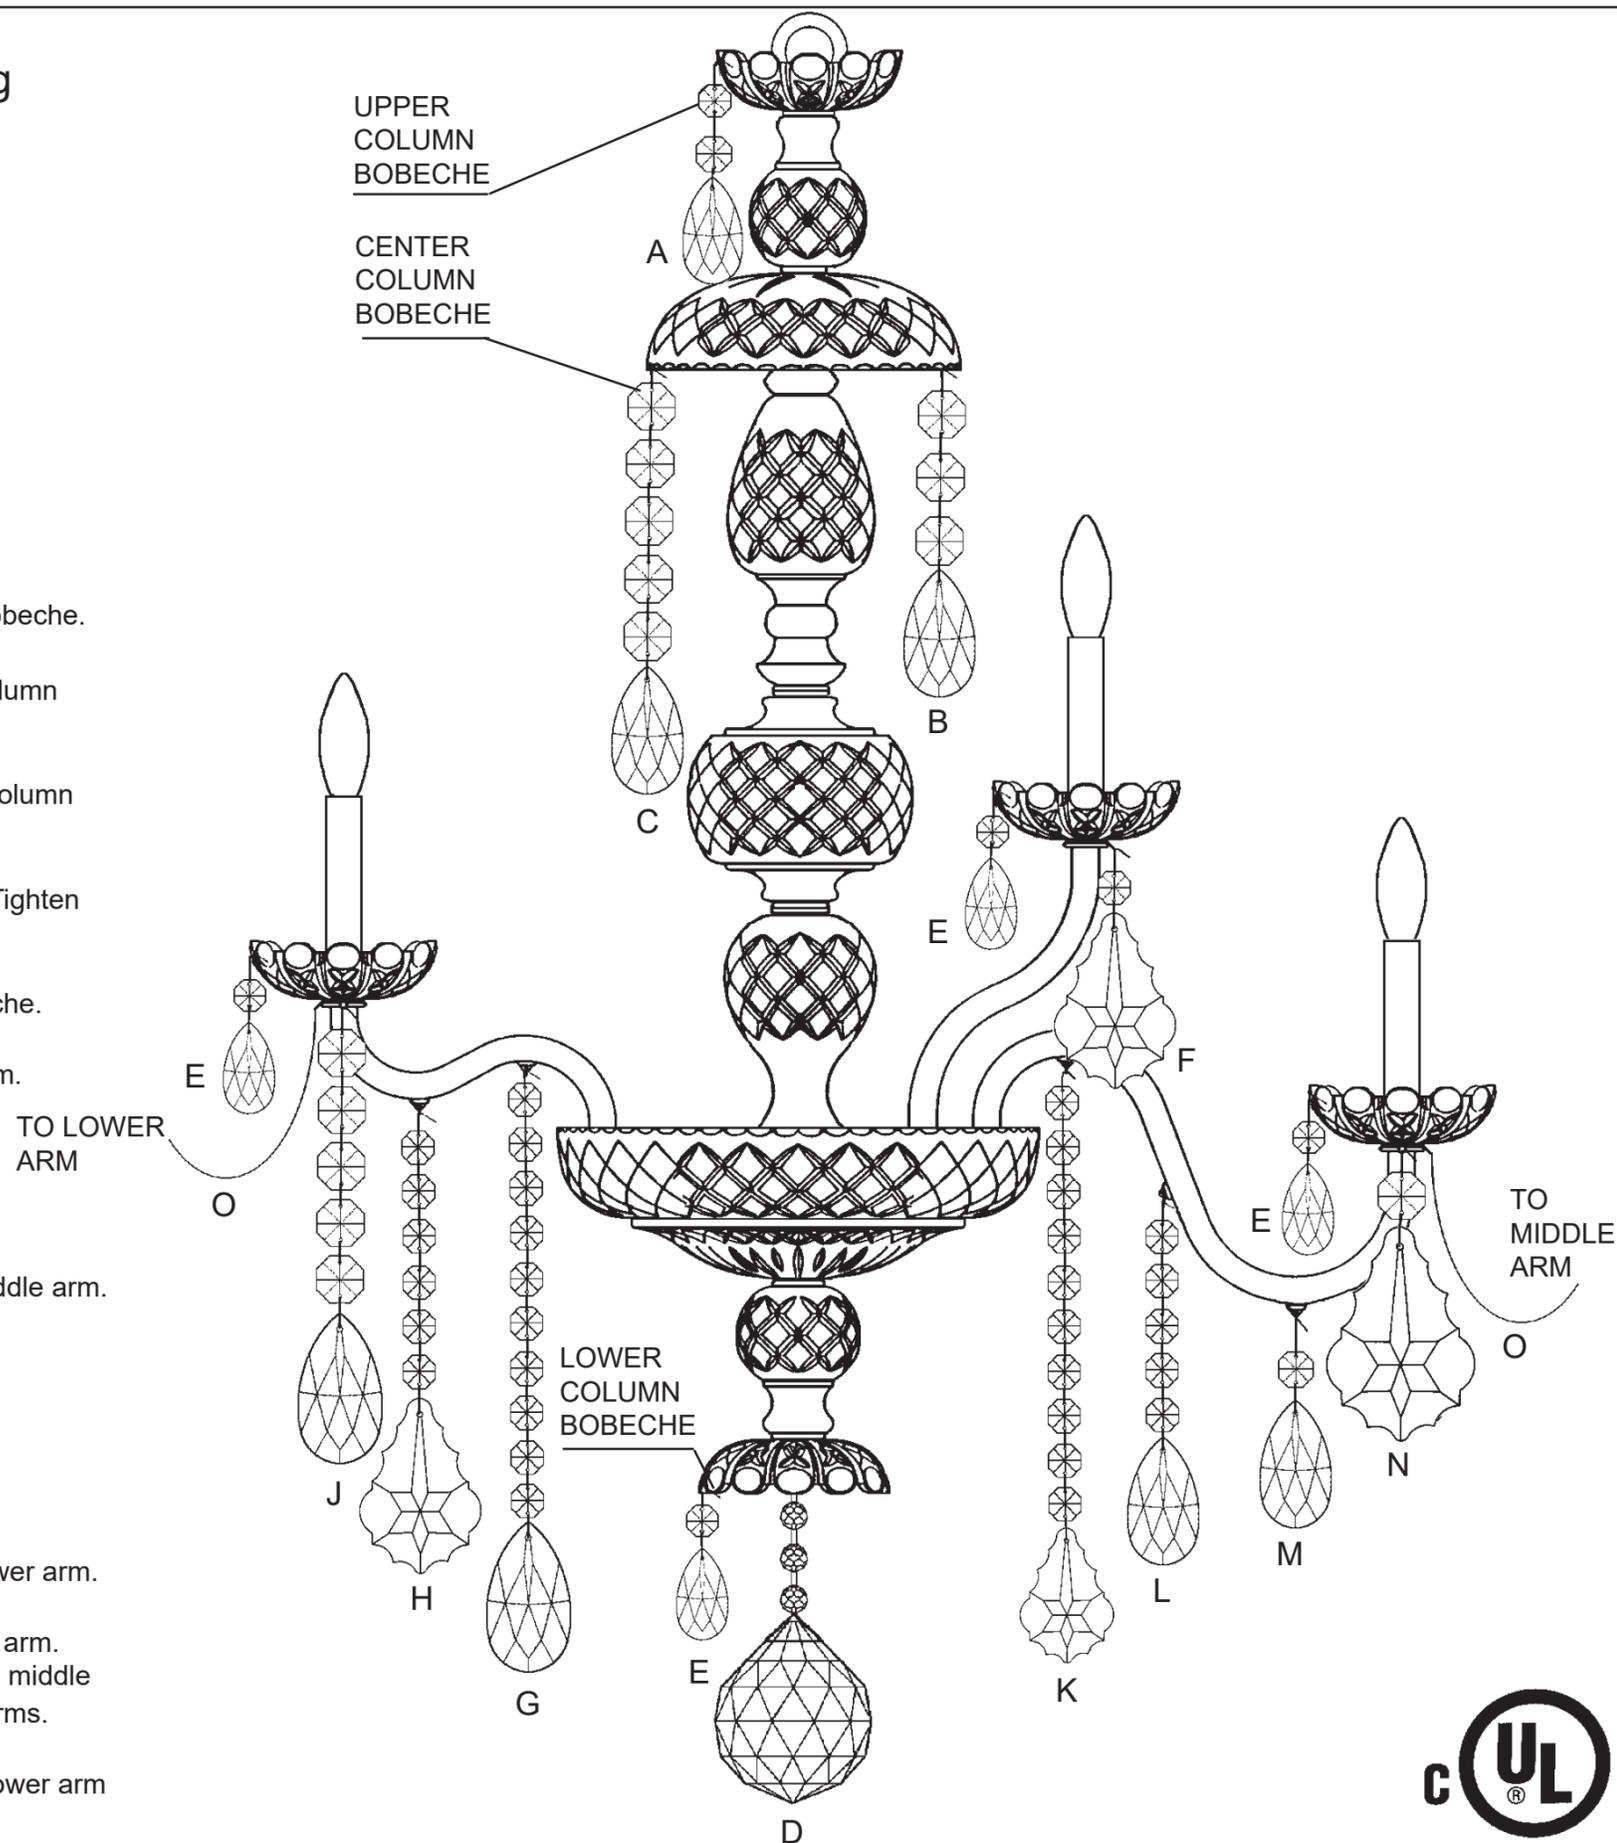



CHANDELIER 6860-____S TRIM DIAGRAM

(Finish Option)

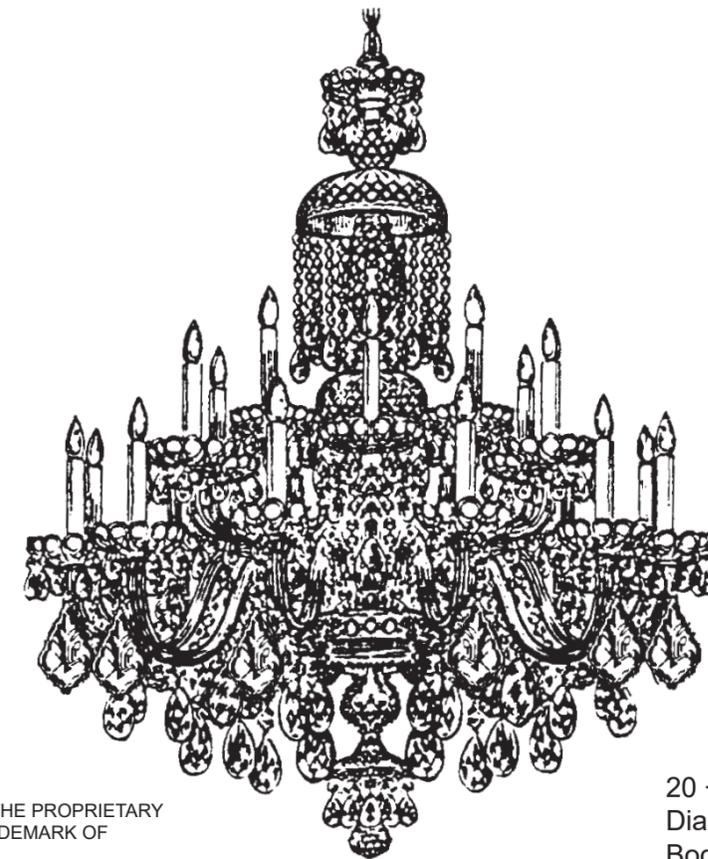

THIS DESIGN IS THE PROPRIETARY TRADE DRESS/TRADEMARK OF W SCHONBEK LLC.

20 + 5 Lights
Diameter: 35-1/2"
Body Length: 46"



CAUTION... RISK OF ELECTRICAL SHOCK. Make sure the electrical supply to the chandelier is turned off at the main fuse or circuit breaker before doing any installation. All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

HANGING WEIGHT: 62 pounds.

BULBS: (5) Tubular shaped candelabra base C7 bulbs, 7-1/2 Watt Maximum.
(20) Candle shaped candelabra base B10 bulbs, recommend 25 watts for best appearance.
60 - Watts Maximum

WARNING: This chandelier meets UL/CSA requirements. Any tampering will void UL/CSA certification.

Follow steps in exact order
Save this trim diagram for future reference


1

IMPORTANT

Please record the following information for future service.

CODE # _____ Four-digit number on outside of carton.
PACKER # _____ See crystal package label.
ORDER # _____ See crystal package label.

**Instructions for electrician
STEPS 2 - 7**

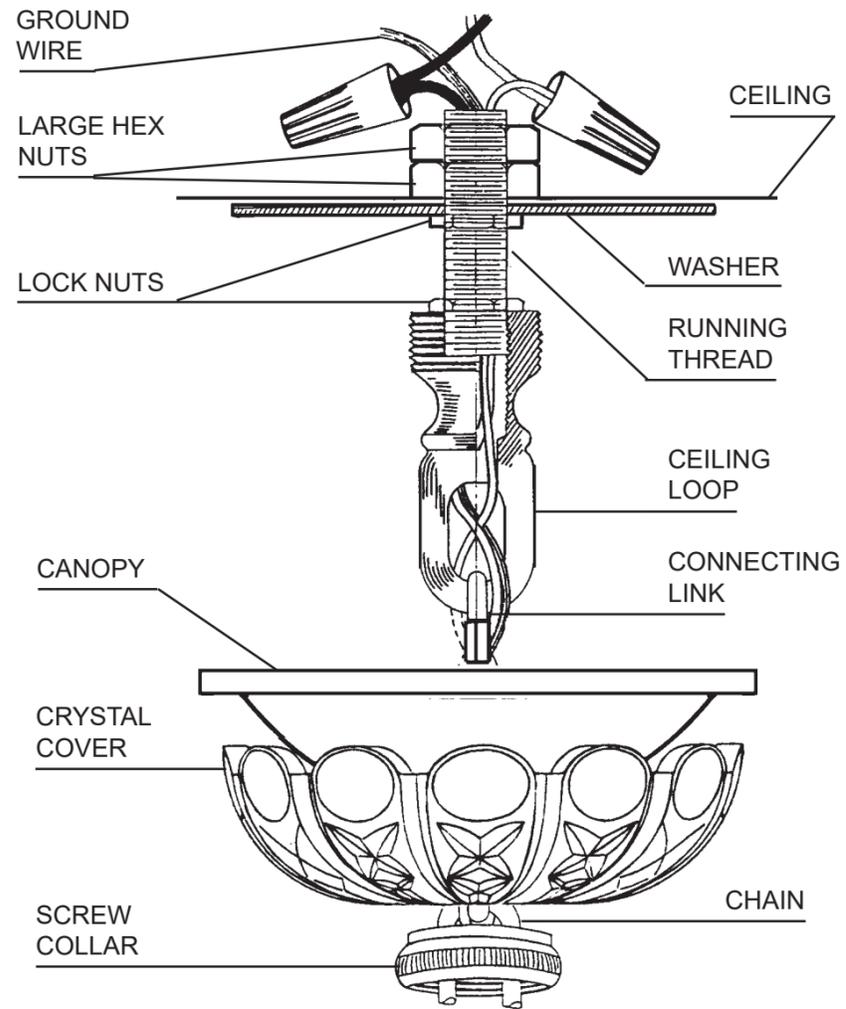

2 MAKE SURE POWER IS DISCONNECTED!!

3 Attach washer to supporting member in ceiling sufficient to support weight of fixture.

4 Slip screw collar, prismatic cover and metal canopy over chain. Determine the suspension length of the fixture and cut chain, if necessary. Use two connecting links to attach chain to chandelier loop and ceiling loop.


5 Insert stem wire through chain and ceiling loop. Connect wires. Fixture **MUST** be grounded.

6 Check distance from ceiling to loop to assure canopy assembly will be flush against ceiling.

7 Attach canopy to ceiling with screw collar.

FRAGILE:

CAUTION: Glass parts are fragile. To avoid breakage use care when assembling or cleaning.

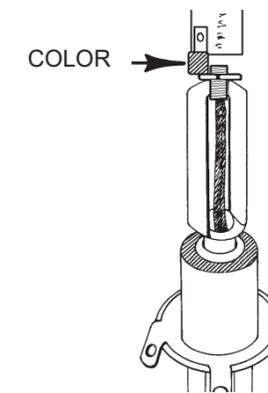

**WHEN ORDERING
REPLACEMENT ARM(S):**

- | Give arm number from trim diagram
- | Give color code from the arm itself

MAINTENANCE:

Use a soft, lint - free cloth to clean the metal frame.

UNDER NO CIRCUMSTANCES SHOULD METAL POLISHES, CLEANERS, ABRASIVES OR AEROSOL SPRAYS BE USED.


While the latest finishing techniques have been used on the metal frame, such finish cannot be unconditionally guaranteed. The main cause of deterioration, apart from certain atmospheric conditions, is improper cleaning.

To clean the crystals, polish with a damp chamois.

You are cleaning delicate jewelry... Take the greatest care.

IMPORTANT:

Do not clean crystals in a dishwasher. The finish of the metal clips and hangers will be ruined and the crystals may be damaged.

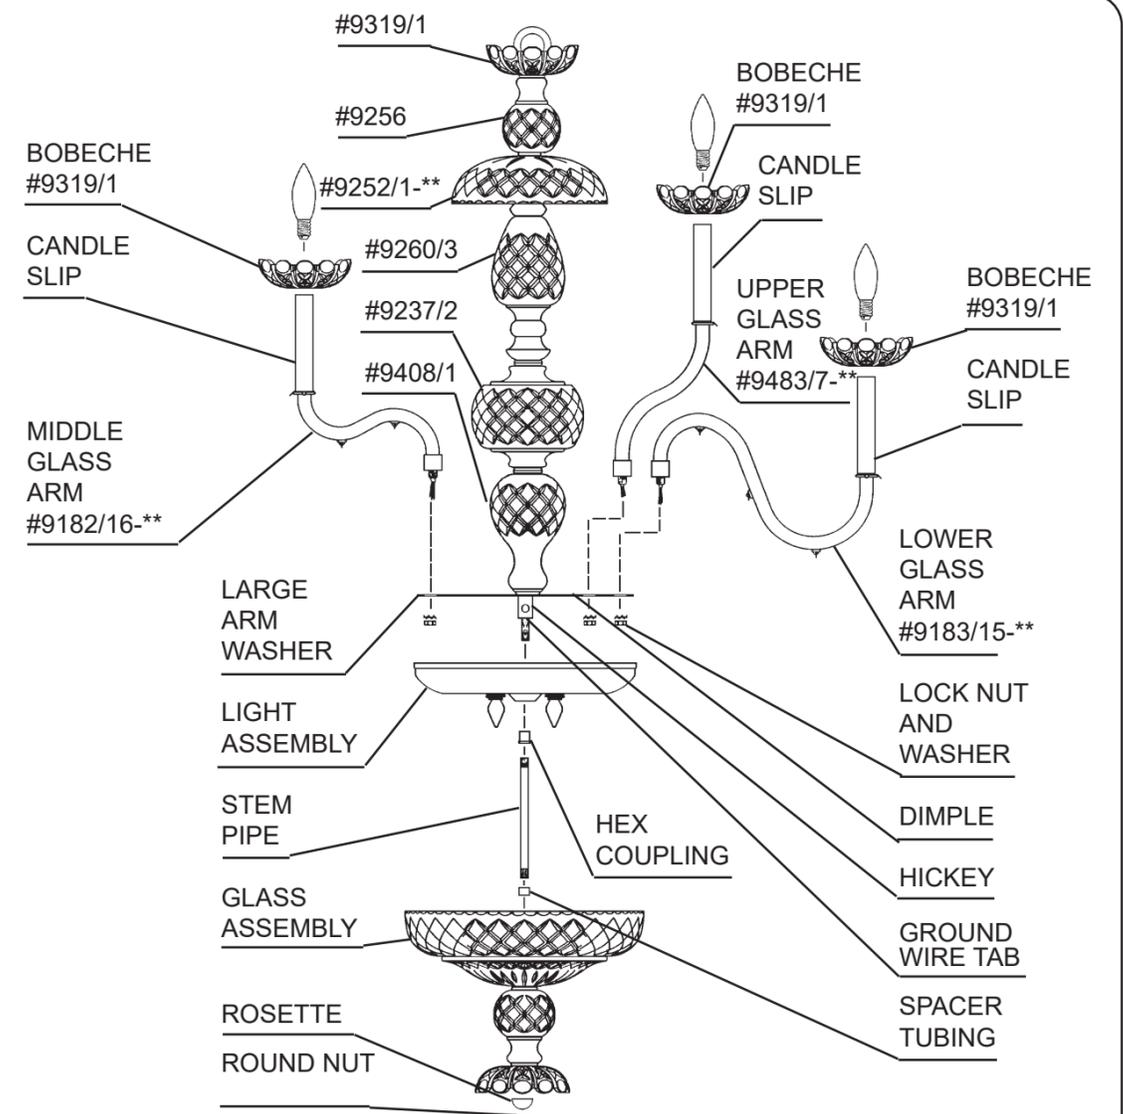

8 Install upper arms into the inside holes on the washer. **ALTERNATELY** install the middle and lower arms into the outside holes on the washer. NOTE: THE **FIRST LOWER ARM INSTALLED SHOULD LINE UP WITH A UPPER ARM.** Line up holes in arms with dimple in washer. Use lock washer and nut to secure arms in place. Unscrew nut on nipple, place ground wire tab over nipple, secure with nut.

9 Connect bare ground wire in each arm to bare ground wire in center column. Use electrical tape to secure wire nuts. **NO MORE THAN 5 - WIRES PER WIRE NUT.** Sufficient quantities of jumper wires and wire nuts are provided. Connect white arm and light assembly wires to neutral column wire (ribbed or marked is neutral). Connect black arm and light assembly wires to power wire in column. Carefully press wires as close as possible to the underside of washer.

10 Attach light assembly with washer and hex coupling. Install 5 - C7 bulbs. Install bulbs, connect power and test the fixture **BEFORE** attaching glass assembly. If any of the bulbs do **NOT** light - **DISCONNECT POWER.** Double check the wire connections.

11 Install stem pipe into hex coupling. Slide silver spacer tubing over stem pipe. Attach glass assembly with rosette and round nut.

Instructions for crystal trimming STEPS 12 - 26



- 12** Hook Crystal "A" into bracket on the upper column bobèche.
- 13** Hook Chain "B" into every other ring on the center column bobèche.
- 14** Hook Crystal "C" into every other ring on the center column bobèche.
- 15** Hook Crystal Ball "D" onto the bottom of chandelier. Tighten setscrew with allen wrench provided.
- 16** Hook Crystal "E" into rings on the lower column bobèche.
- 17** Hook Crystal "F" into tab under bobèche on upper arm.
- 18** Hook Crystal "G" into inside ring on middle arm.
- 19** Hook Crystal "H" into middle ring on middle arm.
- 20** Hook Crystal "J" into center tab under bobèche on middle arm.
- 21** Hook Crystal "K" into inside ring on lower arm.
- 22** Hook Crystal "L" into middle ring on lower arm.
- 23** Hook Crystal "M" into outside ring on lower arm.
- 24** Hook Crystal "N" into center tab under bobèche on lower arm.
- 25** Hook Chain "O" into side tab under bobèche on lower arm. Hook other end of Chain "O" into side tab under bobèche on middle arm.
NOTE: Chain "O" swags between middle and lower arms.
- 26** Hook Crystal "E" into brackets on upper, middle and lower arm bobèches.

