


# MERIDIAN

---

## LITE TRENDS

ITEM NO : M70118MBKPN  
M70118NBLPN  
M70118WHPN  
M70118MBKNB  
M70118NBLNB  
M70118WHNB

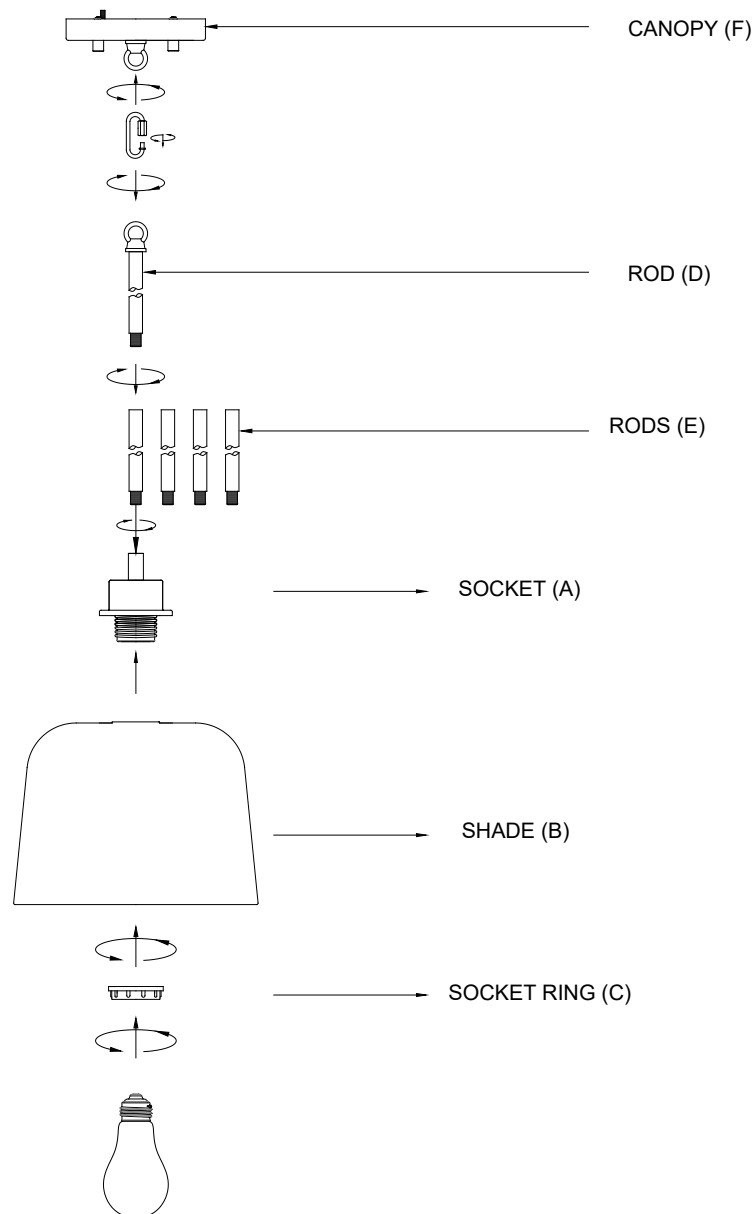

## ASSEMBLY INSTRUCTIONS

1. Carefully unpack and identify all parts referring to illustration for parts identification.
2. Turn the power to the installation point OFF.
3. Unravel the supply power and ground wires and pass them through the center holes of rods (E), rod (D) and canopy (F).
4. Place the shade (B) over the socket (A) and secure with socket ring (C).
5. Thread the bottom of rods (E) to the socket (A). Repeat process for remaining center rod (D). Hand tighten until snug.
6. Install proper bulbs (not provided) to each socket referring to the markings and / or labels on the fixture for maximum wattage.
7. Refer to the additional installation instructions included with the product for wiring and installation.
8. Restore power to the installation point and retain this sheet for future reference.