


ASSEMBLY & INSTALLATION INSTRUCTIONS

Riverbed Linear Pendant 139980

A1037

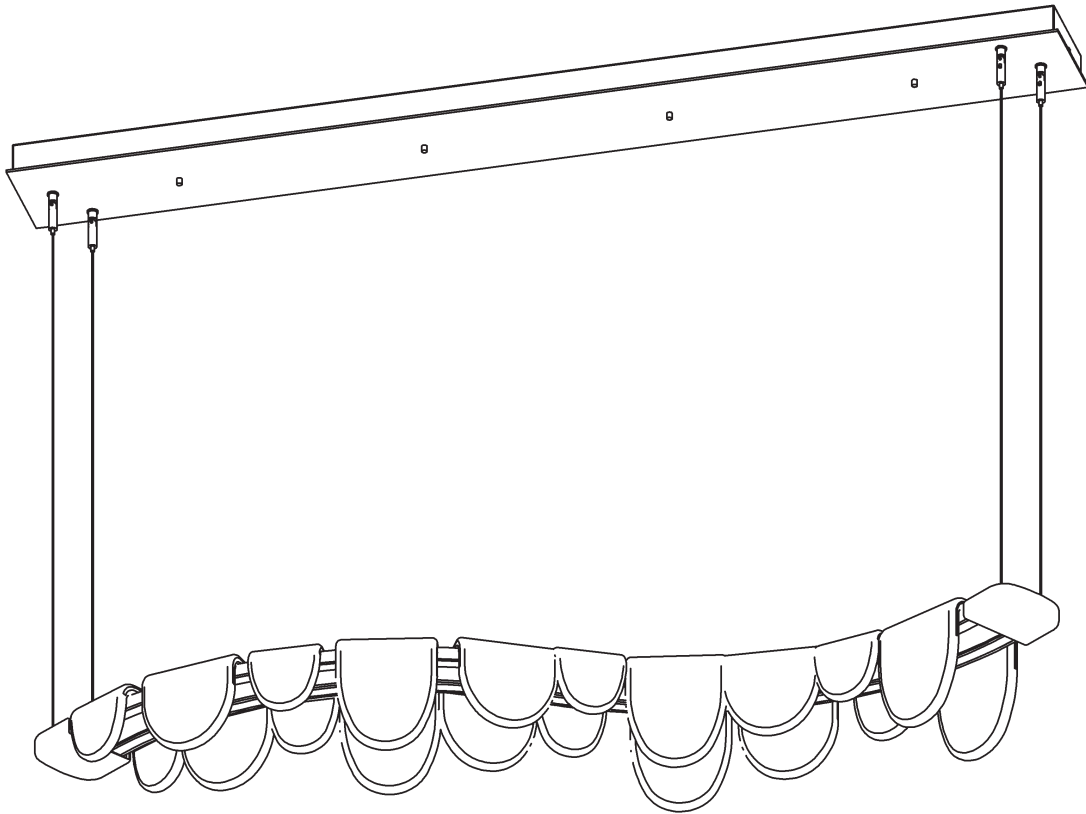

Component Parts

- A Canopy**
- B Knob (4)**
- C Gripper Plate**
- D #8 Screws (2)**
- E #10 Screws (8)**
- F Anchors (4)**
- G Gripper (4)**
- H Driver**
- I Standoff (4)**
- J Fixture**
- K Supply/Support Cables (4)**
- L Large Glass (3)**
- M Medium Glass (3)**
- N Small Glass (4)**



ASSEMBLY & INSTALLATION INSTRUCTIONS

A1037

Riverbed Linear Pendant 139980

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

Please Note: After installation extra hardware and accessories are possible; our kits are used on multiple products.

To Install Canopy (Figures 1 - on following page)

CAUTION: BE SURE POWER IS OFF AT THE MAIN BREAKER BOX PRIOR TO INSTALLATION.

1. Carefully unpack canopy (A) from the carton.
2. Remove #8 screws (D) and knobs (B) to separate canopy and gripper plate (C).
3. Using two machine screws (not provided) temporarily attach canopy (A) to the electric box using outer oval holes to orient fixture. If canopy doesn't align with electric box mounting, it's acceptable to just center canopy on box.

Note: A new electric box comes with screws. When replacing a fixture, retain the existing screws for use with the new fixture.

4. With a pencil, mark the location of mounting holes on ceiling. Remove canopy (A) from ceiling and set aside.

CAUTION: Due to weight of fixture, be sure at least two #10 screws (E) attach canopy (A) to a structural member in the ceiling. No anchors (F) will be needed in those locations. We've supplied wood screws with your fixture, however, different materials and/or construction methods may require different fasteners. If in doubt, contact a qualified electrician.

Caution: Do not rely on anchors alone to suspend fixture. Fixture must be attached to a structural member in the ceiling.

5. Drill 1/4" holes in the locations needing anchors. Place the tapered end of the anchors (F) into holes and gently tap flush to the ceiling using a light weight hammer.
6. Thread the wires in the electrical box through the hole in the canopy (A) while moving the canopy into position.
7. Reattach canopy (A) to electric box using two machine screws (not provided).
8. Using the #10 screws (E), secure canopy (A) securely to ceiling.
9. Install #10 screws (E) into remaining holes with anchors (F). Be sure not to over tighten and strip the anchor (E).

CAUTION: INSTALLER MUST ENSURE THAT THE MOUNTING METHOD IS CAPABLE OF SUPPORTING THE WEIGHT OF THE FIXTURE.

10. Follow steps on next page to complete wiring and canopy install.



HUBBARDTON FORGE.

ASSEMBLY & INSTALLATION INSTRUCTIONS


A1037

Riverbed Linear Pendant 139980

11. Holding gripper plate (C) close to canopy (A), use suitable wire connectors (not provided) to connect driver (H) wires to supply wires (white to white and black to black). Connect all ground wires (bare copper or green to bare copper or green) together.

CAUTION: MAKE SURE WIRE CONNECTORS ARE TWISTED ON SECURELY AND NO BARE WIRE IS EXPOSED.

12. Raise gripper plate (C) to canopy (A) and align holes with standoffs (I). Secure gripper plate (A) with knobs (B). Be sure no wires are pinched between the canopy (A) and the gripper plate (C).
13. Align end tabs on gripper plate (C) with holes in canopy (A). Secure ends with #8 screws (D).
14. Continue to next page to install fixture.

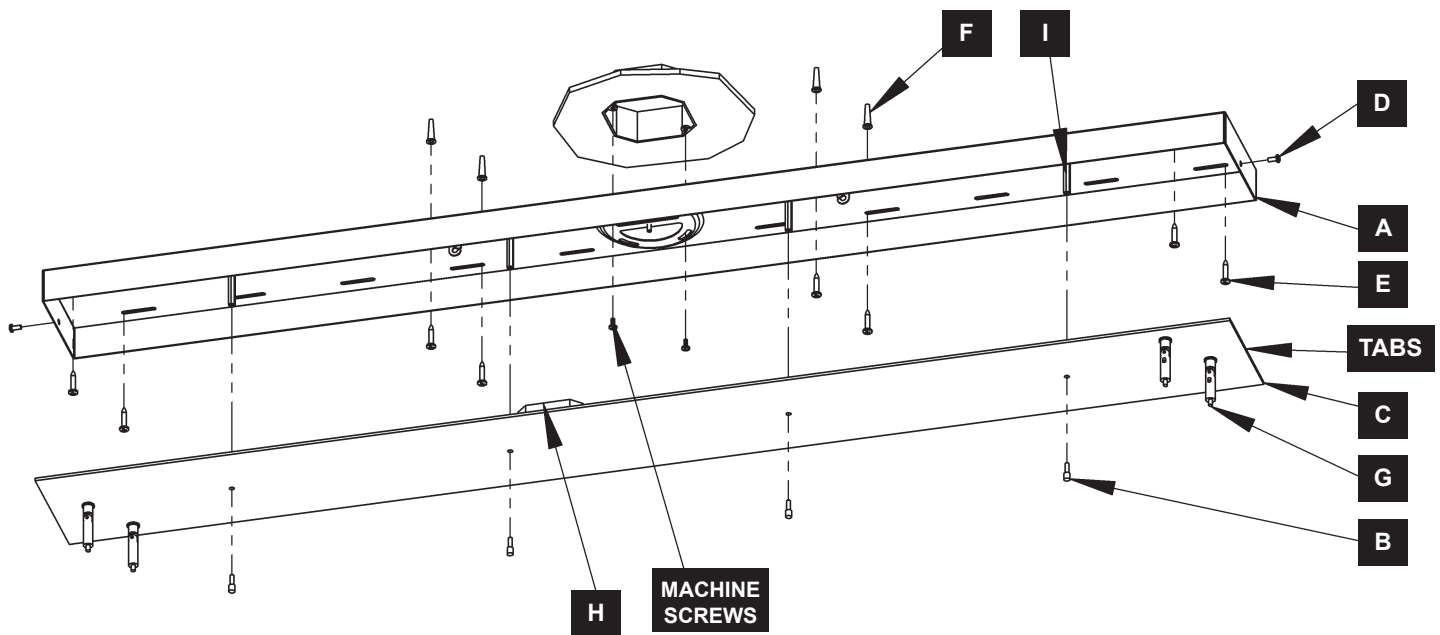

(Figure 1)



HUBBARDTON FORGE.

Riverbed Linear Pendant 139980


To Install Modules (Figure 2)

1. Carefully unpack fixture (J).
2. Locate positive (+) label on fixture. Align positive (+) side of fixture with positive (+) side of the canopy (A).
3. Push the support/supply cable (K) from the positive (+) side of fixture into positive (+) gripper (G). Push cable in far enough so that it exits side of gripper.
4. Repeat steps 2 and 3 for remaining cables (K).
5. Adjust fixture (J) to desired height by pressing in the plunger on the gripper (G) and pushing/pulling the supply/support cables (K) as necessary.
6. Once fixture (J) is at the desired height, cut the supply/support cables (K) as close to the slot in the gripper (G) as possible.

CAUTION: ONCE EXCESS CABLE IS CUT, FIXTURE CANNOT BE LOWERED.

CAUTION: FIXTURE WILL NOT LIGHT IF ANY PART OF THE SUPPORT CABLE IS TOUCHING THE FIXTURE.

7. Follow steps on next page to install glass.

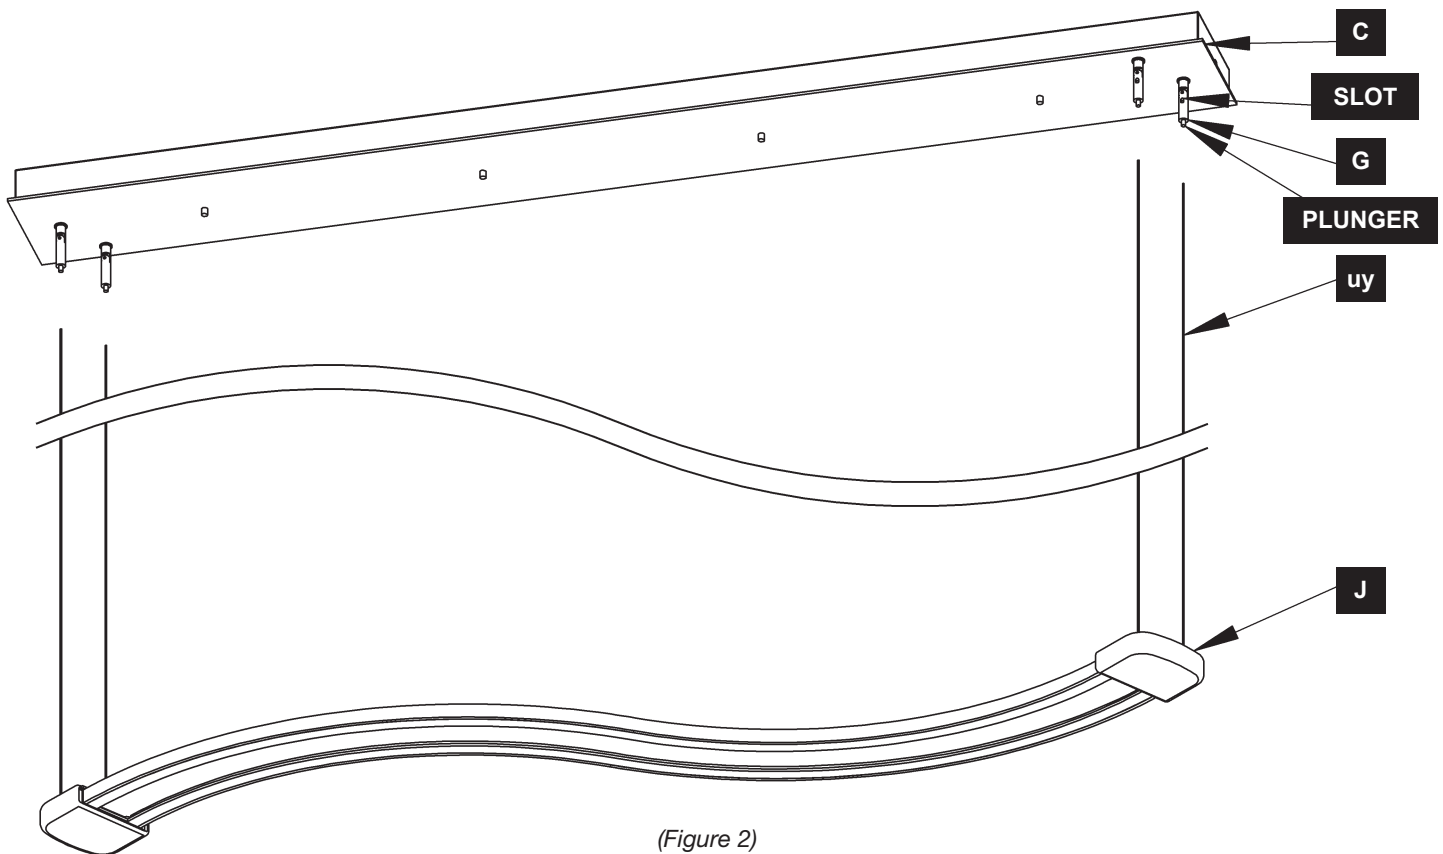


(Figure 2)

Riverbed Linear Pendant 139980

To Install Glass (Figure 3)

1. Carefully unpack all glass (L, M, N).
2. Review Figure 3 or photo on front page for Design preference glass locations.
3. Place glass (L, M, N) over fixture (J) frame. Weight of glass will hold it in place.
4. Repeat for all glass pieces.
5. Restore electricity at main breaker.

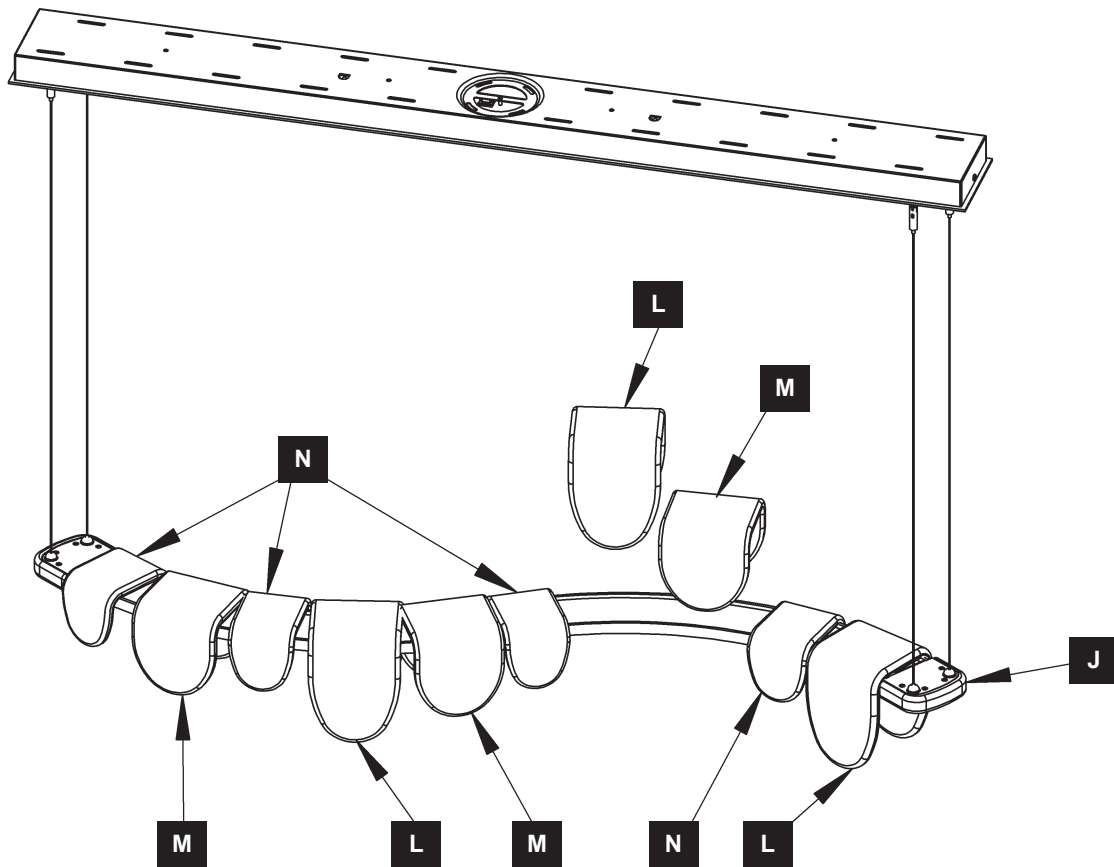

(Figure 3)

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product.
We hope you enjoy your fixture!

** Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.*