



anony

408 - 9 Davies Ave.
Toronto, ON
M4M 2A6
+1 416 994 9617
sales@anony.ca

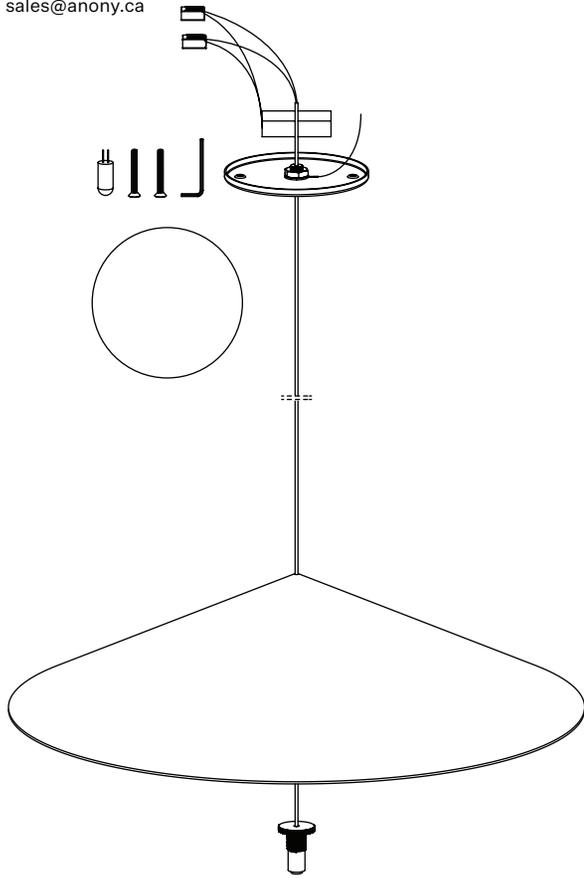

1. Disconnect power

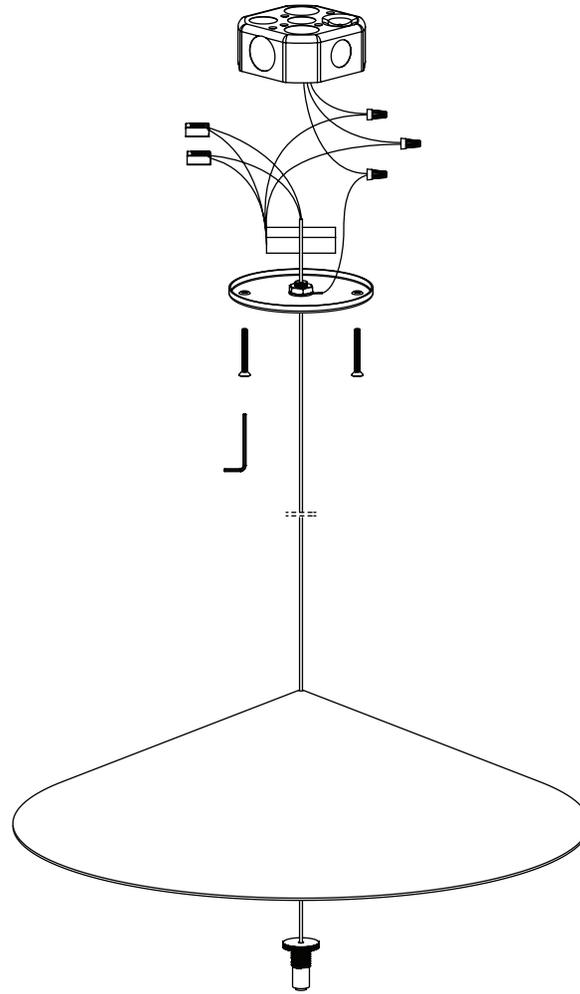


2. Connect live, neutral, & ground
3. Screw canopy plate to junction box




4. Insert G4 LED bulb

anony

408 - 9 Davies Ave.
Toronto, ON
M4M 2A6
+1 416 994 9617
sales@anony.ca

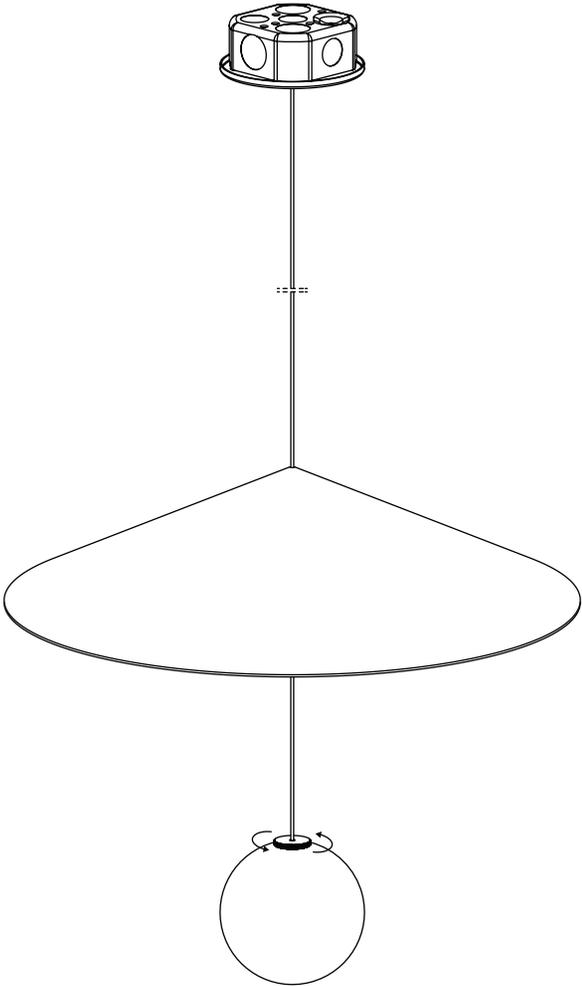

5. Screw glass

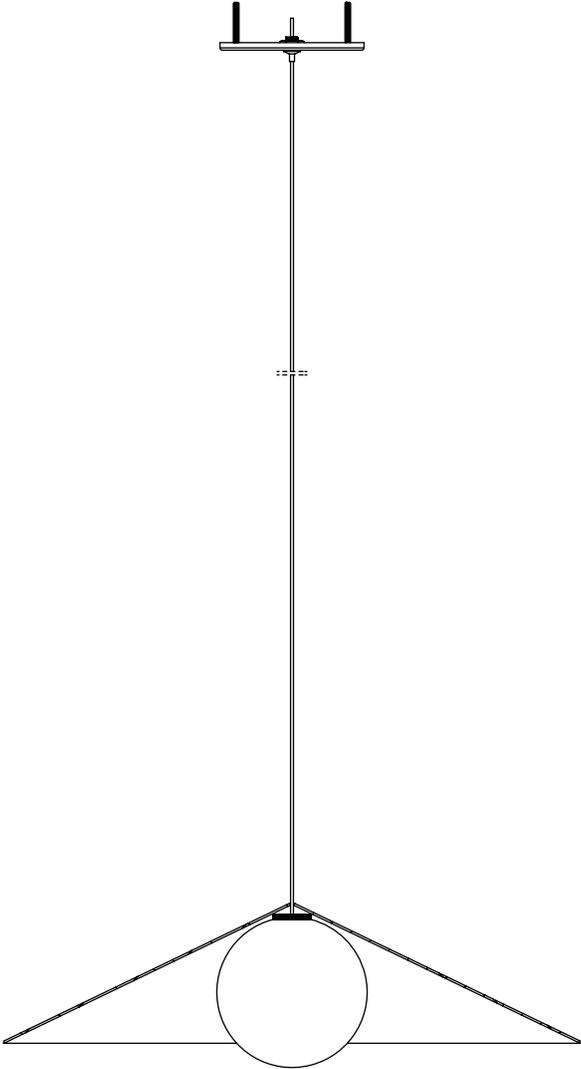

6. Place shade on glass

