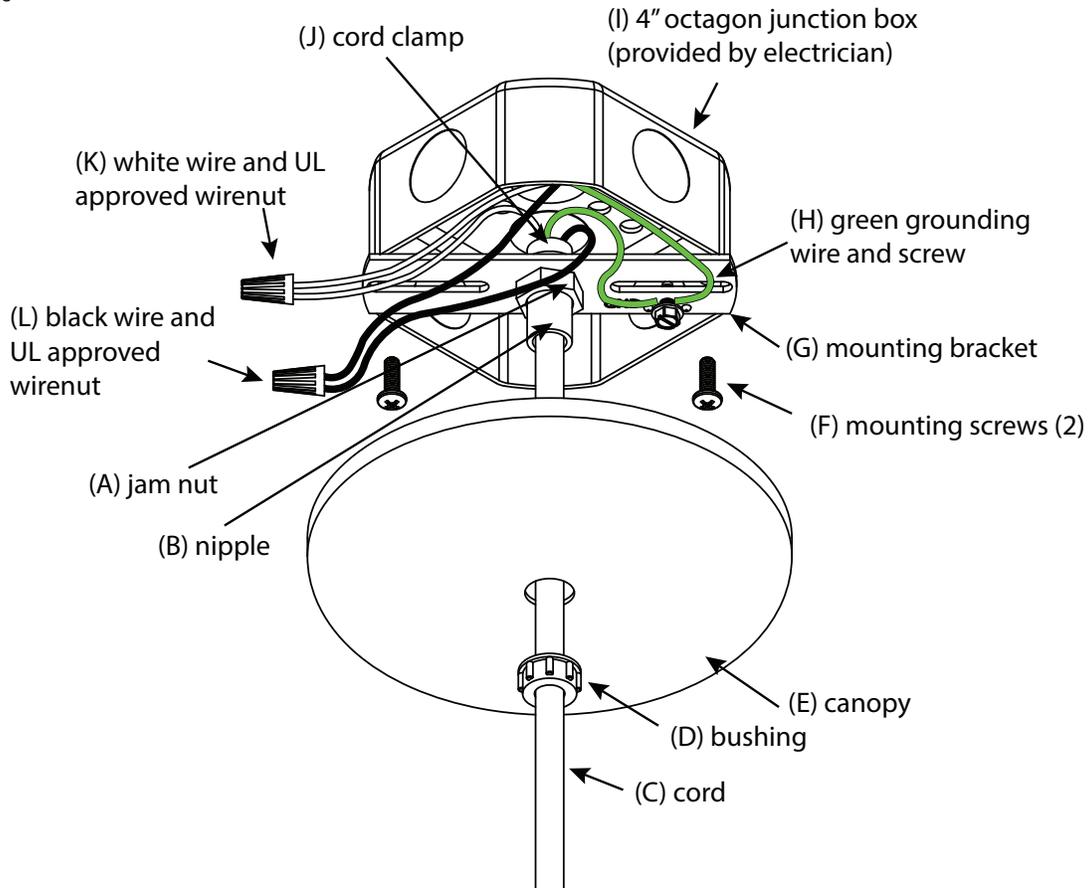# IMPORTANT

Safety, Warning and Suggestions

1. Qualified electrician is required to install this product/s.
2. Please read instructions carefully before installation.
3. All wiring and installations should meet local, state and national electrical codes.
4. Install correct lamp type and wattage.

Cord Mount

(J) cord clamp

(I) 4" octagon junction box
(provided by electrician)

(K) white wire and UL approved wirenut

(H) green grounding wire and screw

(L) black wire and UL approved wirenut

(G) mounting bracket

(F) mounting screws (2)

(A) jam nut

(B) nipple

(E) canopy

(D) bushing

(C) cord

1.   **Prior to installation, disconnect power at main electrical box.**

2.   Thread nipple (B) and jam nut (A) into mounting bracket (G) as shown, allowing approximately 3/4" below mounting bracket. Tighten jam nut.

3.   Pull cord (C) through bushing (D), canopy (E), nipple (B), jam nut (A) and mounting bracket (G) as shown.

4.   Pull cord thru mounting bracket (G) to adjust height, position cord clamp (J) with flange down, near nipple and use pliers to tightly crimp the cord clamp.

5.   Hold bracket to canopy to check fixture height. Attach mounting bracket (G) to 4" octagon junction box (I) using two mounting screws (F). Cut wires to provide 6" pigtail with junction box.

6.   Make wiring connections. Green grounding wire (H) to bare copper pigtail, black to black (L) and white to white (K) using UL approved wirenuts. Carefully push wires into junction box (I).

7.   Slip canopy (E) over nipple (B) and secure with bushing (D). Adjust nipple as needed so canopy is flush to ceiling.

050421

1-833-733-1807
montclairlightworks.com