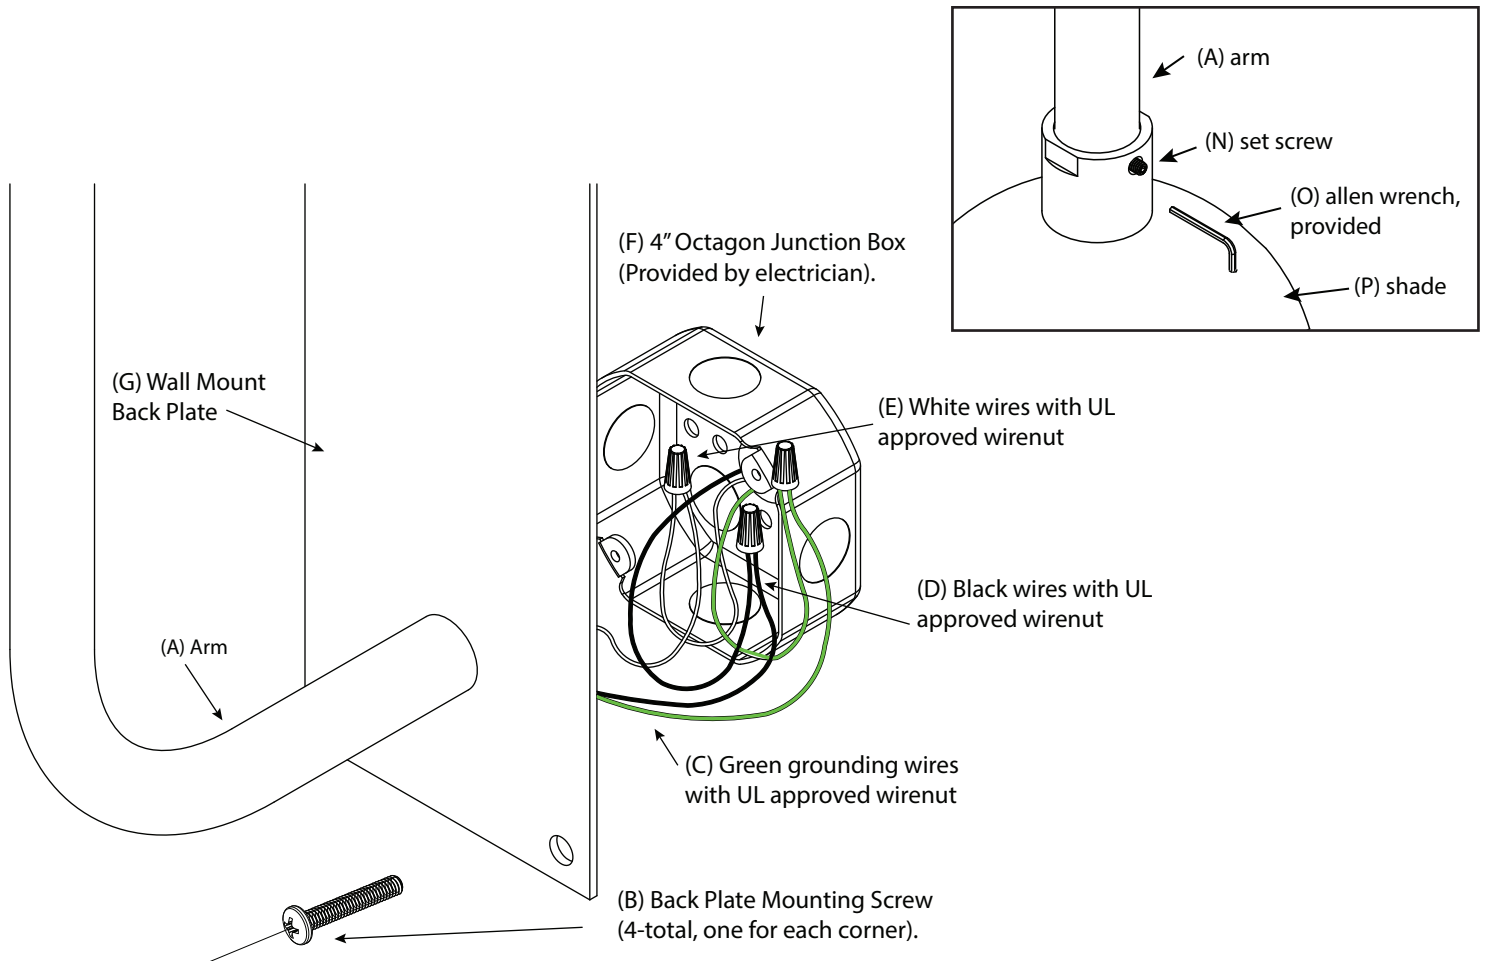# IMPORTANT

Safety, Warning and Suggestions

1. Qualified electrician is required to install this product/s.
2. Please read instructions carefully before installation.
3. All wiring and installations should meet local, state and national electrical codes.
4. Install correct lamp type and wattage.

(A) arm

(N) set screw

(O) allen wrench, provided

(P) shade

(F) 4" Octagon Junction Box (Provided by electrician).

(G) Wall Mount Back Plate

(E) White wires with UL approved wirenut

(D) Black wires with UL approved wirenut

(A) Arm

(C) Green grounding wires with UL approved wirenut

(B) Back Plate Mounting Screw (4-total, one for each corner).

1. **Prior to installation, disconnect power at main electrical box.**

2. Feed lead wires through arm (A) and slide shade (P) onto arm (A). Tighten set screw (N) using allen wrench (O) provided.

3. Connect wires (green to green (C), black to black (D) and white to white (E) using provided UL approved wirenuts. Carefully push wires into 4" Octagon Junction Box (F).

4. Apply a bead of silicon sealant, provided by others, around junction box. (F).

5. Mount Wall Mount Back Plate (G) over 4" Octagon Junction Box (F) and attach with Back Plate Mounting Screws (B) in each of the four corners of the wall mount. (If mounting to a surface other than wood, consult with your local home improvement store on the appro priate surface mounts and wall anchors for most secure installation.)

050421