


IMPORTANT

Safety, Warning and Suggestions

- Qualified electrician is required to install this product/s.
- . Please read instructions carefully before installation
- 3. All wiring and installations should meet local, state and national electrical codes. 4. Install correct lamp type and wattage

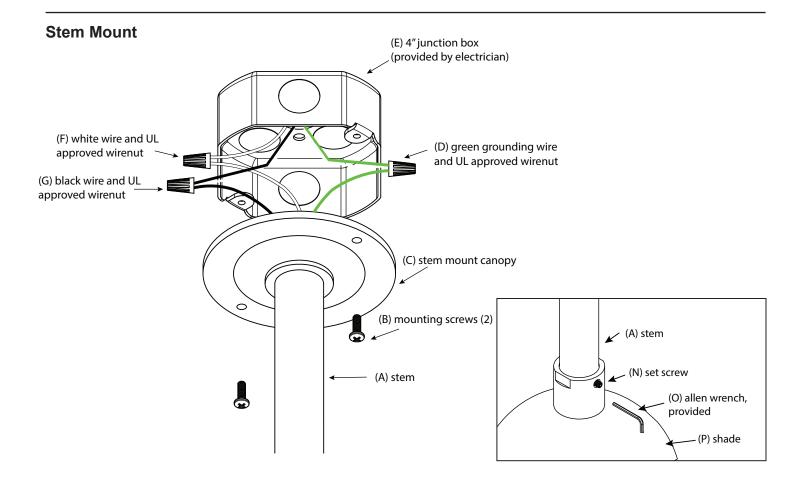

- 1. Prior to installation, disconnect power at main electrical box.
- 2. Feed lead wires through stem (A) and slide shade (P) onto stem, tighten set screw (N) using allen wrench (O) provided.
- 3. If optional decorative ceiling canopy is ordered, slide over stem (A).
- Screw stem (A) into stem mount canopy (C). 4.
- 5. Make wiring connections. Green grounding wire to green grounding wire (D), white to white (F), black to black (G) using UL approved wirenuts. Carefully push wires into 4" octagon junction box (E).
- 6. Attach stem mount canopy (C) with stem assembly to 4" octagon junction box (E) with mounting screws (B) provided.
- 7. If ordered, place optional decorative ceiling canopy over stem mount canopy (C) and tighten set screw.