


## ASSEMBLY INSTRUCTIONS

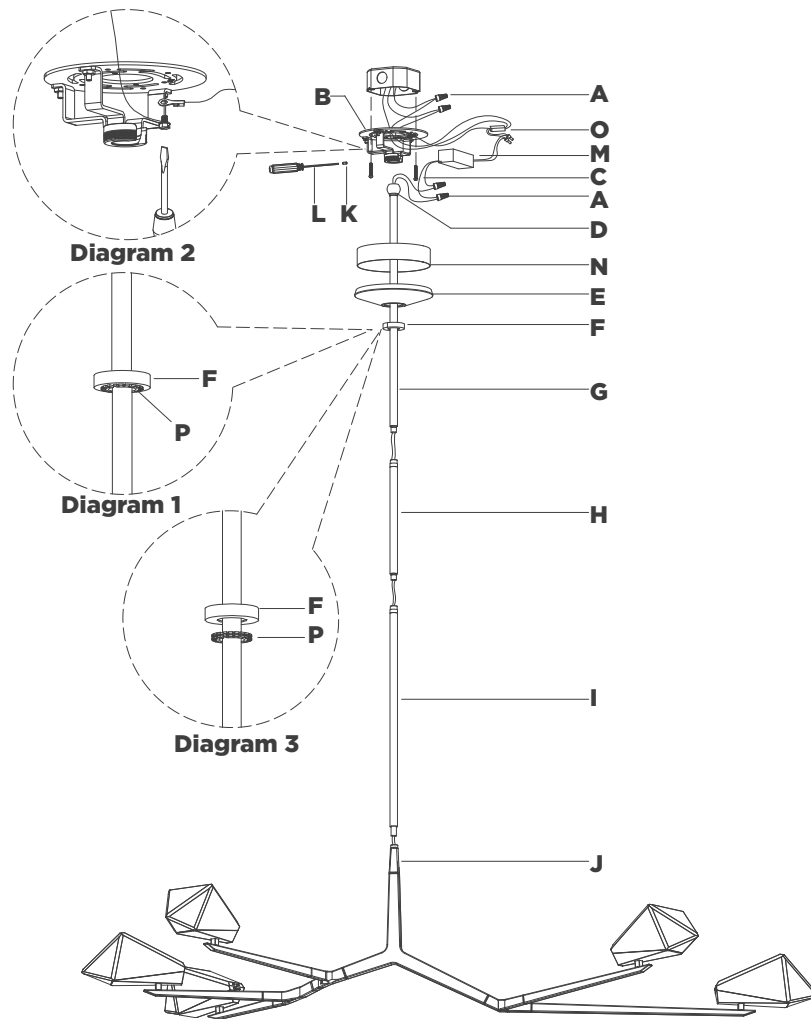

### Carraig 53" 5 Light Chandelier

Item # WF5040

#### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

#### TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver      Slotted Screwdriver      Wire Strippers  
Wire Cutters


- Carefully remove all parts from the box. Place on a clean, soft surface.  
**NOTE:** Please wear provided gloves when installing fixture to avoid leaving marks.
- Remove mounting plate **(B)** and driver housing **(N)** from canopy **(E)** by removing collar ring **(F)**.
- Install mounting plate **(B)** to the junction box and secure with mounting screws **(C)**.
- Feed electrical wires through bottom rod **(I)** and connect to fixture body **(J)**. Repeat for middle rod **(H)**, connecting to bottom rod **(I)**.
- Continue feeding wires through collar ring **(F)**, canopy **(E)**, driver housing **(N)** and top rod **(G)**.  
**NOTE:** Do not remove plastic protector **(P)** inside of collar ring **(F)** to avoid damage (see diagram 1).
- Holding fixture upright, slide collar ring **(F)**, canopy **(E)** and driver housing **(N)** down and rest on fixture body **(J)**. Then connect top rod **(G)** to middle rod **(H)**.  
**NOTE:** Slide components down slowly to avoid damage.
- Hang fixture swivel ball **(D)** to the center of mounting plate **(B)** and secure with set screw **(K)** using provided screwdriver **(L)**.

# WATERFORD

IRELAND 1783



## ASSEMBLY INSTRUCTIONS

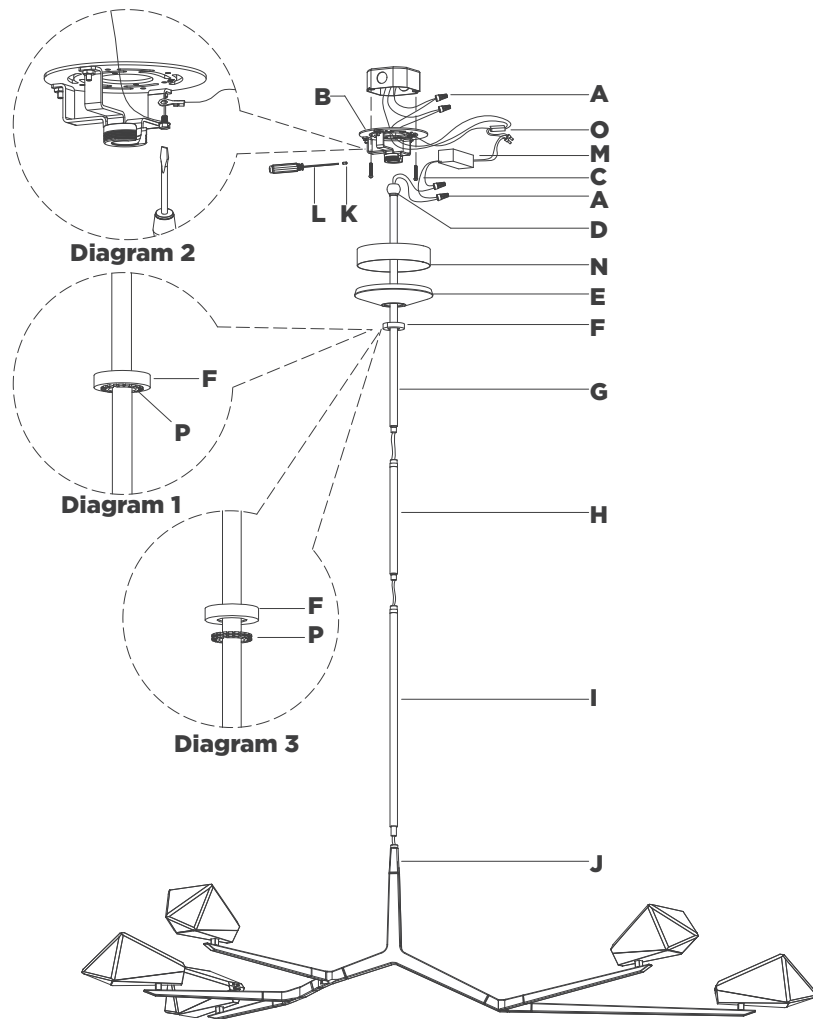

## Carraig 53" 5 Light Chandelier

Item # WF5040

### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

8. Cut excess wires, being sure to leave enough to reach the junction box. Separate wires and strip insulation on each 5/8".
9. Connect fixture neutral wire (black) to driver **(M)** output wire (black) using wire nut **(A)**.
10. Connect fixture hot wire (red) to driver **(M)** output wire (red) using wire nut **(A)**.
11. Connect supply ground wire (usually green or bare copper) and fliter **(O)** ground wire (yellow and green) around the green grounding screw (see diagram 2). Tighten.  
**NOTE:** It is imperative that the fixture is grounded.
12. Connect fliter **(O)** input neutral wire (white) to the supply neutral wire (usually white) using wire nut **(A)**.
13. Connect fliter **(O)** input hot wire (black) to the supply hot wire (usually black) using wire nut **(A)**.  
**CAUTION:** Do not reverse the hot and neutral connections.
14. Make sure all wire connections are tight, then carefully tuck into the junction box.
15. Insert driver **(M)** and fliter **(O)** into the mounting plate **(B)** bracket.
16. Remove plastic protector **(P)** from collar ring **(F)** (see diagram 3), then install driver housing **(N)** and canopy **(E)** to mounting plate **(B)** and secure with collar ring **(F)**.

**CARE INSTRUCTIONS:** Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

# WATERFORD

IRELAND 1783

