


# ASSEMBLY & INSTALLATION INSTRUCTIONS

**B529**

Passage Sconce 201080

---

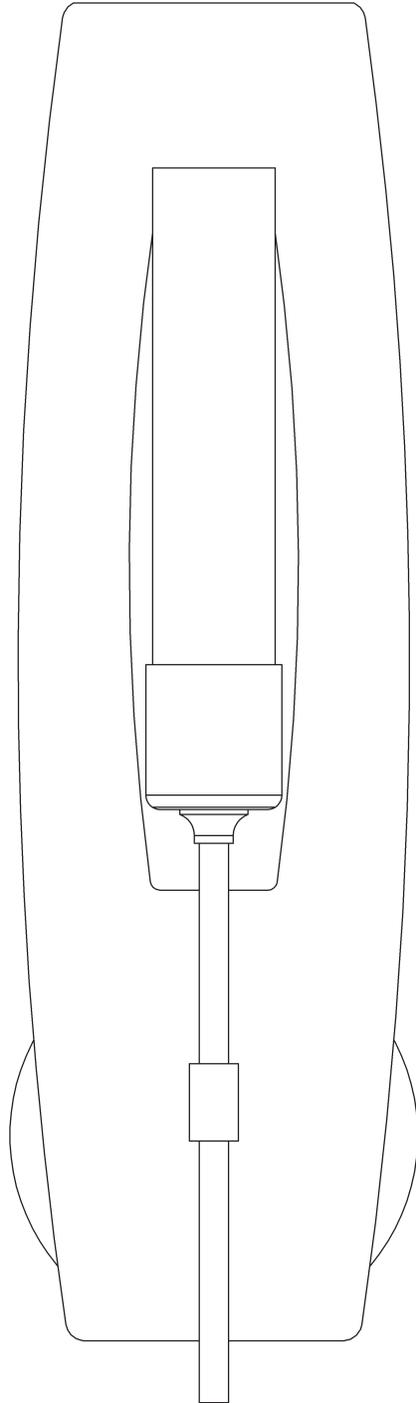

**Component Parts**

- A     Fixture**
- B     Mounting Bracket**
- C     Ground Screw**
- D     Cupped Washer**
- E     #8 Screws (3)**
- F     Socket**
- G     T Type Bulb (Not Included)**
- H     Glass**
- I     O-Ring**
- J     Socket Cup**



Passage Sconce 201080

**CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE.** We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.\*

**Caution:** Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

Please Note: After installation extra hardware and accessories are possible; our kits are used on multiple products.

## To Install Fixture (Figure 1)

**CAUTION: BE SURE POWER IS OFF AT THE MAIN BREAKER BOX PRIOR TO INSTALLATION.**

1. Carefully unpack the fixture (A) from the carton.
2. Take off rubber band and remove mounting bracket (B) from fixture (A).
3. Thread the wires in the electrical box through the hole in the mounting bracket (B) while moving the bracket into position. Place mounting bracket over electrical box and secure with two machine screws (not provided). (Refer to figure 1 for orientation)

**NOTE: A NEW ELECTRIC BOX COMES WITH SCREWS. WHEN REPLACING A FIXTURE, RETAIN THE EXISTING SCREWS FOR USE.**


4. Attach a pigtail lead to the mounting bracket (B) using the ground screw (C) and cupped washer (D) found in kit bag.
5. Hold fixture (A) close to wall. Using suitable wire connectors (not provided), connect fixture wires to supply wires (white to white and black to black). Connect all ground wires (bare copper or green to bare copper or green).

**CAUTION: MAKE SURE WIRE CONNECTORS ARE TWISTED ON SECURELY, AND NO BARE WIRE IS EXPOSED.**

6. Place fixture (A) over mounting bracket (B). Secure with #8 screws (E). Be sure no wires are pinched between fixture and wall.

**NOTE: IT IS EASIER TO START ALL 3 SCREWS AND THEN TIGHTEN TO SECURE FIXTURE.**

7. See following page to complete installation.

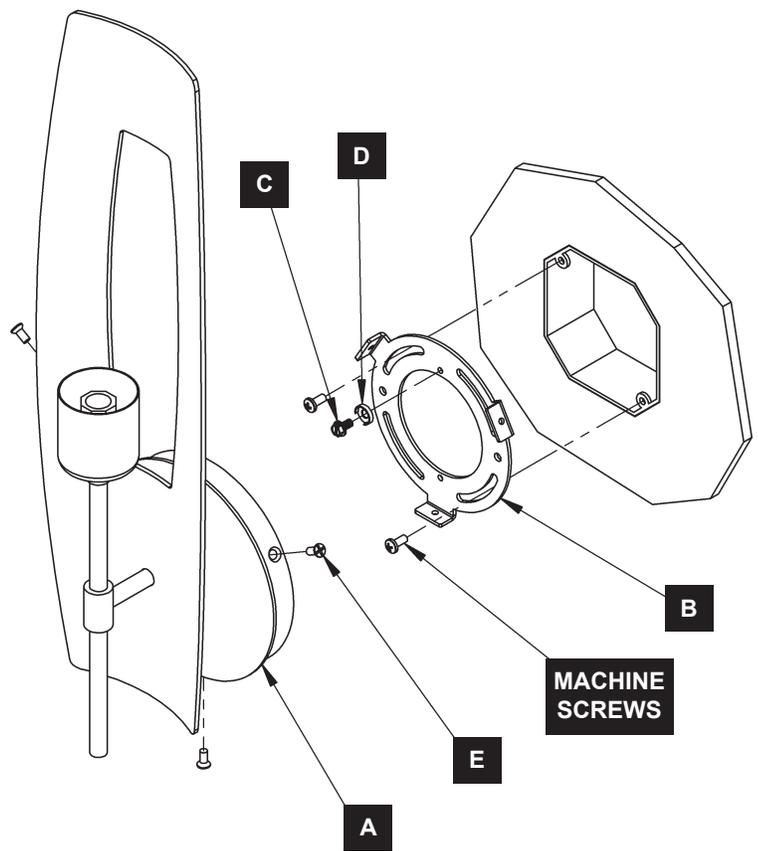

(Figure 1)

Passage Sconce 201080

## To Install Glass (Figure 2)


1. Unpack glass (H) and locate o-ring (I), found in kit bag.
2. Stretch o-ring (I) over one end of glass (H). Leave just slightly up from bottom of glass.
3. Install T type bulb (I) (not included) into socket (F) .
4. Place glass (H) over T type bulb (I) (not included).

**Note: All glass tolerance is designed for the recommended T type bulb. If a piece does not fit, verify correct bulb type and size is being used.**

5. Slide glass (H) and o-ring (I) into socket cup (J) until it hits bottom of cup.

**Note: O-rings are optional, and can either use one, two, or none depending on what's needed to help with gaps. Be sure O-rings slide into cup. It may be necessary to rotate glass or push on O-rings to allow them to slide into cup evenly.**

6. Restore electricity at main breaker.

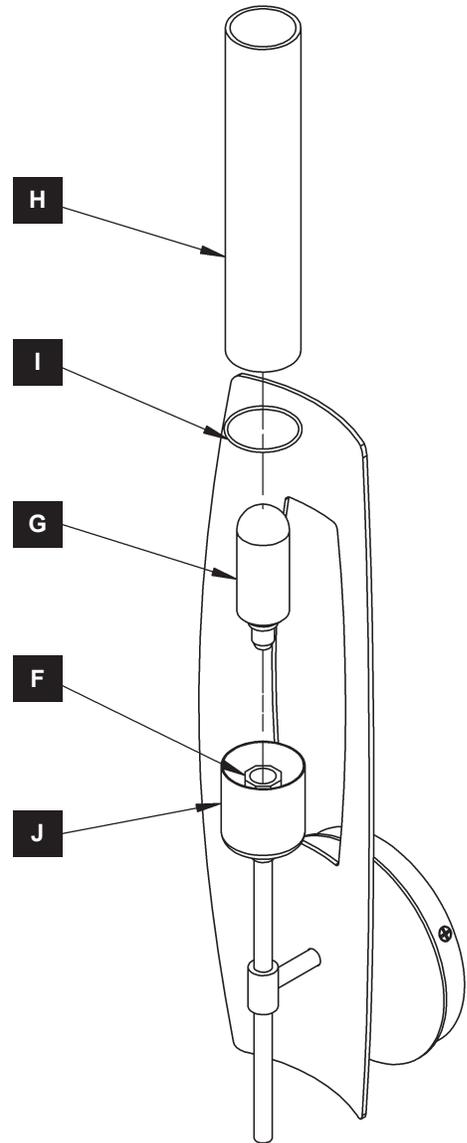

(Figure 2)

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

**\* Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.**