


ASSEMBLY & INSTALLATION INSTRUCTIONS


B527

Revere Outdoor Sconce Small 302038 & Medium 302039

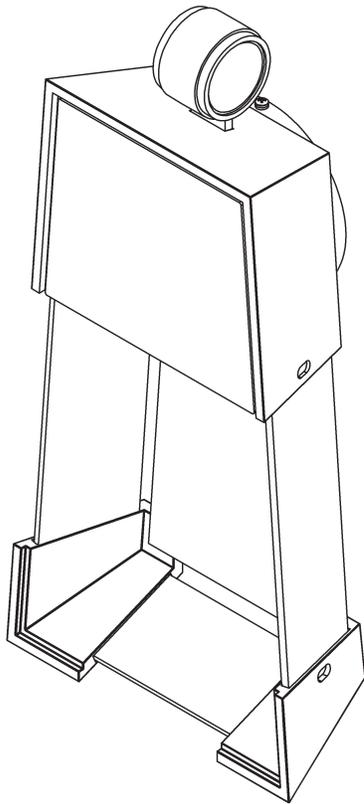

302038

Shown in Illustrations

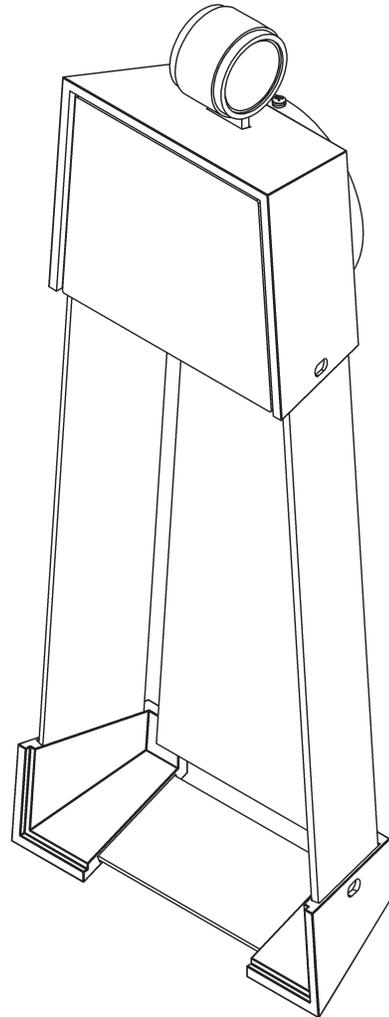

302039



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

ASSEMBLY & INSTALLATION INSTRUCTIONS

B527

Revere Outdoor Sconce Small 302038 & Medium 302039

Component Parts

- A Fixture**
- B Crossbar**
- C Ground Screw**
- D Cupped Washer**
- E #8 Screws (3)**
- F Rubber Washer (3)**
- G Caulking Lip**



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

ASSEMBLY & INSTALLATION INSTRUCTIONS

B527

Revere Outdoor Sconce Small 302038 & Medium 302039

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

Install Canopy (Figures 1 & 2 - on following page)

1. Carefully unpack the fixture (A) from the carton.
2. Using two machine screws (not provided) fasten the crossbar (B) to the electric box.

Note: A new electric box comes with screws. When replacing a fixture, retain the existing screws for use with the new fixture.

3. Hold fixture (A) close to wall. Using suitable wire connectors (not provided), connect fixture wires to supply wires (white to white and black to black). Attach a pigtail lead to the crossbar (B) using the cupped washer (D) and ground screw (C). Connect all ground wires (bare copper or green to bare copper or green).

CAUTION: MAKE SURE WIRE CONNECTORS ARE TWISTED ON SECURELY AND NO BARE WIRES ARE EXPOSED.

4. Apply a generous bead of a suitable caulking material (not provided) to caulking lip (G) on the fixture. Caulk should be applied around the entire perimeter of the back plate (Figure 2).
5. Place fixture (A) over crossbar (B). Secure with #8 screws (E) and rubber washers (F).


CAUTION: BE SURE NO WIRES ARE PINCHED BETWEEN THE WALL AND FIXTURE.

6. Install bulb (not included).
7. Restore electricity at main breaker.


ASSEMBLY & INSTALLATION INSTRUCTIONS

B527

Revere Outdoor Sconce Small 302038 & Medium 302039

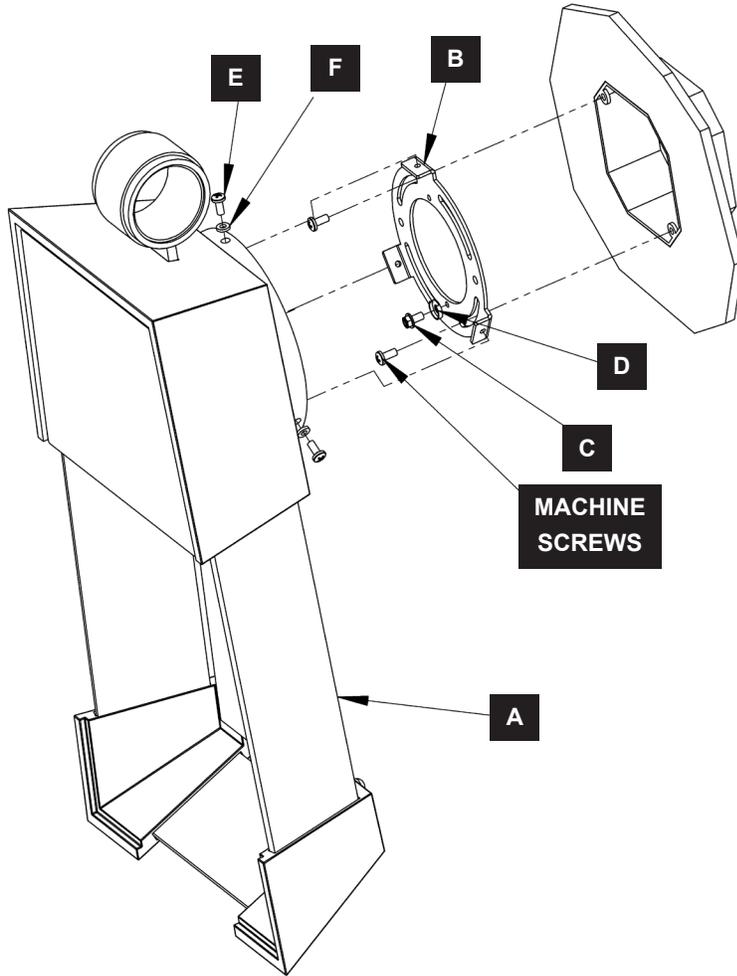

(Figure 1)

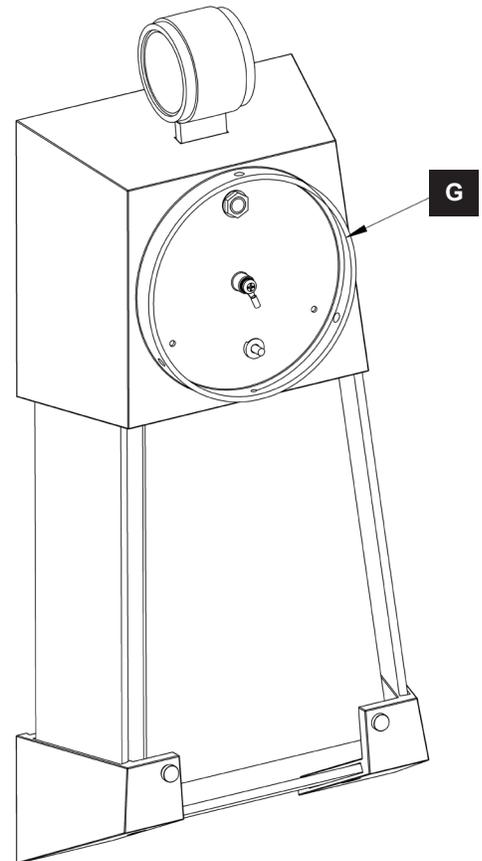

(Figure 2)

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

*** Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.**