
## Optic Oval 8-Light Pendant 131085

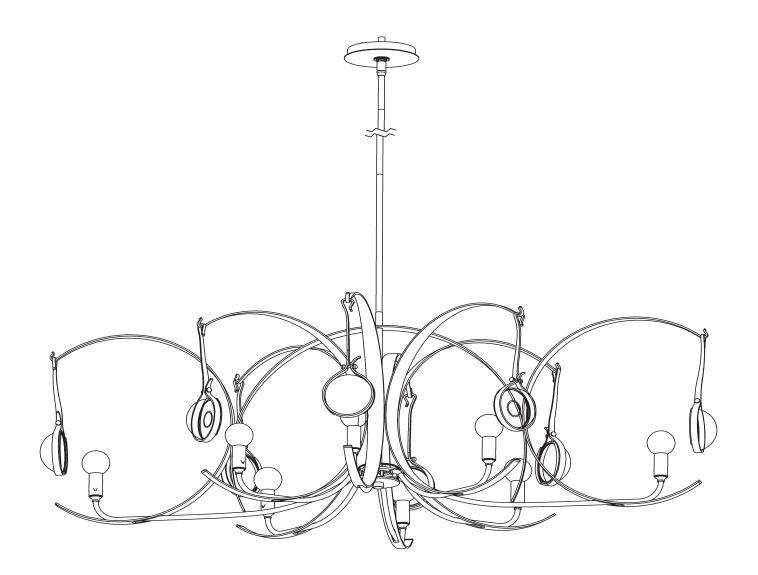





MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

### **Component Parts**

- **A** Fixture
- **B** Crossbar
- C Jam Nut
- **D** Threaded Nipple
- E Ground Screw
- F Canopy Ring
- G Canopy
- **H** Swivel
- L 3" Fixture Pipe (1)
- J 6" Fixture Pipe (1)
- K 12" Fixture Pipe (3)
- L Stem Nipple (4)
- M Bulb (8) Not Included
- N Socket (8)
- O Glass (8)
- P Loop (8)
- Q Hook (8)

996

1

# ASSEMBLY & INSTALLATION INSTRUCTIONS



#### Optic Oval 8-Light Pendant 131085

**CAUTION:** FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATHAND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.\*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

Please Note: After installation extra hardware and accessories are possible due to our kits are used on multiple products and options.

#### To Install Fixture (Figure 1) on following page

CAUTION: BE SURE POWER IS OFF AT THE MAIN BREAKER BOX PRIOR TO INSTALLATION.

- 1. Carefully unpack fixture (A) from the carton.
- 2. Thread jam nut (C) and crossbar (B) onto threaded nipple (D) with ground screw (E) facing towards swivel (H); leave both parts loose.
- 3. Using two machine screws (not provided), temporarily fasten crossbar (B) to the electric box.

**NOTE:** A NEW ELECTRIC BOX COMES WITH SCREWS. WHEN REPLACING A FIXTURE, RETAIN THE EXISTING SCREWS FOR USE WITH THE NEW FIXTURE.

- Adjust the length of threaded nipple (D) in crossbar (B) so that canopy ring (F) will hold canopy (G) against the ceiling with no threads showing for best appearance. When the correct adjustment is established, tighten jam nut (C) against crossbar (B) to secure the adjustment.
- 5. Remove crossbar (B) from the electrical box and proceed with the assembly instructions.
- 6. Locate fixture pipes (I, J, K), fixture (A) and stem nipples (L). Stem nipples (L) can be found in the kit bag.
- 7. Provided are multiple fixture pipes in three different lengths. Choose the combination that will achieve the overall height desired. Refer to the table below to determine the pipes required to reach the desired overall height. Once you have determined the components necessary, feed the wires that exit fixture (A) through the individual components and thread pipes and nipples together. Wires will slip easier through loose components than through pipes and nipples that are pre-assembled. Once wires are run, apply thread locking compound to all the connection points and assemble the pipes and nipples.

		Overall Fixture Height														
		22.8	25.8	28.8	31.8	34.8	37.8	40.8	43.8	46.8	49.8	52.8	<mark>55.</mark> 8	<mark>58.8</mark>	61.8	64.8
# of Pipes Required	3" Pipe (I)	1		1		1		1		1		1		1		1
	6" Pipe (J)		1	1			1	1			1	1			1	1
	12" Pipe (K)				1	1	1	1	2	2	2	2	3	3	3	3

**NOTE:** APPLICATION OF THE THREAD LOCKING COMPOUND IS NECESSARY TO PREVENT THE PIPE FROM LOOSENING DURING REGULAR MAINTENANCE AND CLEANING OF THE FIXTURE. BE CERTAIN TO APPLY THE COMPOUND.

- 8. Carefully slide canopy ring (F) and canopy (G) over wires and fixture pipes (I, J, K) until they rest on fixture (A).
- 9. Slip wires from the fixture (A) through assembled swivel (H) and threaded nipple (D).

10. Instructions continued on following page.



## ASSEMBLY & INSTALLATION INSTRUCTIONS

A966

#### Optic Oval 8-Light Pendant 131085


- 11. Using two machine screws (not provided), fasten crossbar (B) to the electric box.
- 12. Using suitable wire connectors (not provided) connect fixture wires to supply (white/ribbed to white and black/smooth to black).
- Attach a pigtail lead to crossbar ground screw (E). Holding canopy (G) close, connect all ground wires (bare copper or green to bare copper or green).

CAUTION: MAKE SURE WIRE CONNECTORS ARE TWISTED ON SECURELY, AND NO BARE WIRE IS EXPOSED.

14. Slide canopy (G) against ceiling, and secure with canopy ring (F).

CAUTION: BE SURE NO WIRES ARE PINCHED BETWEEN CANOPY (G) AND THE CEILING.

15. Refer to instructions on next page to complete installation.

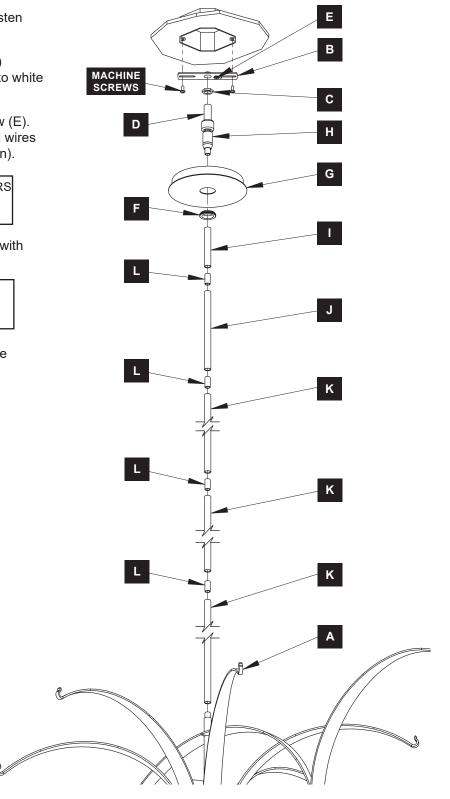

(Figure 1)



MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

# ASSEMBLY & INSTALLATION INSTRUCTIONS


#### Optic Oval 8-Light Pendant 131085

#### Complete Install (Figure 2)

- 1. Install bulb (M) into socket (N).
- 2. Locate glass (O). Glass (O) is shipped installed in loop (P)
- 3. Place loop (P) over hook (Q) and allow glass (O) to hang in front of bulb (M) as shown in Figure 2.

NOTE: Loop is offset to allow glass to hang in the correct location.

- 4. Repeat for remaining bulbs (M) and glass (O).
- 5. Restore electricity at main breaker.

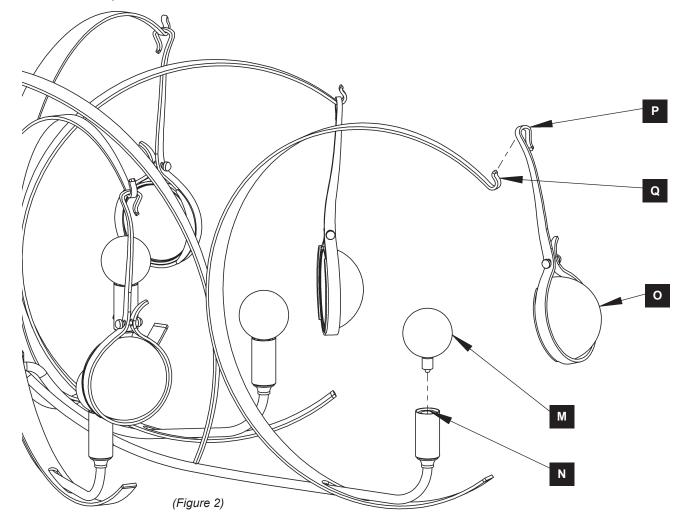

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

# \* Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.

HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM 96