


STASSI SMALL AND MEDIUM CHANDELIERS

AC1163; AC1174




General Product Information

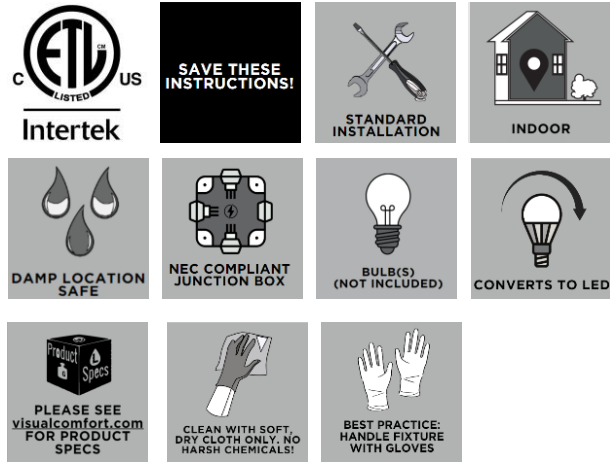


Tools Required



Safety Information

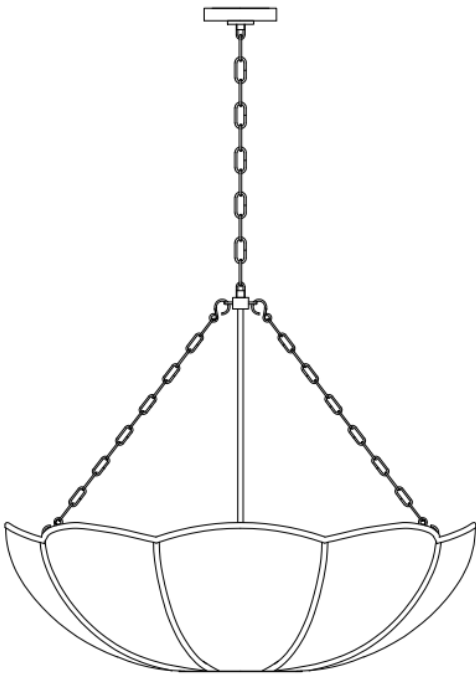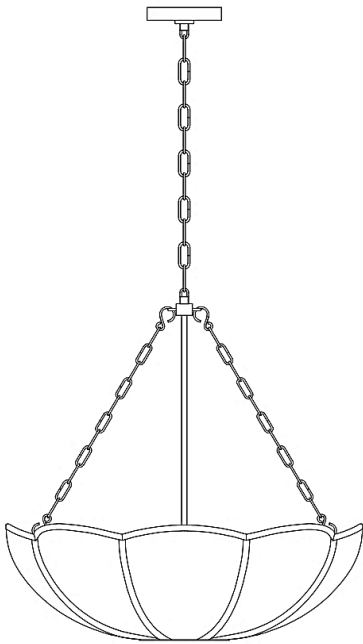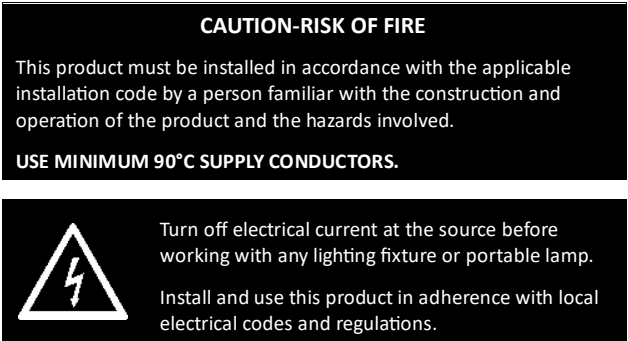

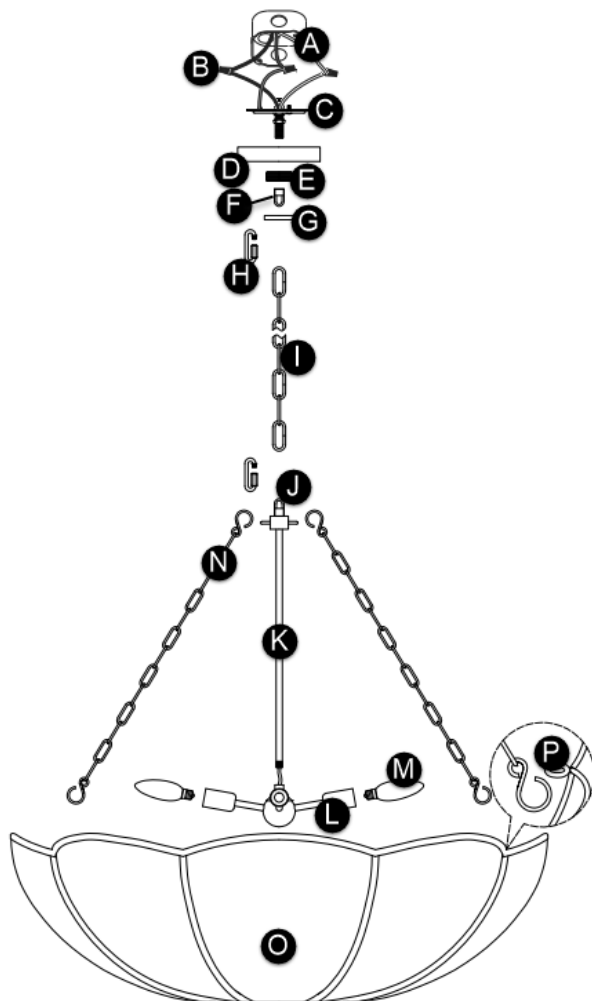

FIXTURE PARTS

- A. Junction Box
- B. Wire Nut Connections
- C. Mounting Bar
- D. Canopy
- E. Screw Collar
- F. Canopy Loop
- G. Collar Nut
- H. Quick Links
- I. Chain
- J. Fixture Loop
- K. Bottom Stem
- L. Sockets
- M. Bulbs (Not Included)
- N. Hang Chains
- O. Shade
- P. S-Hooks

INSTRUCTIONS

I. Preparing the Fixture

1. Screw the collar screw and canopy loop onto the threaded pipe of the mounting bar. Install the mounting bar to the junction box using the mounting screws.
2. Feed the fixture wires through the bottom stem and install the bottom stem on the socket assembly.
3. Determine desired overall length, and amount of chain needed. Shorten the chain using chain pliers. (Keep extra chain)
4. Attach the chain to the fixture loop using a quick link. Secure the quick link.
5. Remove the collar nut and slide the collar nut and canopy down the chain carefully.
6. Attach the other end of the chain to the canopy loop with the quick link. Secure the quick link.
7. Thread fixture wire and ground wire through the chain. NOTE: When you reach the canopy loop, ensure there is no tension on the wires. Cut excess wires, being sure to leave about 12" to reach the junction box.

II. Wiring the Fixture

1. Safety first! Locate the circuit breaker and switch it off to cut off the power supply to the relevant circuits to ensure there's no electricity running through the wiring.
2. In accordance with local electrical codes, connect the fixture ground wire (bare copper or silver wire) to suitable ground. This may be a green ground screw on the mounting plate or a house wire (green or bare copper wire without insulation).
3. Twist the bare ends of the following pairs of wires together using a wire nut to secure a connection:
 - a) Hot fixture wire (black/smooth) and hot power line wire from the junction box (hot to hot)
 - b) Neutral fixture wire (white/textured, ribbed) and neutral power line wire from the junction box (neutral to neutral)
4. Carefully tuck all wires into the junction box.

III. Installing the Fixture

1. Secure the canopy onto the mounting bar by screwing the collar nut onto the screw collar.
2. Screw the bulbs into the sockets. Refer to the label on the socket for max wattage information.
3. Attach the s-hooks on one end of the hang chains onto the loops on the top of the bottom stem, then attach the s-hooks on the other end of the hang chains onto the shade assembly to complete the installation.