

VISUAL COMFORT & CO.


STUDIO COLLECTION

ELSAY SMALL SCONCE

DJW1111

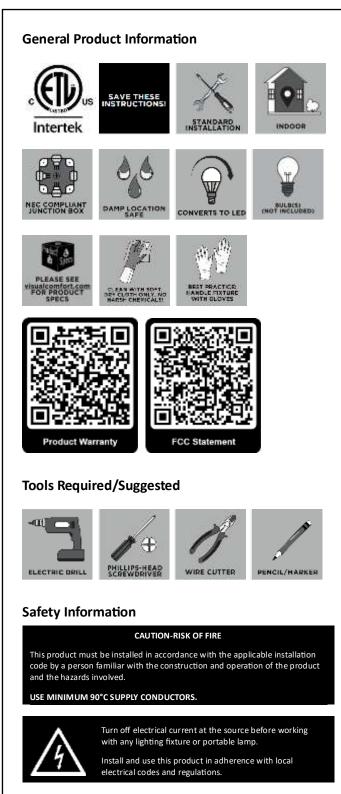

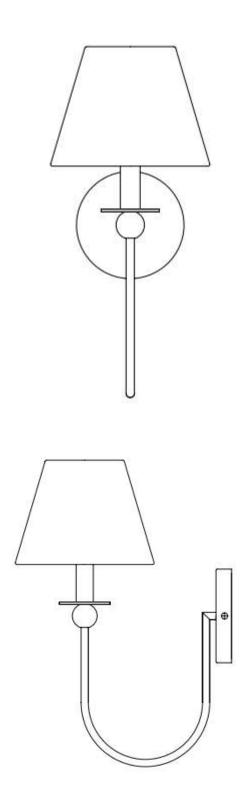

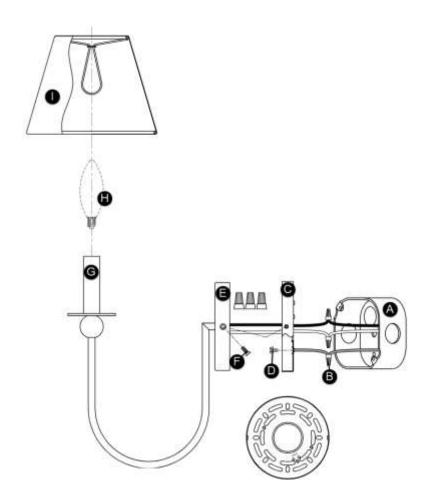

FIXTURE PARTS

- A. Junction box
- B. Wire Nut Connections
- C. Mounting Plate
- D. Mounting Screws
- E. Fixture Base
- F. Fixture Screws
- G. Socket/Socket Assembly
- H. Candelabra Torpedo Bulb (Not Included)
- I. Shade

INSTRUCTIONS

I. Preparing the Fixture

- 1. Separate the mounting plate from bracket from the fixture base.
- 2. Secure the mounting plate to the junction box.

II. Wiring the Fixture

- 1. Safety first! Locate the circuit breaker and switch it off to cut off the power supply to the relevant circuits to ensure there's no electricity running through the wiring.
- 2. In accordance with local electrical codes, connect the fixture ground wire (bare copper or silver wire) to suitable ground. This may be a green ground screw on the mounting plate or a house wire (green or bare copper wire without insulation).
- 3. Twist the bare ends of the following pairs of wires together using a wire nut to secure a connection:
 - a) Hot fixture wire to hot power line wire
 - b) Neutral fixture wire to neutral power line wire
- 4. Carefully tuck all the wires and wire-nut connections into the junction box.

III. Installing the Fixture

- 1. Mount the fixture onto the mounting plate and secure it in place by installing the fixture screws.
- 2. Screw the bulb into the socket. Refer to the socket label for max wattage information.
- 3. Complete installation by installing the shade.