



KEY SMALL & MEDIUM SCONCES

BW1012; BW1021




General Product Information

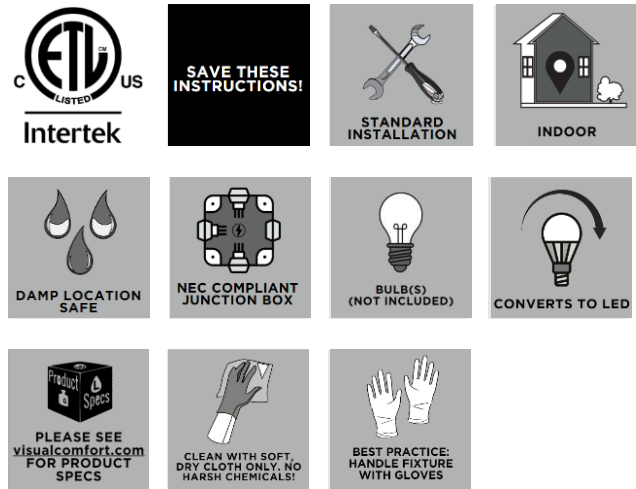


Suggested/Required Tools

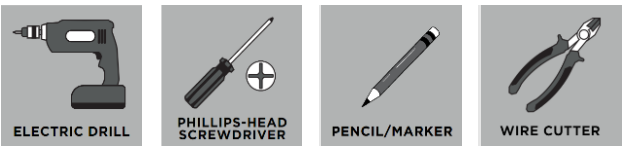

Safety Information

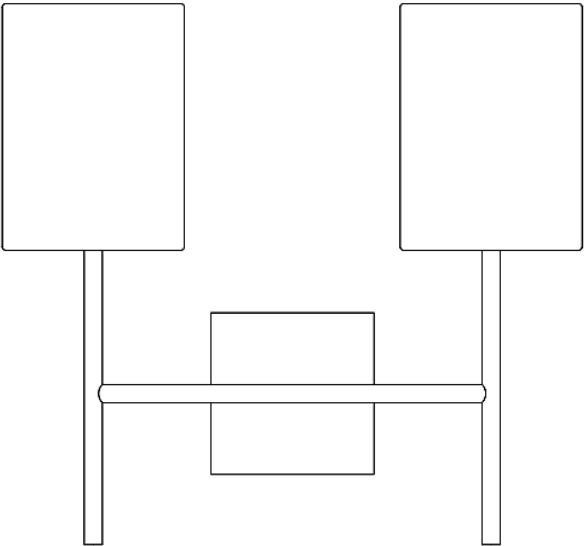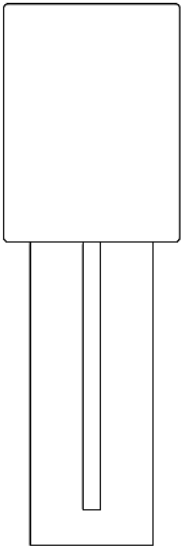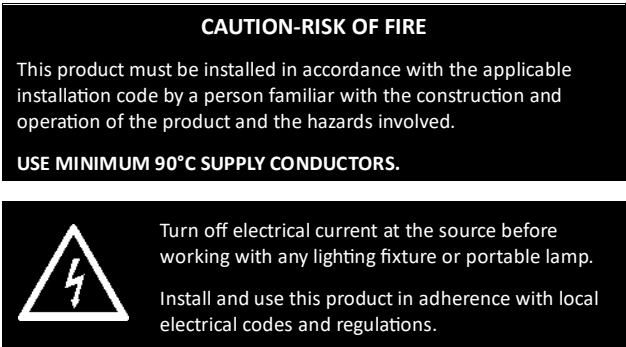

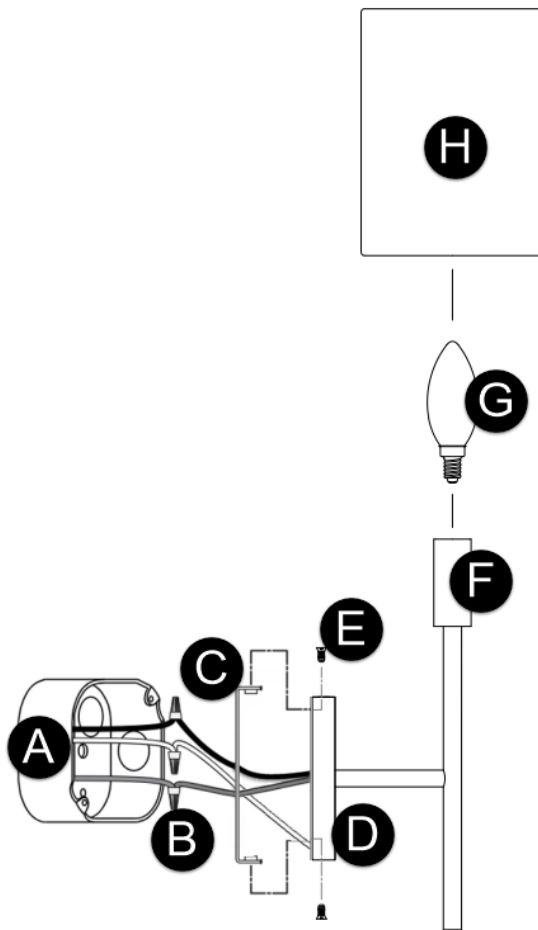

FIXTURE PARTS

- A. Junction Box
- B. Wire Nut Connections
- C. Mounting Plate & Mounting Screws (Not Illustrated)
- D. Fixture Base
- E. Fixture Screws
- F. Sockets
- G. Bulbs (Not Included)
- H. Shades

INSTRUCTIONS

I. Preparing the Fixture

1. Separate the mounting plate from the fixture base.
2. Install the mounting plate to the junction box and secure it using the mounting screws. **Note: BW1021 can mount on 2" X 4" junction box only.**

II. Wiring the Fixture

1. Safety first! Locate the circuit breaker and switch it off to cut off the power supply to the relevant circuits to ensure there's no electricity running through the wiring.
2. In accordance with local electrical codes, connect the fixture ground wire (bare copper or silver wire) to suitable ground. This may be a green ground screw on the mounting plate, which the ground wire should be tightly wrapped around or a house wire (green or bare copper wire without insulation).
3. Twist the bare ends of the following pairs of wires together using a wire nut to secure a connection:
 - a) Hot (black, smooth) fixture wire to hot power line wire
 - b) Neutral (white, textured) fixture wire to neutral power line wire
4. Carefully tuck all the wires into the junction box.

III. Installing the Fixture

1. Secure the fixture base to the mounting plate with the fixture screws.
2. Screw the bulbs into the sockets. Refer to the socket label for max wattage information.
3. Slide the shades over the bulbs to complete the installation.