
ASSEMBLY INSTRUCTIONS ITEM DESCRIPTION: ITEM NO.: DWC69 NAME:ITZIA SCONCE

MATERIAL TYPE: METAL FINISH: ANTIQUE BRASS
SOCKET TYPE:E12 SOCKET QTY: 4

BULB WATTAGE: 40W or /CFL 9W or /LED 4W

VOLTAGE:110V-120V ITEM NET WEIGHT:3.74LBS

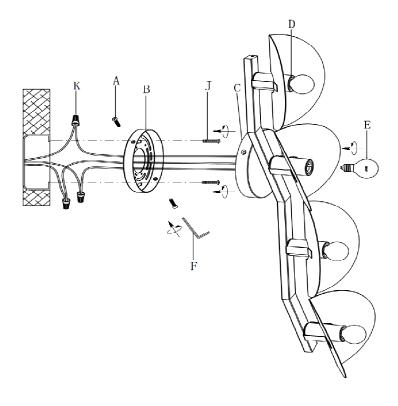

PARTS INCLUDED:		
Canopy Screw (A) Qty: 2 Pcs		
Mounting Plate (B) Qty: 1 Pc		
Back Plate	(C) Qty:1Pc	
Socket	(D) Qty: 4 Pcs	

HARDWARE INCLUDED:


Mounting Screws (J Qty: 2 Pcs Plastic Wire Cap (K; Qty: 3 Pcs Allen Wrench (F Qty: 1 Pc

TOOLS NEEDED (Not Included):

1 Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

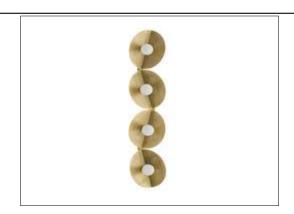

TO ASSEMBLE:

- 1. Shut off the main electrical supply from the main fuse box/circuit breaker.
- Attach mounting plate(B) to wall or junction box using mounting screws (J).
- 3. Connect ground wire from wall to ground wire from lamp using the wire caps (K).
- 4. Attach house wire to lamp wires as shown. Fasten the pairs together with a wire caps(K). DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
- 5. Attach back plate (C) to mounting plate (B) by inserting canopy screws (A) through predrilled holes. Then tighten by using allen wrench (F).
- 6. Insert 4 TYPE-G 40W or/CFL 9W or /LED 4W bulb (not included) into socket (D).

DO NOT EXCEED SPECIFIED WATTAGE OF SCONCE.

7. Restore power to junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of

For customer service questions call 1-800-338-2150

ARTERIORS