ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:


ITEM NO.: DWI24 NAME: JARRETT SCONCE

MATERIAL TYPE: BRASS FINISH: VINTAGE BRASS

SOCKET TYPE: E-12 SOCKET QTY: 2

BULB WATTAGE: 25W BULB /7W SBCFL /5W SBLED

VOLTAGE: 220/240 V ITEM NET WEIGHT:3LBS

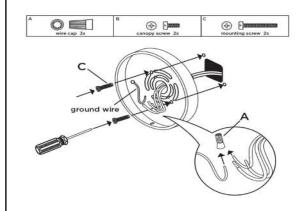

PARTS INCLUDED:

Mounting Plate	Qty:	1	
Back Plate	Qtv:	1	

HARDWARE INCLUDED:

Mounting Screws	Qty: Pcs	
Plastic Wire Connector	Qty: Pcs	2
Canopy Screw	Qtv: Pcs	2

TOOLS NEEDED (Not Included):

1 Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

- 1. Shut off the main electrical supply from the main fuse box/circuit breaker.
- 2. Attach mounting plate to wall or junction box using mounting screws (C).
- 3. Connect ground wire from wall to ground wire from lamp using wire caps (A).
- 4. Attach house wire to lamp wires as shown. Fasten the pairs together with a wire caps.

DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

- 5. Attach front face of light to back plate by inserting canopy screws (B) through predrilled holes in front face and into back plate as shown. Tighten using screwdriver.
- 6. Insert (2) TYPE B 25 W BULB / 7W SBCFL / 5 W SBLED (not included) into the socket. DO NOT EXCEED SPECIFIED WATTAGE
- 7. Restore power to junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIORS