

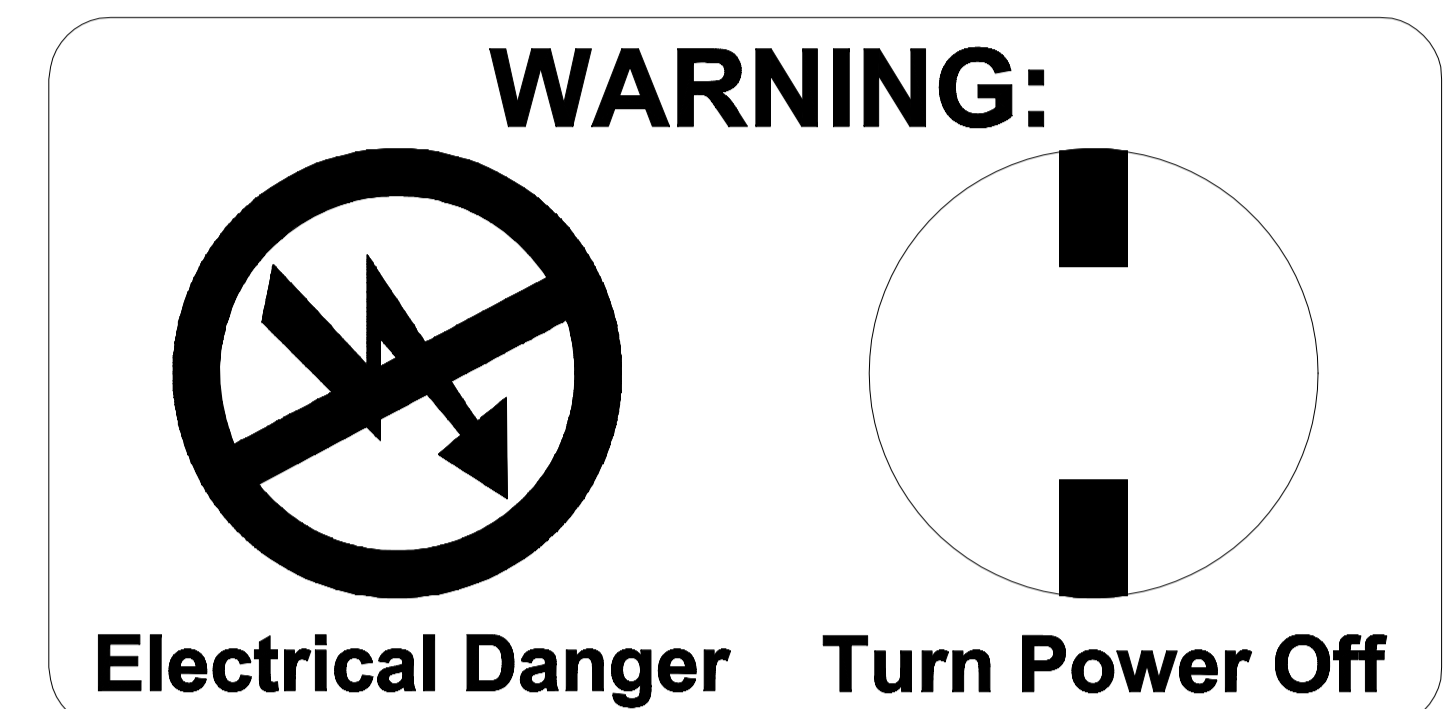


# CRYSTORAMA LIGHTING


ASSEMBLY INSTRUCTION MODEL# DAV-6001-MG

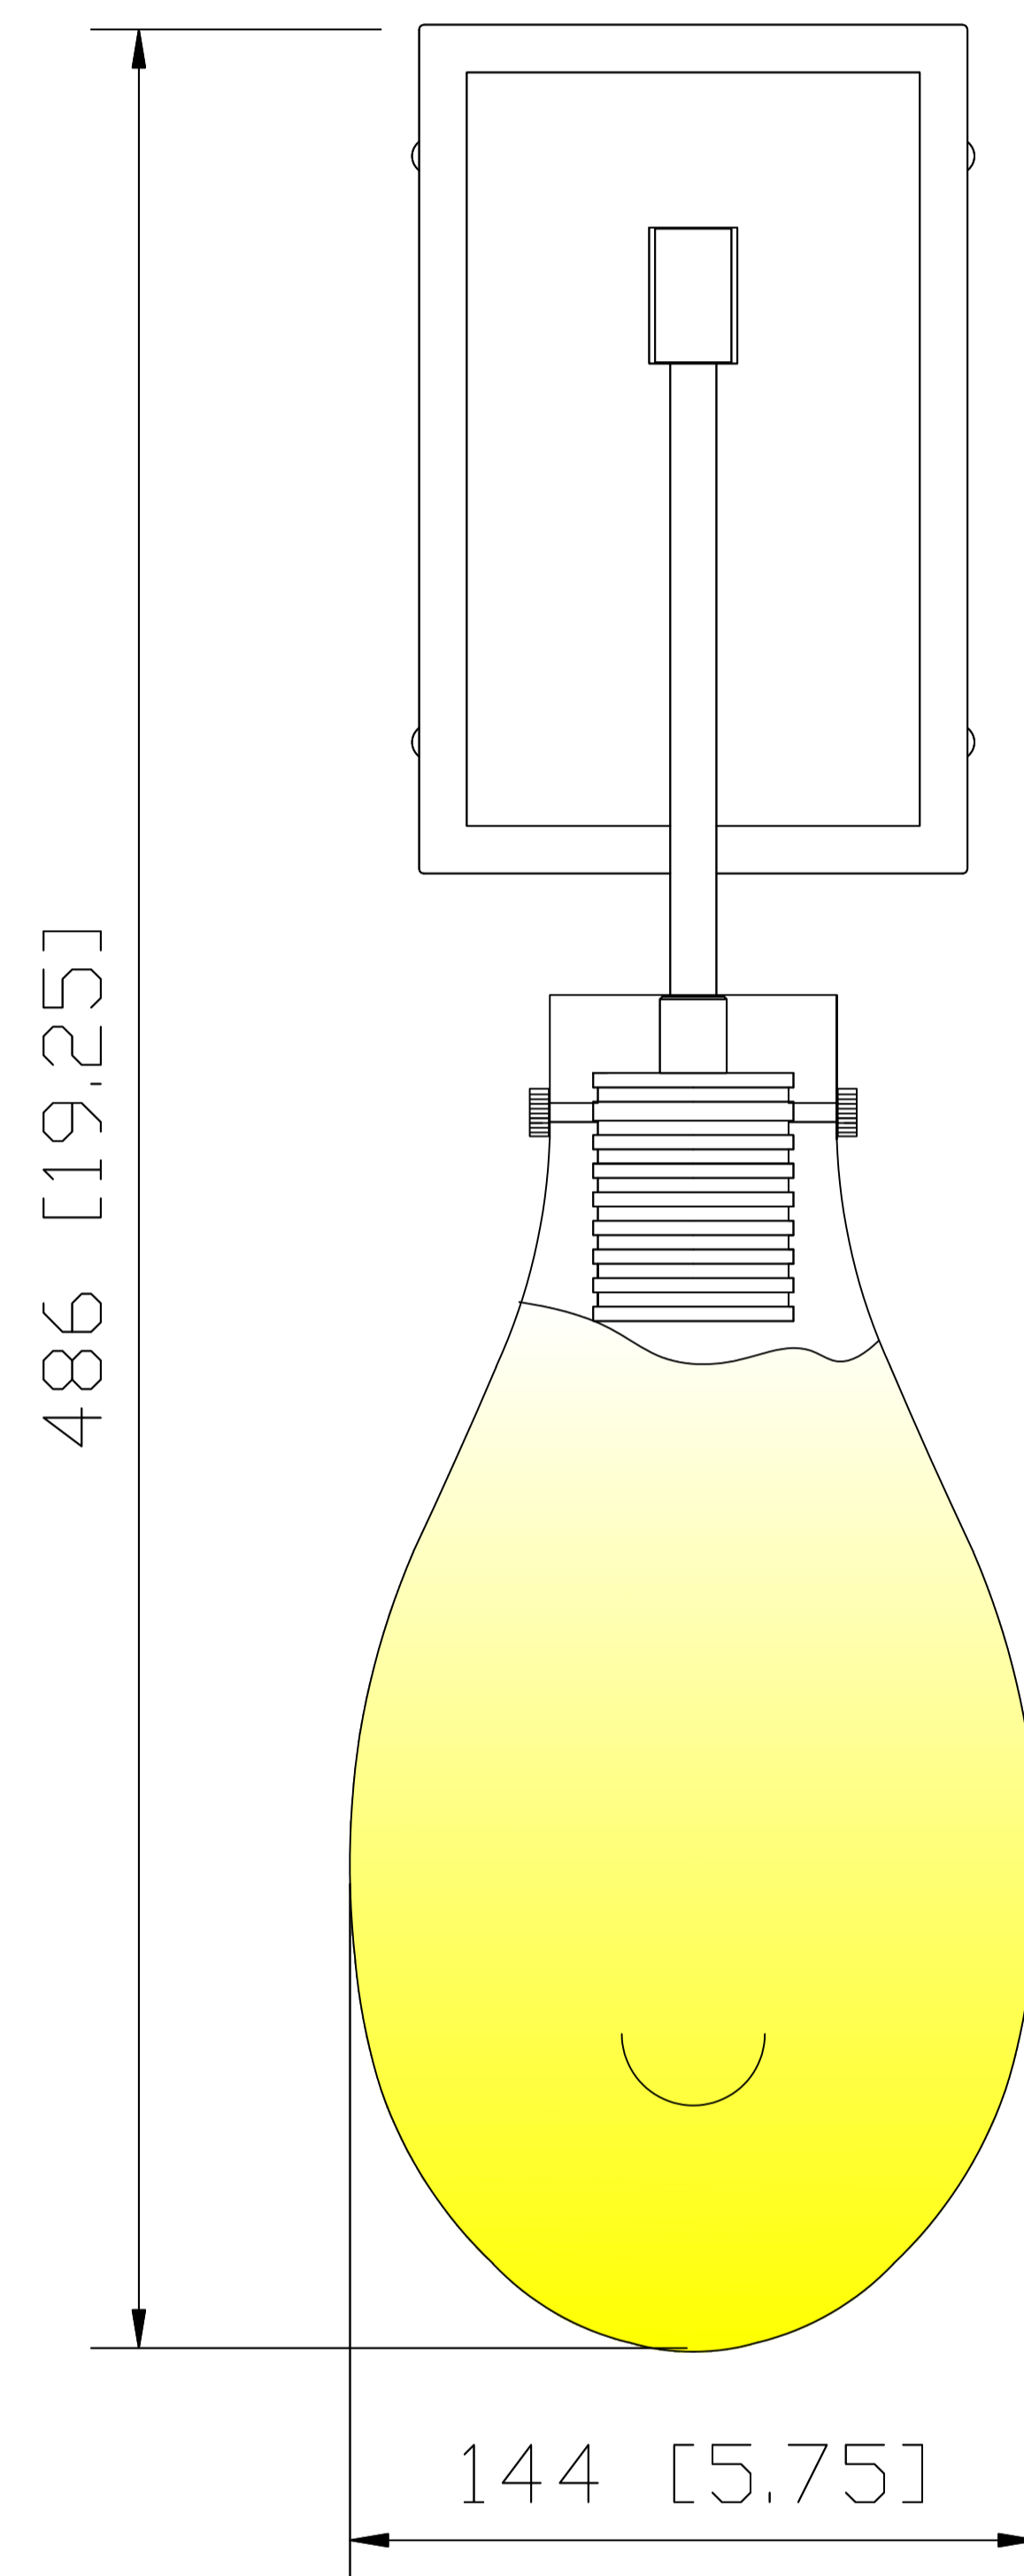

Crystorama.com

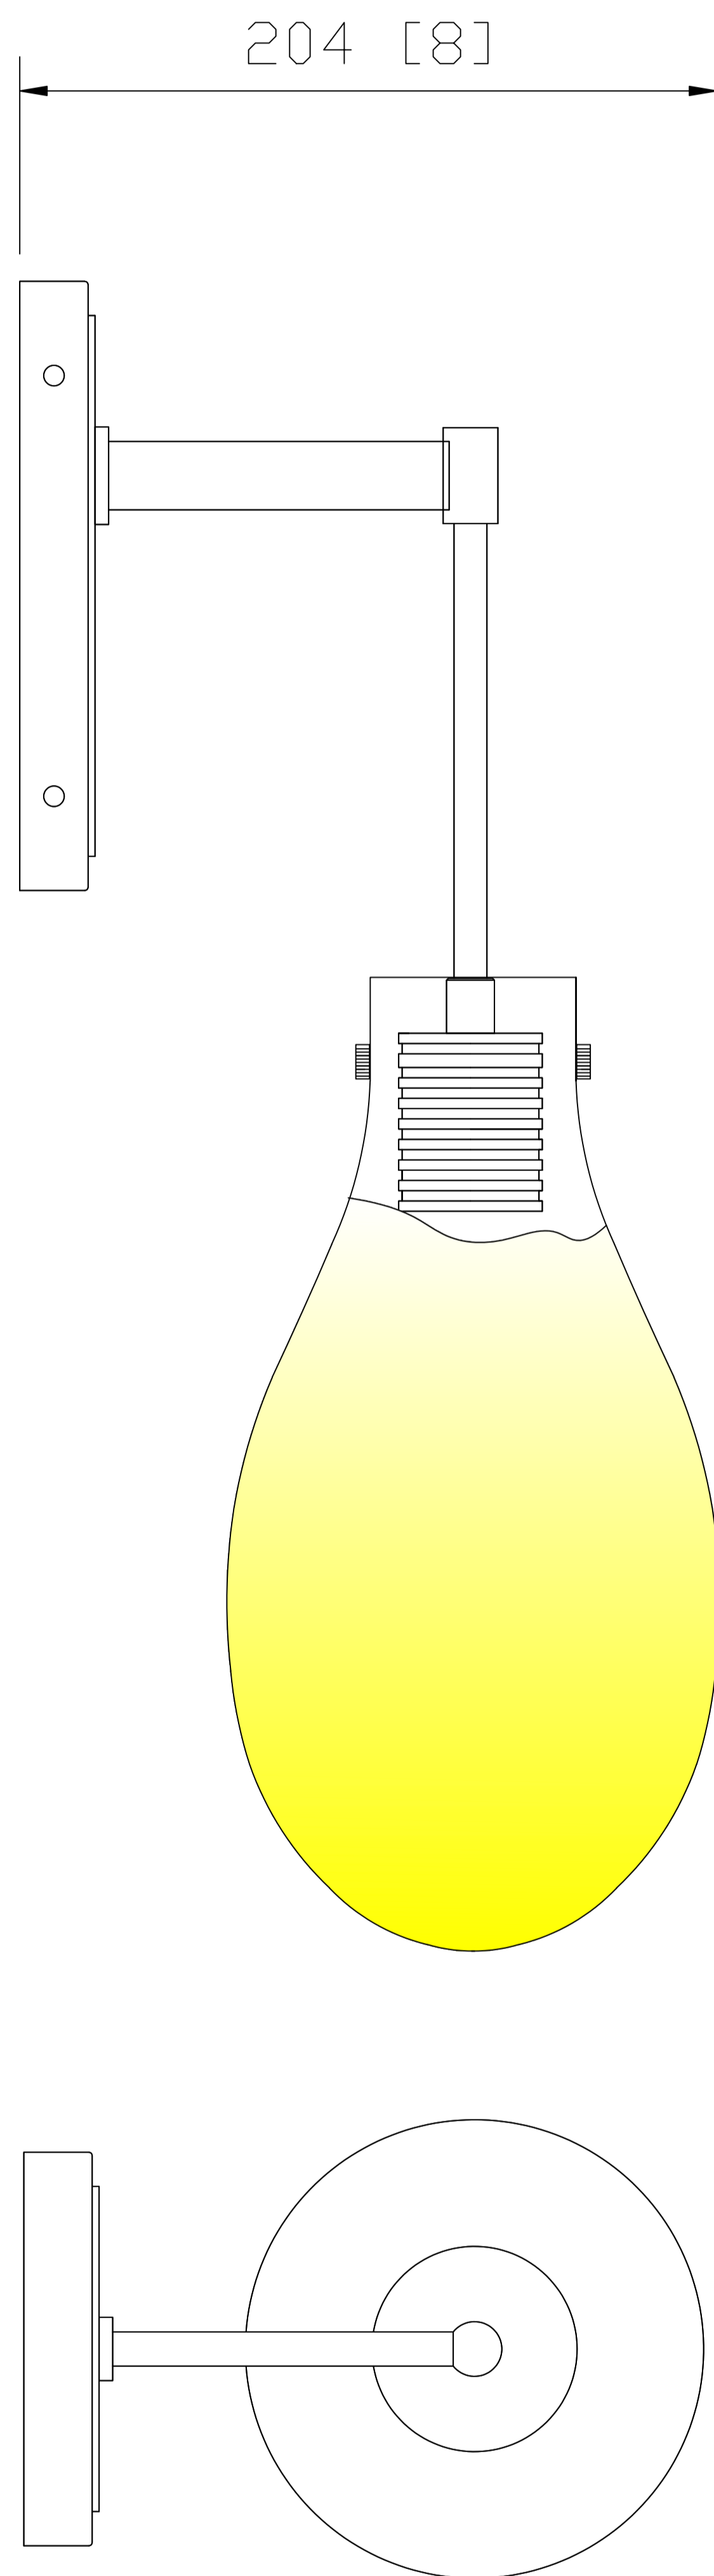

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

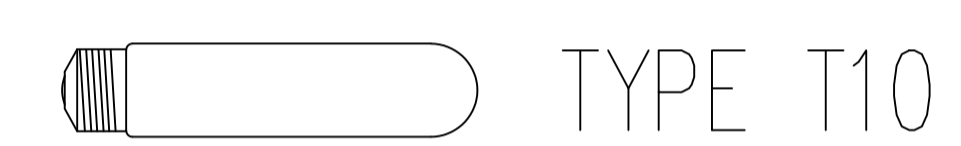

Included need 1 - Med T10 LED Bulb  
6 Watts Recommended  
Use LED Bulbs for Extended Use  
The Fixture is Damp Rated

## How to install

1. Install the mounting plate to the outlet box using two outlet box screws.
2. Install backplate onto the mounting plate, and secure with the screws.
3. Install the bulb into the socket (bulb included).
4. Slide the glass over the bulb and socket and secure it onto the socket using the cap nuts.

**WARNING:** This product can expose you to Lead which is known to the state of California to cause cancer and/or birth defects or reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

# CRYSTORAMA LIGHTING

ASSEMBLY INSTRUCTION MODEL# DAV-6001-MG



Crystorama.com

## Part Number

- A. (1)-Mounting hardware
- B. (1)-Mounting plate
- C. (4)-Machine Screw;8/32"X10MM
- D. (1)-Backplate;(XNO6001MGBKP7IN)
- E. (1)-Bulb;T10X185mm,LED6W
- F. (1)-Glass ;W5.75"XH11.25" (XNO6001GLA11.25IN)
- G. (3)-Cap nut;8/32"X15MM (XNO6001SC 0.6IN)

