

## ASSEMBLY INSTRUCTIONS FOR YOUR LINCOLN WALL SCONCE

### IMPORTANT SAFETY INSTRUCTIONS:

- \* These instructions are provided for your safety.
- \* It is very important that they are read completely before beginning the installation of your fixture.
- \* **WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.**
- \* Turn off power at switch before replacing bulbs, making sure fixture has had sufficient time to cool down.
- \* This fixture is UL rated for dry locations.

### ASSEMBLY INSTRUCTIONS:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/ CIRCUIT BREAKER.
2. Remove all parts from carton and discard packing materials. Place the parts on a level surface.
3. Remove decorative nuts (G) from backplate (B). Set decorative nuts (G) aside.
4. Remove mounting plate (A) from backplate (B) by unthreading screws (D). Set screws (D) aside.
5. Carefully pull wires from the wall outlet box and thread them through the center hole in mounting plate (A).
6. Affix mounting plate (A) to wall outlet box with mounting screws (C).
7. Lift the fixture to the mounting plate and make the proper electrical connections noted in steps 8 through 10. A LICENSED ELECTRICIAN IS RECOMMENDED.
8. Attach ground wire from fixture (green or copper in color) to ground wire from outlet box. Fasten wires together with wire nut (M) and tightly wrap connection with electrical tape.
9. Attach hot wire from fixture (black in color or smooth side of wire) to hot wire from outlet box. Fasten wires together with wire nut (M) and tightly wrap connection with electrical tape.
10. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with wire nut (M) and tightly wrap connection with electrical tape. Gently push wire connections back into the wall outlet box.
11. Place backplate (B) over mounting plate (A). Thread screws (D) back into backplate (B) to secure to wall.
12. Place body (I) against wall with arm cupping the bottom of socket (E), making sure arm is centered on socket (E). With a pen or pencil, mark where the top of the body (polished metal accent) meets wall, making sure the mark is centered. **Note:** See Illustration A.
13. Remove screw (L) from body (I) to release bracket (J).
14. Position the center of bracket (J) in line with marked location. Then mark the location of holes in bracket (J) on the wall with a pen or pencil.
15. Using a 3/16" drill bit, drill where bracket holes are marked on wall. Place wall anchors (N) into the drilled holes.
16. Secure bracket (J) by aligning bracket holes with wall anchors (N). Thread screws (K) through bracket (J) and into anchors (N).
17. Slide body (I) over bracket (J). Using a long screwdriver, thread screw (L) into the top of body (I), securing it to the bracket.
18. Install two 40W MAX. Type B, medium base bulbs into the sockets (E).
19. Place shade (F) over backplate (B), aligning threaded tubes (H) with metal tabs in shade (F). Thread decorative nuts (G) onto threaded tubes (H) to secure shade (F) to fixture.
20. Reconnect main electrical supply at the fuse box/ circuit breaker and test the fixture.

**\*\* To clean, use soft cloth only. Do not use any chemical or abrasive cleaners. \*\***

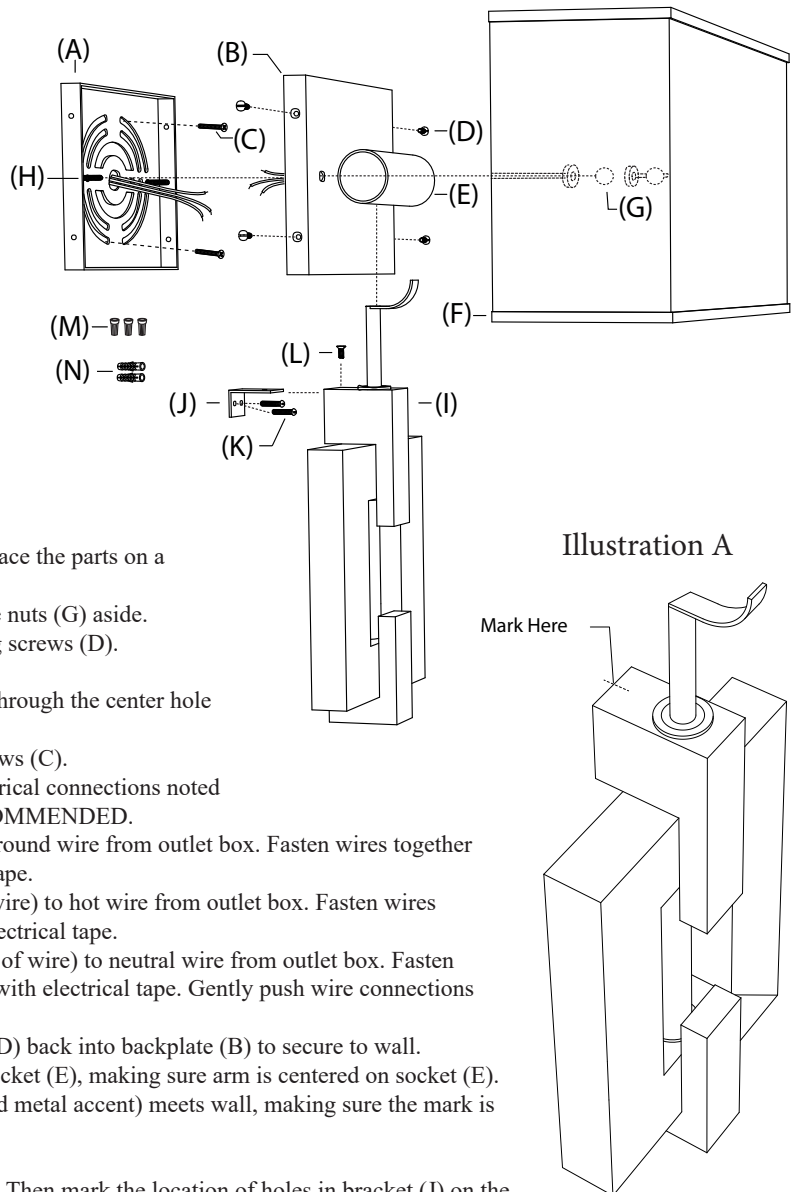


Illustration A

Mark Here