




- 1** Install lamp.

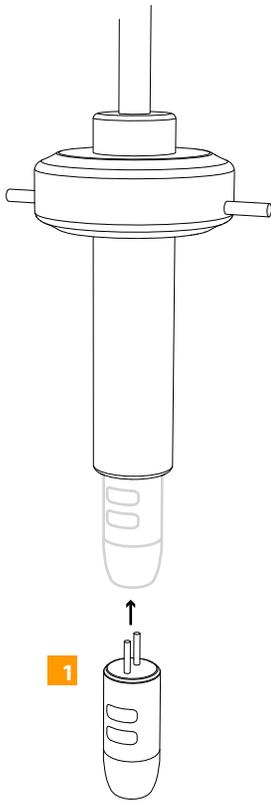

- 2** Slip fitter into top opening of glass at an angle.

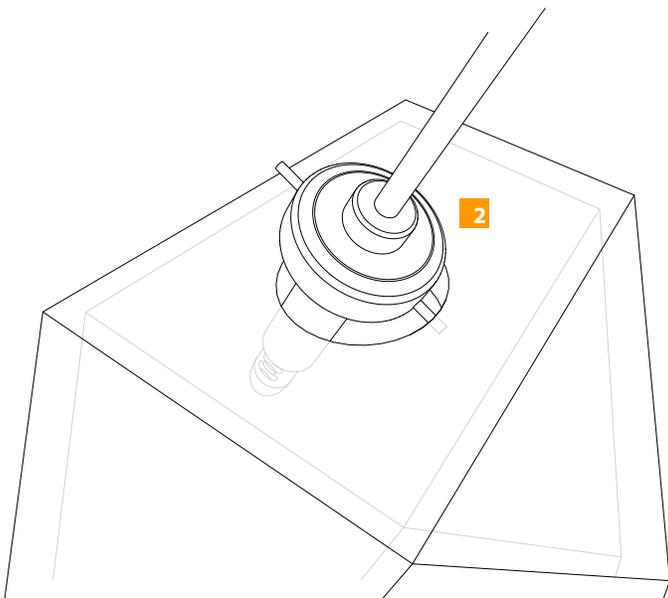


- 3** Once the fitter is inside of the top opening, rotate until the holding posts allow the lamp to sit center of the glass.

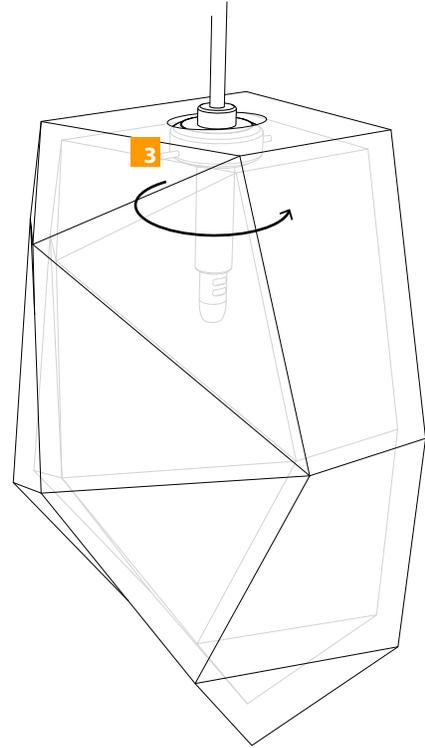


EZ Jack Installation Instructions

- 4** Insert the fixture coaxial cable through the conical connector

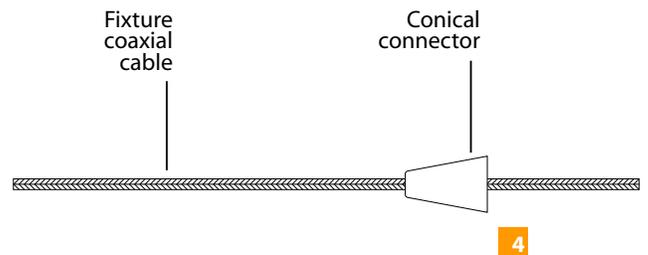


**SAVE THIS
INSTRUCTIONS**

- 5** Insert the coaxial cable through the flared end of the strain relief.

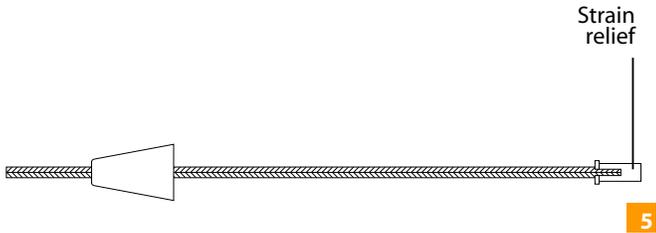


- 6** Slide the outer wrapped wire back to expose the inner wire.

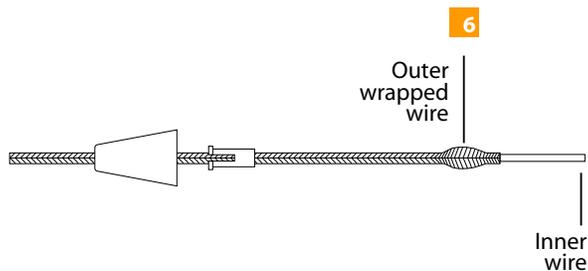

- 7** Strip 1/8" from end of the inner wire. Make sure that the stripped portion is not greater than 3/16".


- 8** Loosen (Do Not Remove) the M4 set screw with the provided 2mm Allen wrench.

- 9** Remove the M3 set screw with the provided 1.5mm Allen wrench.

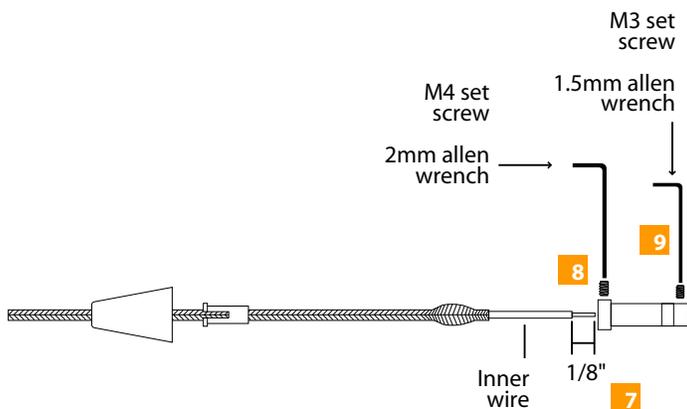

- 10** While inserting the inner wire into the connector look through the set screw hole to make sure that the stripped portion of the inner wire contacts end of the connector.

- 11** Hold the coaxial cable in place; replace and tighten the M3 set screw with the 1.5MM Allen wrench. Lightly tug on the coaxial cable to make sure that the set screw connection is tight.

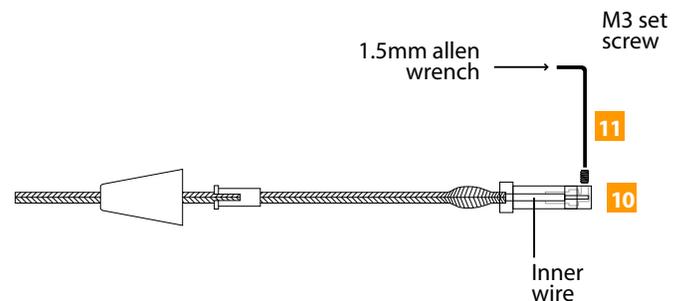

**SAVE THIS
INSTRUCTIONS**