


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: DWC31	NAME: GRIFFITH SCONCE
MATERIAL TYPE: METAL	FINISH: ANTIQUE BRASS
SOCKET TYPE:E12	SOCKET QTY:2
BULB WATTAGE: 40W /CFL 9W /LED 4W	
VOLTAGE:110V-120V	ITEM NET WEIGHT:4.2LBS

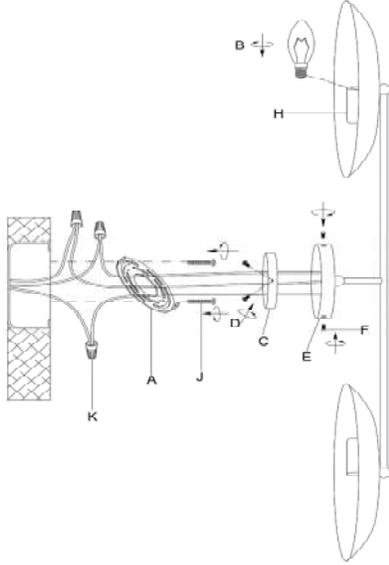

PARTS INCLUDED:

Mounting Plate (A)	Qty: 1 Pc	Socket Assembly (E)	Qty: 1 Pc
Back Plate (C)	Qty: 1 Pc	Base Screw (F)	Qty: 2 Pcs
Canopy Screw (D)	Qty: 2 Pcs	Socket (H)	Qty: 2 Pcs

HARDWARE INCLUDED:

Mounting Screws (J)	Qty: 2 Pcs
Plastic Wire Cap (K)	Qty: 3 Pcs

TOOLS NEEDED (Not Included):

1 Screwdriver



These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Attach mounting plate(A) to wall or junction box using mounting screws (J).
3. Connect ground wire from wall to ground wire from lamp by using wire caps (K).
4. Attach house wire to lamp wires as shown. Fasten the pairs together with a wire caps(K) . **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
5. Insert 2 TYPE-B 40W or/cfl 9w or /led 4w bulb(not included) into the socket(H). **DO NOT EXCEED SPECIFIED WATTAGE OF SCONCE.**
6. Attach Back Plate (C) to Mounting Plate (A) by inserting canopy screws (D) through predrilled holes . Tighten using screwdriver. Then attach Socket Assembly (E) to Back Plate (C) , Tighten Base Screw (F) by using screwdriver.
7. Restore power to junction box and test fixture.

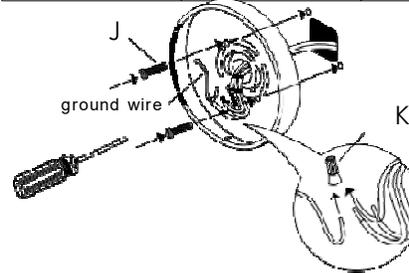

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS