




SAVOY
HOUSE

ITEM NO: 1-9716-8

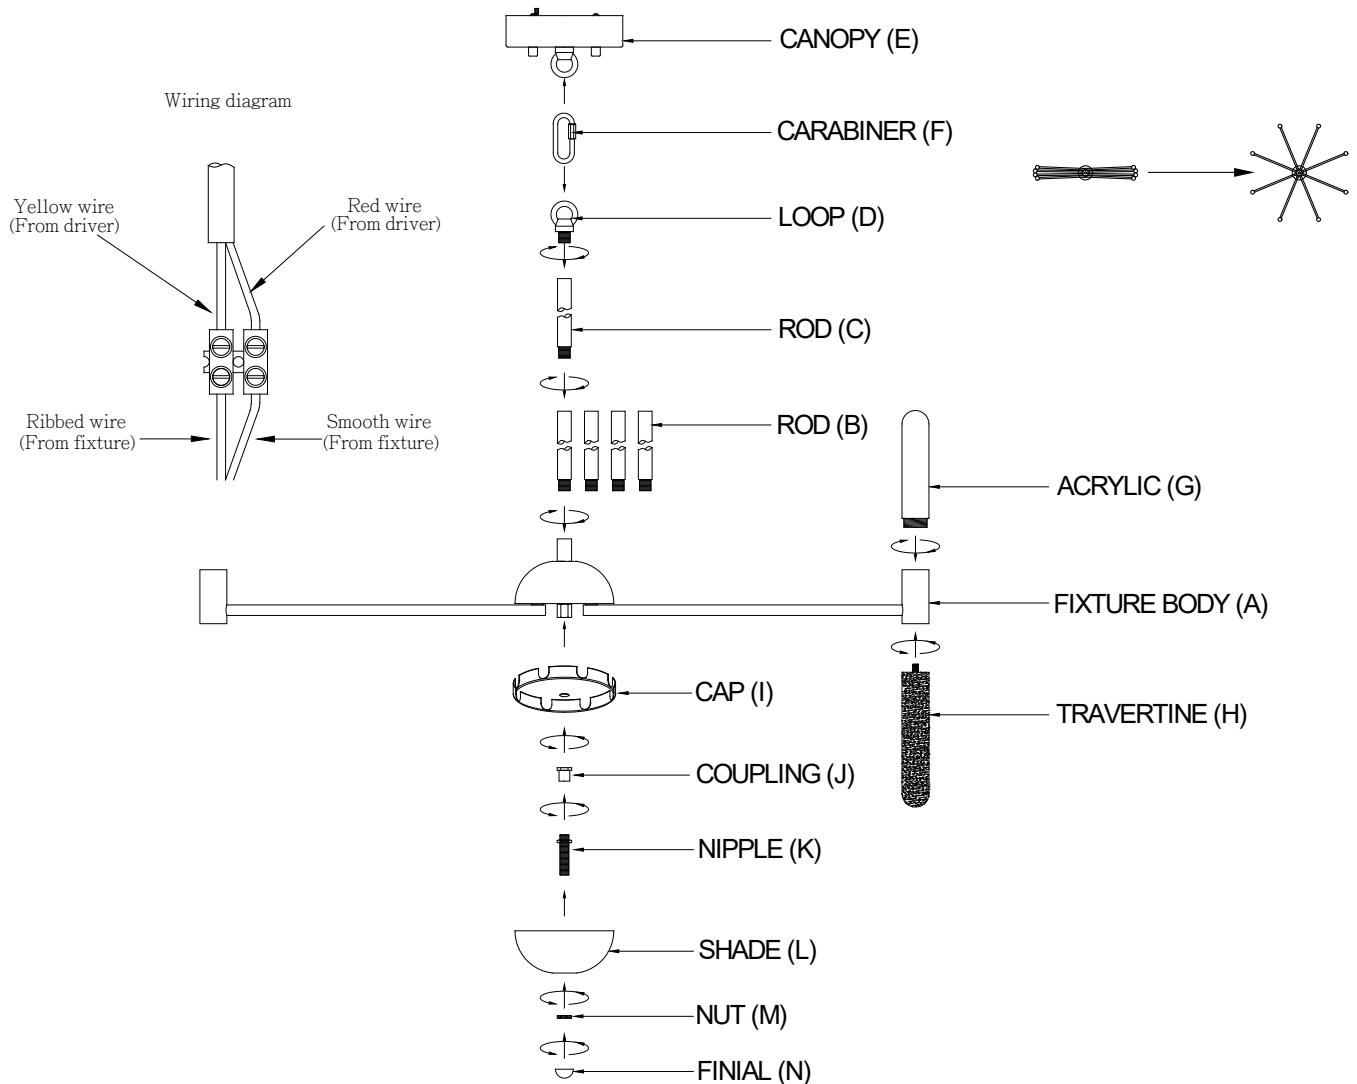

ASSEMBLY INSTRUCTIONS

1. Carefully unpack and identify all parts referring to illustration for parts identification.
2. Turn the power to the installation point OFF.
3. Unfold the arms of the fixture body (A).
4. Place the cap (I) over the fixture body (A) and secure with the coupling (J).
5. Thread the hex nut end of the nipple (K) onto the coupling (J). Place the shade (L) over the nipple (K). Secure with the nut (M) and hand-tighten until snug.
6. Thread the finial (N) onto the nipple (K). Hand-tighten until snug.
7. Unravel the supply power and ground wires and pass them through the rods (B), the rod (C), the loop (D) and the canopy (E).
8. Thread the bottoms of rods (B) and rod (C) into the fixture body (A) as shown, and hand-tighten until snug.
9. Thread the loop (D) to the uppermost rod. Hand-tighten until snug.
10. Use the carabiner (F) to connect the loop (D) to the loop on the canopy (E) and twist the locking mechanism to secure.
11. Thread the acrylics (G) onto the top of the fixture body (A), as shown.
12. Thread the travertines (H) onto the underside of the fixture body (A), as shown.
13. Refer to the additional installation instructions included with the product for wiring and installation.
14. Restore power to the installation point and retain this sheet for future reference.