


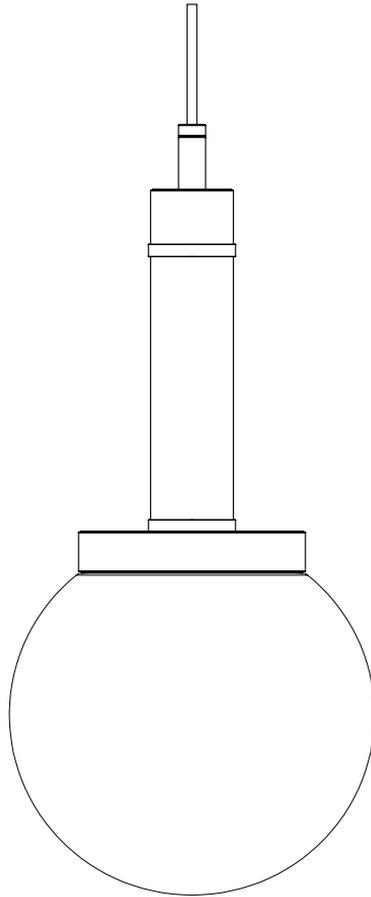

VIRO Pendant



Socket + Column + Glass

Assembly Instructions

VIRO-0021




THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED



Scan to view online

VIRO-0021 Parts List

Part Names and Quantities

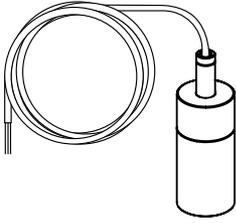


VIRO-PEN-0001

1 Socket + Cord



VIRO-COM-0008

1 Check Ring B




VIRO-CLM-XXXX

1 Column + 1 Threaded Tube



VIRO-COM-0007

1 Check Ring A




VIRO-COM-0010

1 Glass Adapter Cap



VIRO-COM-0009

1 Glass Adapter + 3 Set Screws

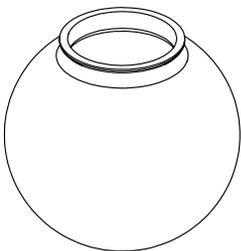

VIRO-GLS-XXXX

1 Glass

(your glass may look different)

READ FIRST

BEFORE CUTTING THE CORD

To cut the cord, follow these steps to prevent the cord's cloth cover from fraying and to ensure successful assembly and installation.

1. Determine the position the cord hangs from the canopy. The cut position is 3 inches above that.



2. Wrap electrical tape around the cut position.




3. Cut the cord in the middle of the electrical tape and continue to assemble and install the fixture as shown in the instructions.



4. After the fixture is assembled and during canopy installation, remove the tape, strip the cord and wires, then connect them to your junction box's wires as shown in the instructions.

1. Disassemble VIRO-PEN-0001

Disassemble parts in the order shown

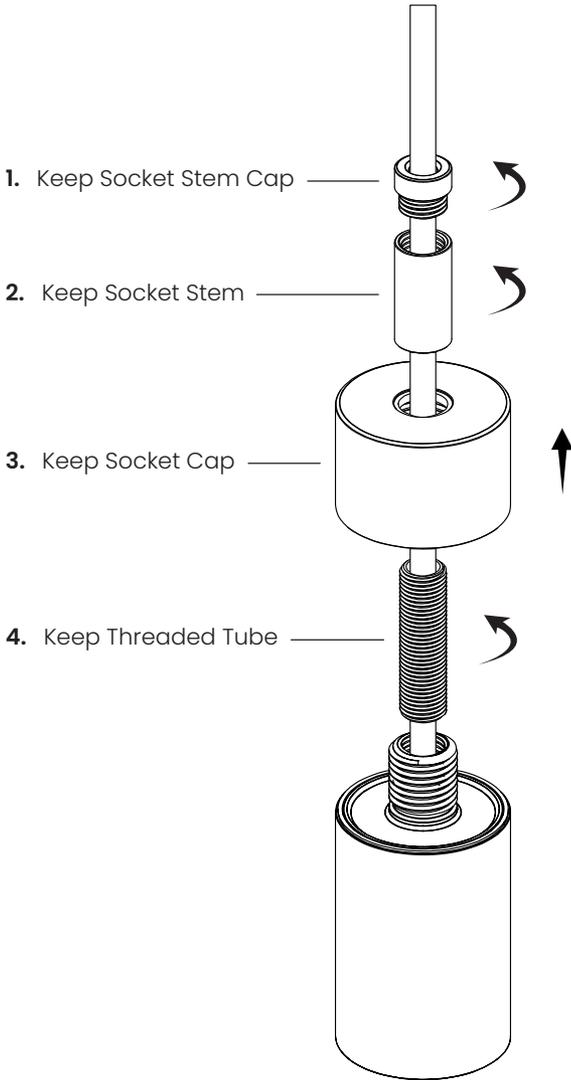

2. Assemble VIRO-0021


Assemble parts in the order shown

4. Assemble the Column
VIRO-CLM-XXXX

3. Assemble the threaded tube included with the Column
VIRO-CLM-XXXX

2. Assemble the Check Ring A
VIRO-COM-0007

1. Assemble the Glass Adapter Cap
VIRO-COM-0010

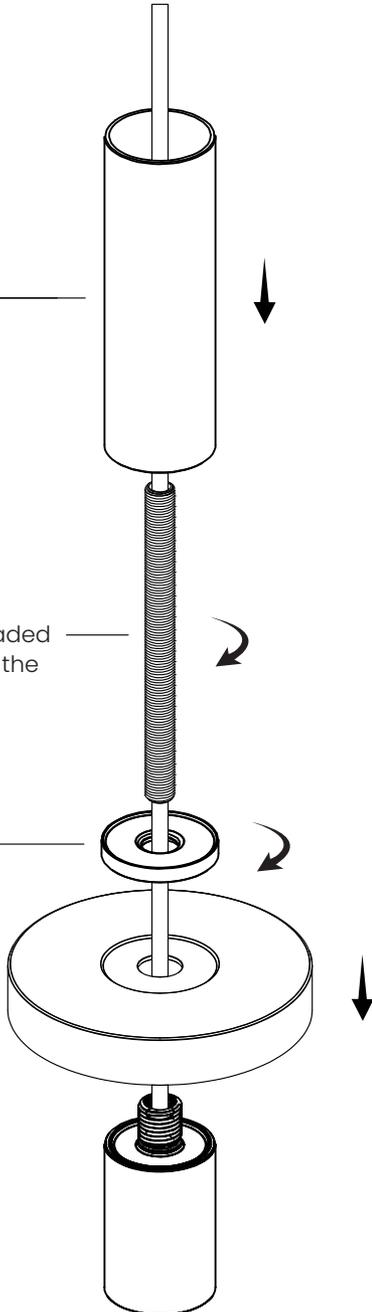

3. Assemble VIRO-0021 (cont.)

Assemble parts in the order shown


5. Assemble the Socket Stem Cap from **VIRO-PEN-0001**

4. Assemble the Socket Stem from **VIRO-PEN-0001**

3. Assemble the Socket Cap from **VIRO-PEN-0001**


2. Assemble the Threaded Tube from **VIRO-PEN-0001**


1. Assemble the Check Ring B
VIRO-COM-0008

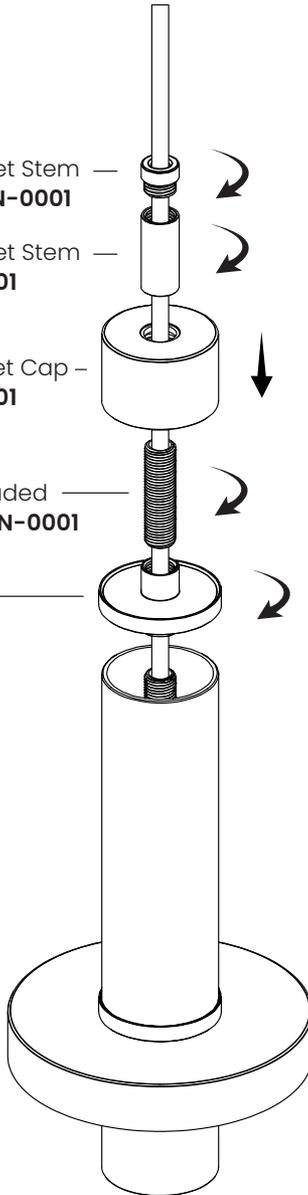


4. Assemble the Glass Adapter

Assemble parts in the order shown

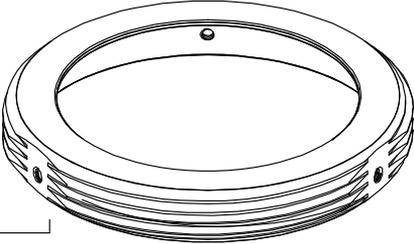1. Assemble the  Glass Adapter **VIRO-COM-0009** onto the Glass

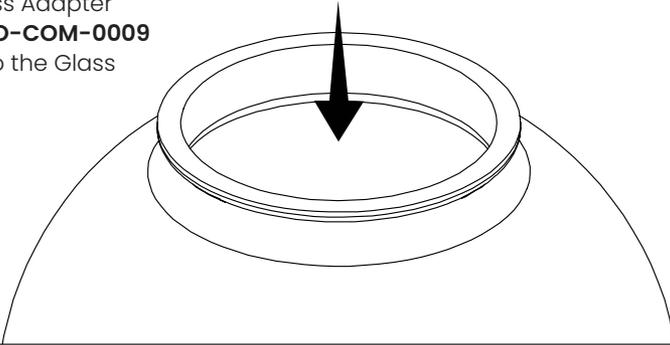


2. Assemble the  Nylon Set Screws included with the Glass Adapter **VIRO-COM-0009**

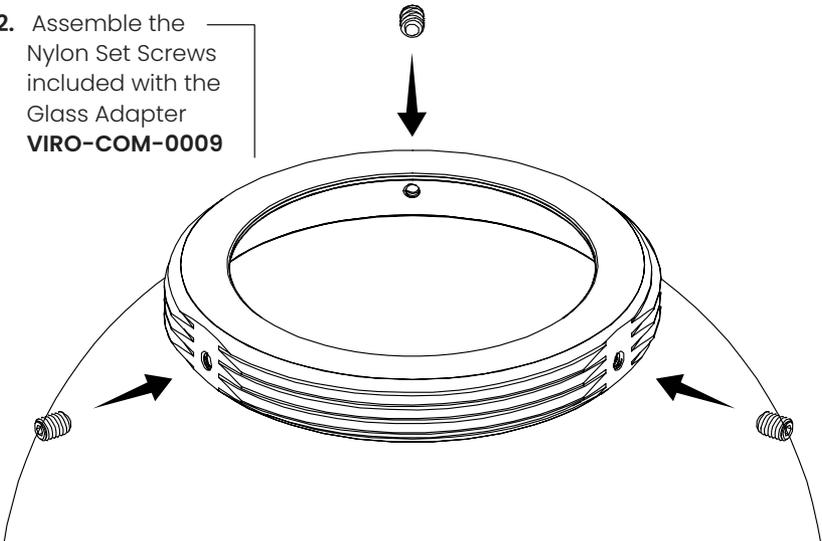


5. Assemble the Bulb and Glass


Assemble each part in the order shown

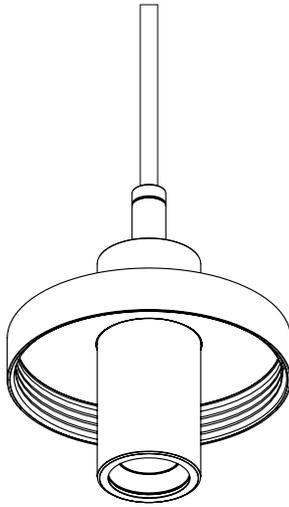

1. Assemble the bulb




2. Assemble the Glass

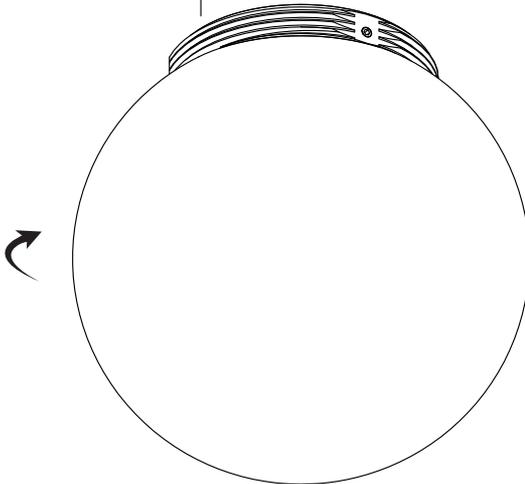



VIRO Pendant Canopy

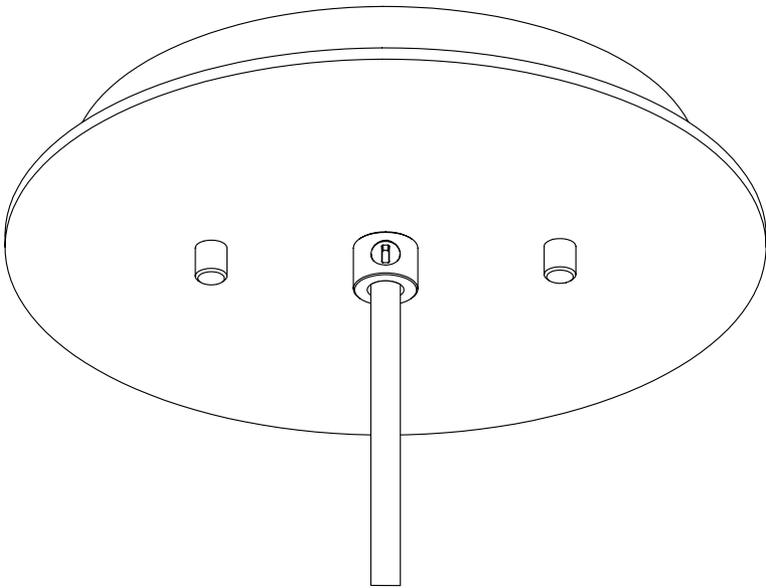

Single Canopy

Assembly Instructions

VIRO-CAN-0001







THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED



Scan to view online


VIRO-CAN-0001

Part Names and Quantities

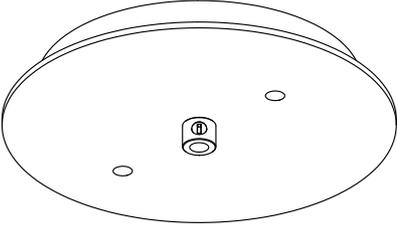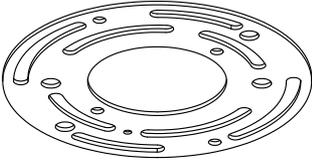	<p>VIRO-CAN-0001 Single Canopy</p>
	<p>1 Universal Mount</p>
	<p>2 8-32 Junction Box Screws</p>
	<p>2 Canopy Mount Threaded Rod</p>
	<p>2 Locking Nuts</p>
	<p>2 Wire Nuts</p>


1. Install the universal mount

Screw the Universal Mount onto the ceiling junction box

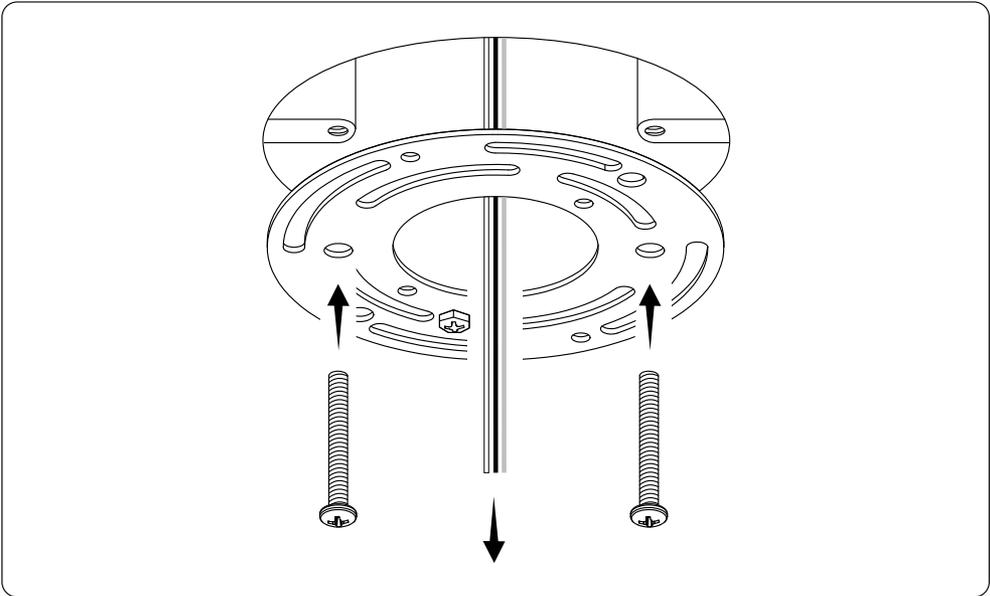


2. Install the canopy mounting rods

Screw the threaded rods into the universal mount

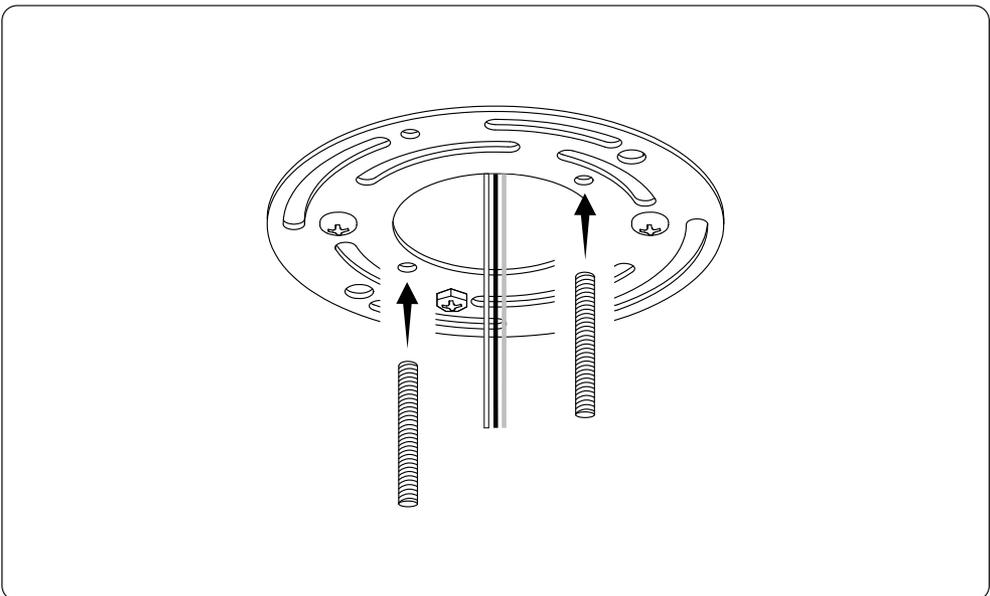


3. Install the cord into the canopy

Cut the cord to length, insert it into the canopy and lock it

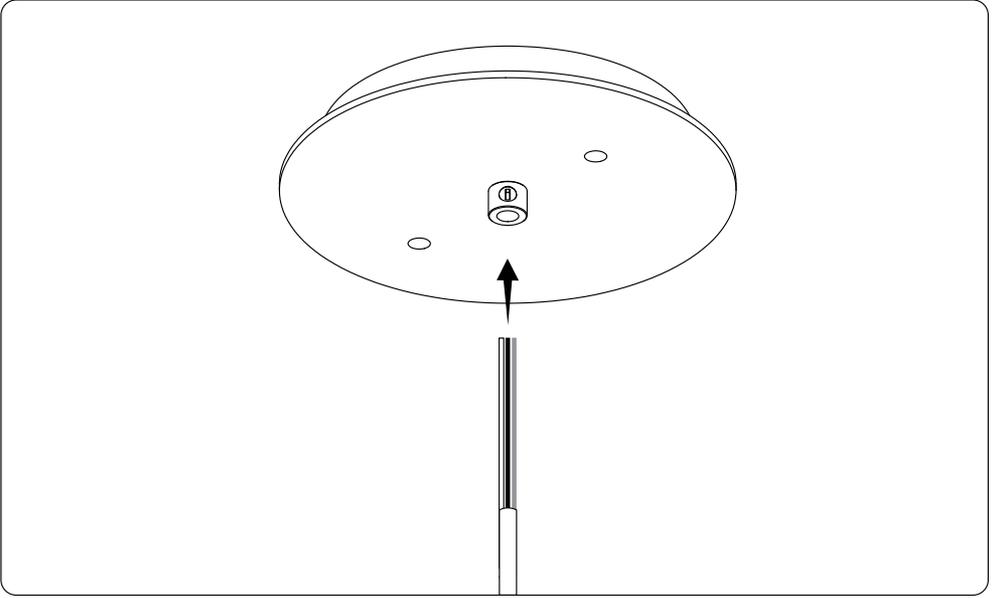


4. Connect the electric and ground wires

Connect ground wires to ground terminal and match power with power and neutral with neutral wires

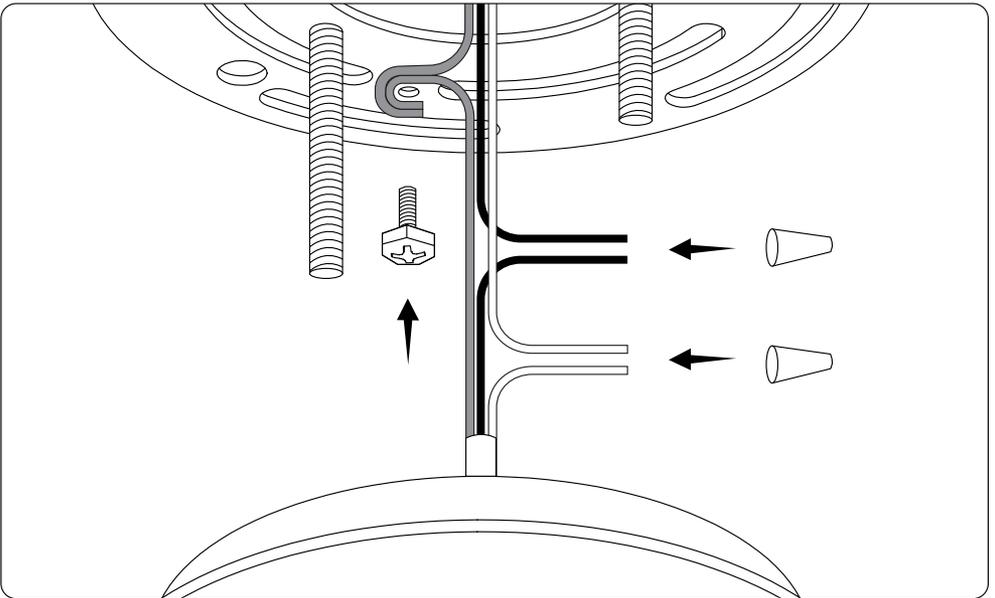

5. Install the canopy

Align the canopy to the mounting rods and install

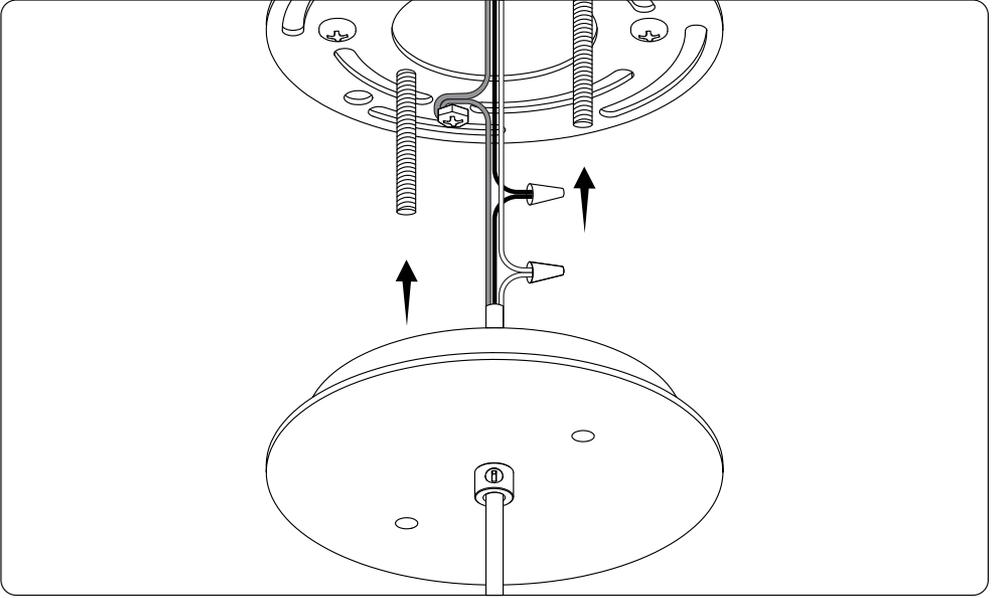

6. Lock the canopy in place

Screw the locking nuts onto the canopy mounting rods

