# ASSEMBLY INSTRUCTIONS

## ITEM DESCRIPTION:


ITEM NO.:DWC97 NAME: Malia Sconce

MATERIAL TYPE: Iron, Glass FINISH: Antique brass, Clear seedy

SOCKET TYPE: E12 SOCKET QTY: 2

BULB WATTAGE: 60W /13W CFL/8W LED

VOLTAGE: 110V-120V ITEM NET WEIGHT: 16.8LBS

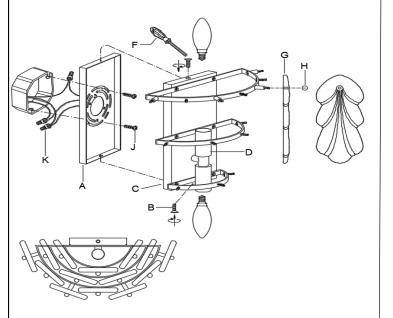

#### PARTS INCLUDED:

Mounting Plate (A)	Qty: 1 Pc	Allen Wrench (F)	Qty: 1 Pc
Set Screws (B)	Qty: 2 Pcs	Glass (G)	Qty: 14 Pcs
Lamp Body ( C )	Qty: 1 Pc	Finial ( H )	Qty: 14 Pcs
Sockets (D)	Otv: 2 Pcs		

## HARDWARE INCLUDED:

Mounting Screws (J)	Qty: 2 Pcs
Plastic Wire Connector ( h	() Qty: 3 Pcs

#### TOOLS NEEDED (Not Included):

## 1 Screwdriver


These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



#### TO ASSEMBLE:

- 1. Shut off the main electrical supply from the main fuse box/circuit breaker.
- Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
- 3. Please be sure you have all parts indicated before you begin assembly.
- 4. Gently pull the electrical cord from junction box, then pull the electrical cord from back plate through the exit hole of the mounting plate(A).
- Remove the mounting plate (A) from the lamp body (C) by loose set screws(B).
- 6. Carefully inspect the pendant's fixture wires. Neutral fixture wire: white hot fixture wire: black ground wire: green
- 7. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a plastic wire connector (K) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (A) facing down, and wrap the fixture's bare ground wire around the ground screw.
- 8. Attach the neutral fixture wire from the pendant to the neutral junction box wire (usually white). Fasten each together with a wire connector(K) and wrap the connection with electrical tape.
- Attach the hot fixture wire from the pendant to the to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (K) and wrap the connection with electrical tape. Be sure no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
- 10. Gently tuck the wire connections neatly into the ceiling junction box.
- 11. Attach the lamp body (C) to the mounting plate (A) by using the enclosed set screws (B) and tighten set screws (B) with allen wrench (F) .
- Insert 2 type b 60w or/cfl 13w or/led 8w bulb (not included) into the sockets (D).Do not exceed specified wattage.
- 13. Attached the glass (G)through the pipe and thread the finial ( H ) to tight to secure the glass shade.Note:starting at the bottom of the glass.
- 14. Restore power to the junction box and test fixture.

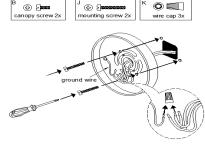

### **CARE INSTRUCTIONS:**

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

ARTERIORS