
# ASSEMBLY INSTRUCTIONS

#### ITEM DESCRIPTION:

ITEM NO.:DLC41	NAME: NOVA CHANDELIER
MATERIAL TYPE:IRON, ALABASTER	FINISH:ENGLISH BRONZE
SOCKET TYPE: LED	SOCKET QTY:13
BULB WATTAGE: 60W	
VOLTAGE: 100V-120V	ITEM NET WEIGHT:23 LBS

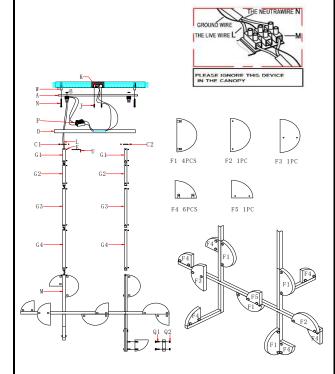

## PARTS INCLUDED:

Mounting Plate(A)	Qty:1PC	Elecrtic Wire(L)	Qty:1PC
Nut(B)	Qty:2PC	Lamp Body (M)	Qty:1PC
Collar loop (C1)(C2)	Qty:2PCS	Fast Connector (P)	Qty:1PC
canopy(D)	Qty:1PC	Thumb-screw (Q1)	Qty:26PCS
Hex Screw (E)	Qty:16PCS	Thumb-screw (Q2)	Qty:20PCS
Alabaster shade (F1)	Qty:4PCS	anchors(W)	Qty:2PCS
Alabaster shade (F2)	Qty:1PC		
Alabaster shade (F3)	Qty:1PC		
Alabaster shade (F4)	Qty:6PCS		
Alabaster shade (F5)	Qty:1PC		
Square tube (G1,G2,G3,G4)	Qty:8PCS		

### HARDWARE INCLUDED:

Mounting Screw(J)	Qty:2PCS	Allen Wrench(U)	Qty:1PC
Plastic Wire Connector(K)	3	strengthen screw(N)	Qty:2PCS
Green Ground Screw	1		

### TO INSTALL YOU WILL NEED:

2 people recommended
 • Phillips Screwdriver
 • Allen Wrench

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.



#### TO ASSEMBLE:

- 1. Shut off the main electrical supply from the main fuse box/ circuit breaker.
- $2. \ \ \, \text{Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly}.$
- 3. Gently pull wiring down from ceiling junction box and allow to hang.
- 4. Remove mounting plate(A) from the canopy(D) by unscrewing the collar (C1),(C2), Use an Allen wrench (U) to loosen hex screws (E) on the collar (C1),(C2).

5.Position fixture in desired location on ceiling, the mounting plate features (2) holes for screw mounting. Mark these spots on the ceiling with a pencil to drill holes. Drill 2 holes on these spots and insert anchors (W) into drilled holes.


6.Pass the power wire (L) through the square tube (G4), (G3), (G2), and (G1). Place the square tube (G4) on the lamp body (M). Repeat for the square tube (G3), (G2), and (G1). When connecting square tubes, loosen the small hex screws (E) in the side holes, and tighten them with an Allen wrench (U) after all square tubes are connected. Make sure all hex screws are secured.

7. Put the collar loop (C1),(C2), the mounting plate(A) and canopy (D) onto the square tube(G1) in sequence, then thread the power wire (L) through the mounting plate (A). Secure tthe square tub (G1) to the mounting plate (A) by locking nut (B).

- 8. PLEASE PAY SPECIAL ATTENTION TO THE FACT THAT YOU DO NOT NEED TO CONNECT THE WIRE TO THE DEVICE (M). IT IS USED FOR WIRE CONNECTIONS IN THE EUROPEAN MARKET.
- Carefully inspect the pendant's fixture wires.
  Neutral fixture wire: White
  Hot fixture wire: Black
  Ground wire: Bare wire
- 10. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a wire nut and wrap the connection with electrical tape.
- 11. Attach the neutral fixture wire from the pendant to the neutral junction box wire (usually white). Fasten each together with a wire nut and wrap the connection with electrical tape.
- 12. Attach the hot fixture wire from the pendant to the hot junction box wire (usually black). Fasten each together with a wire nut and wrap the connection with electrical tape.

DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

- 13. Please note that this product is suitable for 0-10V dimmer switches. Connect the purple wire (+) and the gray wire (-) to the dimmer switch as shown in Figure 2. BE SURE NO STRANDS ARE EXPOSED.
- $14. \ \ Connect the power wires (L) \ \ of the lamp together using the fast connector (P). Connect the black wire to the positive electrode and the white wire to the negative electrode of the fast connector (P).$
- 15. Gently tuck the wire connections(K) neatly into the ceiling junction box.
- 16. Place the mounting plate(A) over the center of the ceiling junction box.
- 17. Align holes in mounting plate(A) with holes in junction box and attach with two mounting screws(J) and two strengthen screw(N). Secure screws with a Phillips head screwdrive
- 18. Push canopy(B) up over the mounting plate(A) until it is flush with the ceiling.
- $19. \ \ Push collar \ (C1), (C2) \ through hole in \ canopy (B) \ and \ \ tighten \ them \ with \ an \ Allen \ wrench \ (U).$
- $20. \ \ Place the alabaster shade (F4) on the lamp body (M) and secure it with the thumb screws (Q1, Q2) as shown.$
- 21.Repeat step 18 and install the remaining the alabaster shade.
- 22. Restore power to junction box and test fixture

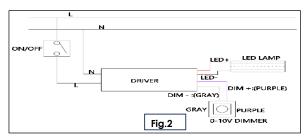

### CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.