
ASSEMBLY INSTRUCTIONS

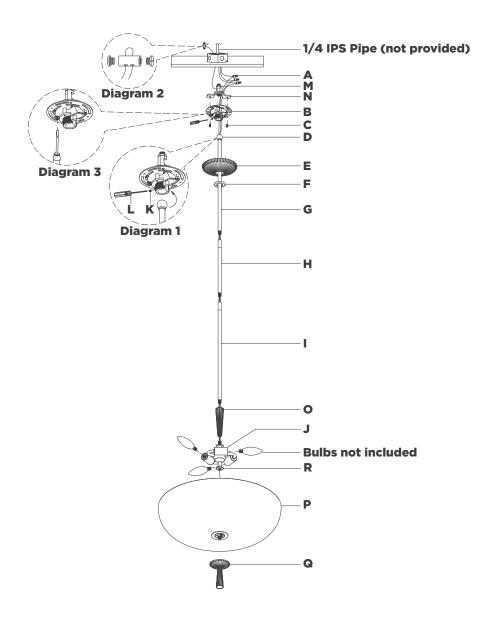

Pascal 19" Bowl Pendant

Item # ARN5415

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver Slotted Screwdriver Wire Strippers
Slip Joint Pliers Measuring Tape Chain Pliers

Wire Cutters

PERSONS REQUIRED: Two


- 1. Carefully remove all parts from the box. Place on a clean, soft surface.
- 2. Remove canopy **(E)** from mounting plate **(B)** by removing collar ring **(F)**.
- 3. Remove mounting bracket **(N)** from mounting plate **(B)** by removing screws **(C)**.
- 4. Remove hickey **(M)** from mounting bracket **(N)** by removing hex nut.
- It is recommended to install a 1/4 IPS threaded pipe, secured to a structural member of the building. Then install hickey (M) into threaded pipe and tighten with wrench.
 - **NOTE:** Item must be supported independent of the junction box due to hanging weight.
- 6. Install threaded nipple to hickey (M), then install mounting bracket (N) to threaded nipple by tightening locknut.
- 7. Install mounting plate **(B)** to mounting bracket **(N)** and secure with screws **(C)**.







ASSEMBLY INSTRUCTIONS

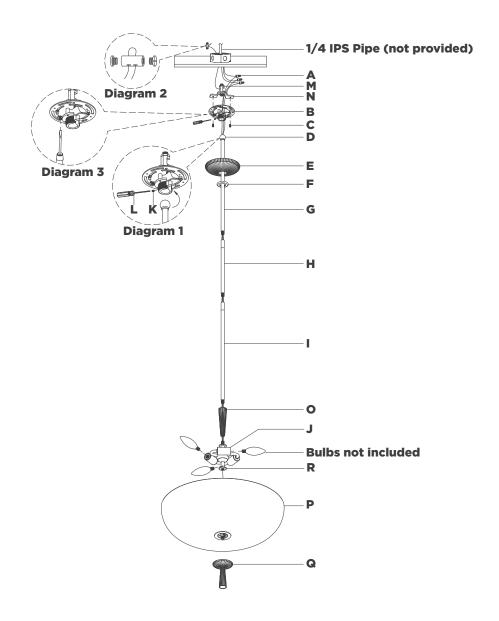

Pascal 19" Bowl Pendant

Item # ARN5415

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.


- 8. Feed safety cable through cluster **(R)**, then shade **(P)** to bottom of cluster **(R)**.
 - **NOTE:** Do not overtighten otherwise glass shade could be damaged.
- 9. Feed electrical wires and safety cable through rod (O), then thread to fixture body (J).
- 10. Feed wires through bottom rod (I) and connect to rod (O). Repeat for middle rod (H), connecting to bottom rod (I).
- 11. Continue feeding wires through collar ring **(F)**, canopy **(E)** and top rod **(G)**.
- Holding fixture upright, slide collar ring (F) and canopy
 (E) down and rest on rod (O). Then connect top rod (G) to middle rod (H).
 - **NOTE:** Slide components down slowly to avoid damage. **NOTE:** It is recommended to have a helper assist in supporting the fixture for step 12.
- 13. Hang fixture swivel ball (D) to the center of mounting plate (B) and secure with set screw (K) using provided screwdriver (L) (see diagram 1).
- 14. Cut excess wires, being sure to leave enough to reach the junction box. Separate wires and strip insulation on each 5/8".
- 15. Loosen cable lock and install to end of safety cable. Run safety cable through junction box and around structural member of building. Insert cable through cable lock and tighten the ends with a screwdriver to secure (see diagram 2).







ASSEMBLY INSTRUCTIONS

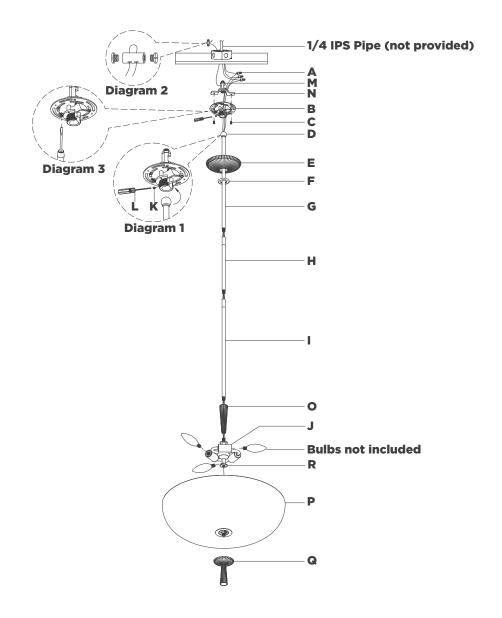

Pascal 19" Bowl Pendant

Item # ARN5415

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

- 16. Wrap fixture ground wire (bare copper) around the green grounding screw (see diagram 3). Tighten. Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using wire nut (A). **NOTE:** It is imperative that the fixture is grounded.
- 17. Connect fixture neutral wire (white) to the supply neutral wire (usually white) using wire nut (A).
- 18. Connect fixture hot wire (black) to the supply hot wire (usually black) using wire nut (A).
 - **CAUTION:** Do not reverse the hot and neutral connections.
- 19. Make sure all wire connections are tight, then carefully tuck into the junction box.
- 20. Install canopy (E) to mounting plate (B) and secure with collar ring (F).
- 21. Install light bulbs into the sockets.
- 22. Thread finial (Q) to bottom of shade (P).

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.



