

UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE NO. : 21645 PARTS LIST& Hardware List :

1	Canopy	1pc	7	HEX NUT	2pcs
2	Mounting Bar	1pc	8	Wire Connector	6pcs
3	Finial	1pc	9	Ceramic Shade	5pcs
4	Outlet Box Screw(1-1/8")	2pcs	10	Socket Ring	5pcs
5	Green Ground Screw	1pc	11	Circle	5pcs
6	NIPPLE	1pc	12	Tool	1pc

*Please make sure you have all the parts indicated above before you begin assembling this item. we suggest a professional electrician for all lighting fixture installations. Please read wiring instructions before you begin assembling and installing your Ceiling Lamp

WARNING:BEFORE INSTALLING,Make sure electricity supply is shut off to avoid a possible electric shock.

ASSEMBLY INSTRUCTIONS






1. Take the parts carefully out of the carton, Place them on a flat surface, and make sure the parts will not be damaged.
2. Remove the hex nut, finial under the Canopy from the nipple, and take out the Mounting Bar. Attach the Mounting Bar to the Outlet Box by using two Outlet Box Screws. (See Figure1)
3. Adjust the lengths of black rayon wire holding each glass, to the lengths you desire. WE HAVE PRESET THE WIRE LENGTHS IN A CASCADE (as shown in our photo) you are welcome to adjust the cord lengths to your own taste leaving enough to make your connections. Make sure to remove extra wire, making sure you don't leave it attached or tucked in the canopy.
4. Tighten down the wires before corrections. Pull the black rayon wire then tighten it by the hasp.
5. For each of the 5 cords draw all of the wires together as follows:
 - A. Connect all the ground wires together with the supplied ground wire (Green wire),
 - B. Connect all the null wires together with the supplied null wire (White wire)
 - C. Connect all the live wires together with the supplied live wire (black wire)Tuck them carefully inside the Outlet box. (See Figure 3)
6. Install Ground Wires in the Universal Bar with the supplied Green Ground Screw.
7. Place the null wire, white wire evenly against the null wire from the Outlet Box and place the live wire, black wire evenly against the live wire from the Outlet Box. (Connecting the Wire---See Figure 2)
8. Attach the Canopy to the Mounting Screws and secure with hex nut, finial (See Figure 1)
9. Put the Ceramic shade and circle through the socket ring, secure with the socket ring, tool.
10. Install 5*60W A19 bulbs (Not Included) into the socket of the fixture.

UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE NO.: 21645

ILLUSTRATION

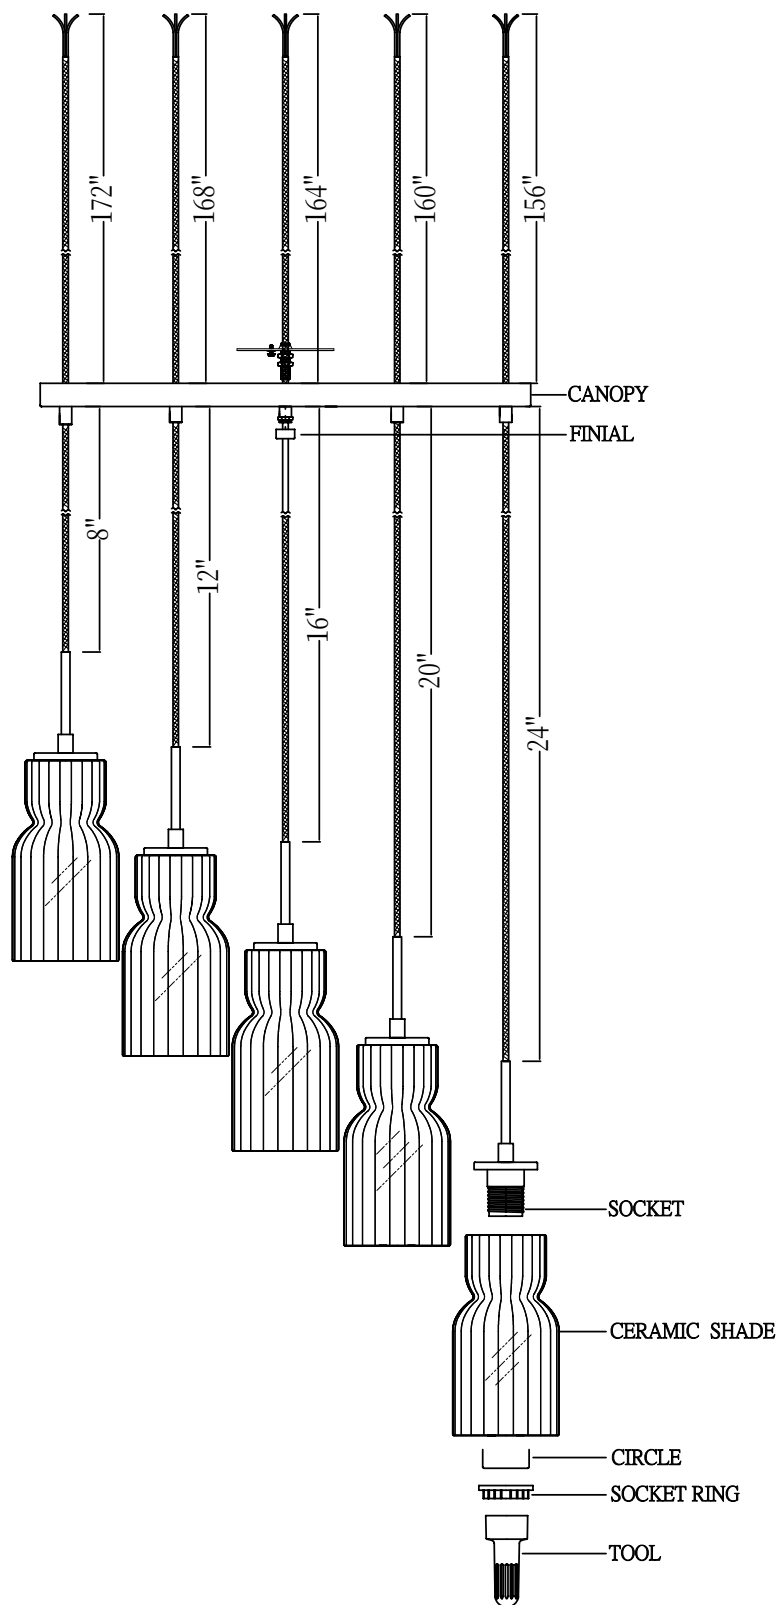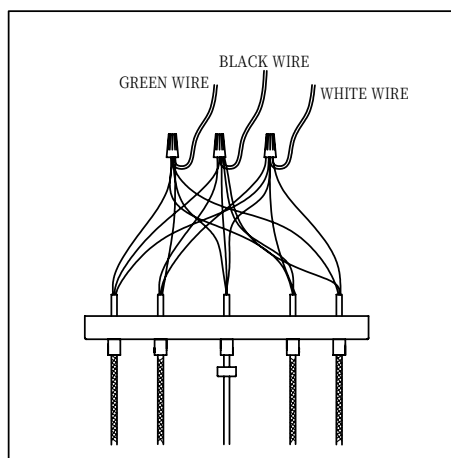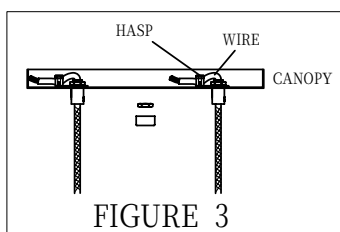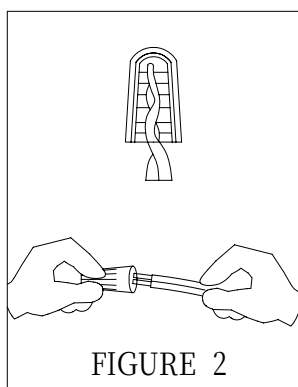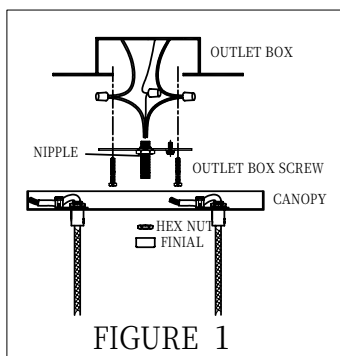

POBOX 558/3325 GRASSYHILLRD ROCKY MOUNT VIRGINIA 24151

www.uttermost.com