

22596


WARNING:

TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF
WHILE POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

We suggest a licensed professional electrician for installation

Installation Steps

- Turn power off at fuse or circuit box before starting installation process.
- 2. Carefully unpack your new fixture and lay out all the parts on a clear surface.
- Attach the Universal Bar to the Outlet Box by using two Outlet Box Screws.
- Install the Ground Wire in the Universal Bar with the supplied Green Ground Screw.
- 5. Place the null wire ,ribbed wire evenly against the ribbed wire from the Outlet Box and place the live wire, smooth wire evenly against the smooth wire from the Outlet Box, (Connecting the Wire---See Figure 2) Carefully tuck wires back into the Outlet Box.
- 6. Secure the Universal Bar(B) to the Back Plate, Fix it by two pieces of Screws(A &C).
- 7. Place Shade(E) on to Socket(D), secure with Ring(F).
- 8. Install 1*40W,E12 bulb G(type B) (Not Supplied), in accordance with the fixture's specifications.

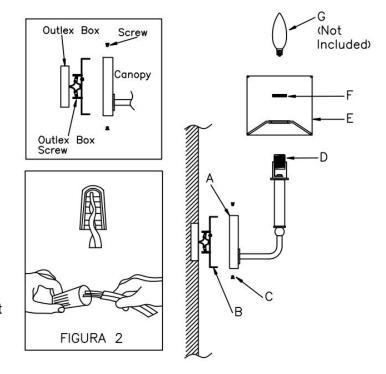

DO NOT EXCEED THE MAXIMUM WATTAGE RATING!

PO BOX 558/3325 GRASSY HILL RD ROCKY MOUNT VIRGINIA 24151 www.uttermost.com