

UTTERMOST

ASSEMBLY INSTRUCTIONS


Items Included:-

Wooden/Iron Shelf – 6


Iron Legs – 4

Bolts – 50


Tool - 1

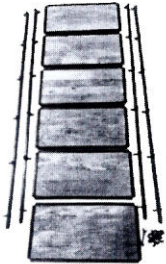


Step 1 : Place the items as shown in the picture

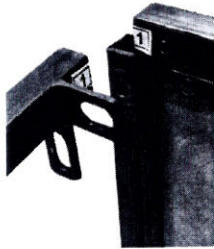

Step 2 : Take Iron Leg labeled #1 and match with the Wooden/Iron Shelf labeled #1

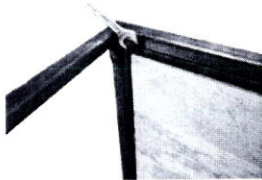

Step 3 : Align the two holes with the L bracket and tighten the Bolts using the Tool as shown in the picture.

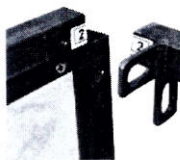


Step 4 : Repeat Steps 2 and 3 with Iron Legs and Wooden/Iron Shelves labeled #2, #3, and #4.

UTTERMOST

ASSEMBLY INSTRUCTIONS



Step 5 : The Etagere should match the photo as shown.

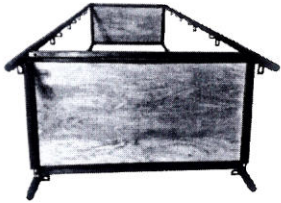

Step 6: Match #5 on the Iron Leg to #5 on the Wooden/Iron Shelf. Align the holes with the L shape bracket and tighten with the Bolts provided. This is the bottom shelf according to the photo shown.



Step 7 : Repeat step 6 with remaining Wooden/Iron Shelves #6, #7, #8, and #9. Assembly is complete.

