


296-11 TROPICALE 1LT SCONCE INSTALLATION INSTRUCTIONS

DISCONNECT POWER BEFORE RE-LAMPING OR WIRING THE FIXTURE READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.

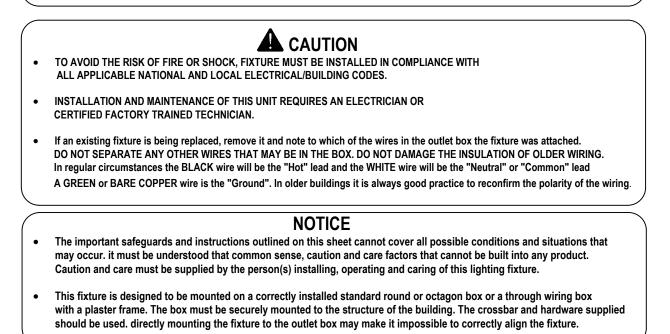

NOTICE:

CALIFORNIA PROP 65: THIS LIGHTING FIXTURE CONTAINS CHEMICALS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, BIRTH DEFECTS, AND/OR OTHER REPRODUCTIVE HARM. WASH HANDS AFTER USE.

FIXTURE PREPARATION

1. Remove the fixture, parts and parts bag(s) from the carton.

NOTICE:

• Before discarding the carton, double check to make certain that all parts are found.

FIXTURE INSTALLATION

- 1. Attach the mounting ring to the outlet box. using the mounting screw. (The green screw should face out).
- 2. Fasten the ground wire to the green or bare copper wire in the outlet box of the green screw on the mounting ring.



Never fasten the ground wire to the black or "hot" wire! Failure to follow this instruction could result in serious injury or death!

- 3. Fasten the white fixture lead to the white wire in the outlet box.
- Fasten the wires together with an approved fastener (wire nut). Starting about 1" below the fastener, tightly wrap the connection with electrical tape so that the connections seals the end of the fastener.




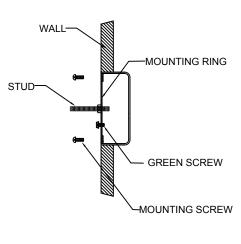


FIGURE-01



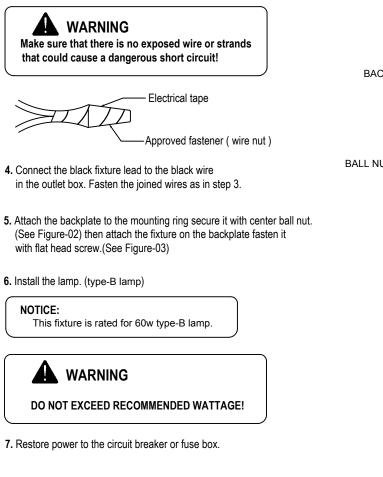

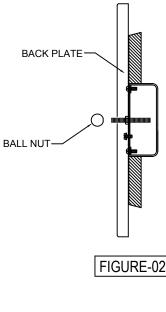

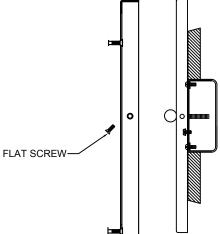

R-	GN	81
29	6-	11

ITEM ND.	PART ND.	DESCRIPTION
1	R-GN81-CAC	SOCKET COVER
2	R-GN81-ESK	SOCKET