

# JAMIE YOUNG CO

## Remedy Wall Sconce

### 4REME-SCAB

## SAFETY, INSTALLATION & CARE INSTRUCTIONS

### IMPORTANT SAFETY INSTRUCTIONS

We strongly recommend that all direct-wired lighting products be installed by a licensed electrician.

DO NOT EXCEED the rated bulb wattage. Keep flammable materials away from bulb. This light fixture is shipped with all internal wiring intact. Do not open the product or alter the wiring in any manner.



**WARNING:** Be certain that the power to the electrical junction box is turned off at the circuit breaker before installation. Turning the power off at a light switch is not sufficient to prevent electrical shock.

### CAUTION:

Prior to installation, locate ALL PARTS INCLUDED before disposing of packaging materials.

### Tools Required for Installation (Not Included):

|                                      |       |
|--------------------------------------|-------|
| Phillips and Flat-blade Screwdrivers | Drill |
| Pliers                               |       |
| Electrical Tape                      |       |

### Parts Required (not included):

| Qty. | Description               |
|------|---------------------------|
| 1    | Junction Box              |
| 1    | Ground Junction Box Wire  |
| 1    | Hot Junction Box Wire     |
| 1    | Neutral Junction Box Wire |

### Hardware and Parts Included:

| Part | Qty. | Description          | Part | Qty. | Description               |
|------|------|----------------------|------|------|---------------------------|
| (E)  | 1    | Mounting Plate       | (K)  | 2    | Light Bulb (Not Included) |
| (F)  | 1    | Back Plate           | (L)  | 2    | Socket                    |
| (G)  | 3    | Wire Connectors      | (M)  | 1    | Ground Screw              |
| (H)  | 1    | Ground Wire          | (N)  | 2    | Ball Nuts                 |
| (I)  | 1    | Hot Fixture Wire     | (O)  | 2    | Mounting Screw            |
| (J)  | 1    | Neutral Fixture Wire | (P)  | 1    | Shade                     |

### Important Safety Instructions:

This product must be installed in accordance with the applicable installation codes by a person familiar with the construction and operation of the product and the hazards involved.

This fixture has been rated for up to two (2) 25W-maximum Type B incandescent light bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

This fixture is meant for indoor use in dry locations only .

# JAMIE YOUNG CO

## Remedy Wall Sconce 4REME-SCAB

### SAFETY, INSTALLATION & CARE INSTRUCTIONS

#### WARNING:

Do not touch the bulb when the fixture is turned on. Do not look directly at the lit bulb.

Keep flammable materials away from the lit bulb.

To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug the fixture and allow it to cool prior to replacing the light bulb


#### INSTALLATION PROCEDURE: Refer to Figure 1.

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
2. Carefully unpack all fixture parts and hardware and lay them out on a clean work surface.
3. Use wire strippers to prepare the ends of the two wires so that there is about 1/2" of exposed wire for the Wire Connectors (G).
4. Carefully inspect the fixture wires. The Neutral Fixture Wire (J) is white. The Hot Fixture Wire (I) is black, and the Ground Wire (H) is bare cooper wire.
5. Attach the Ground Wire (H) from the fixture to the Ground Junction Box Wire (B); it usually has green insulation around it or is bare wire. Fasten them together with a Wire Connector (G) and wrap the connection with electrical tape. Make sure that no wire strands are exposed. If your Junction Box (A) does not have a Ground Junction Box Wire (B), insert the Ground Screw (M) into the Mounting Plate (E) where it's marked "Ground", and wrap the fixture's bare ground wire around the Ground Screw (M). Tighten the screw to clamp the Ground Junction Box Wire (B) between the Ground Screw (M) head and the Mounting Plate (E). It is imperative that the Junction Box (A) in your home be properly grounded.
6. Connect the Neutral Fixture Wire (J) to the Neutral Junction Box Wire (D); it usually has white insulation around it. Fasten them together with a plastic Wire Connector (G) and wrap the connection with electrical tape. Make sure that no wire strands are exposed.
7. Connect the Hot Fixture Wire (I) to Hot Junction Box Wire (C); it usually has black insulation around it. Fasten them together with a plastic Wire Connector (G) and wrap the connection with electrical tape. Make sure that no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
8. Gently tuck the wire connections neatly into the Junction Box (A).
9. Fix Mounting Plate (E) to Junction Box (A) with Mounting Screws (O).
10. Fix Back Plate (F) to Mounting Plate (E) with Ball Nuts(N) .
11. Install Light Bulb (K) (Not Included) to Socket (L).
12. Hang Shade(P) onto the Back Plate(F).
13. Restore power to Junction Box (A) and test the fixture.

# JAMIE YOUNG CO

## Remedy Wall Sconce 4REME-SCAB

Installation Procedure (Figure 1):

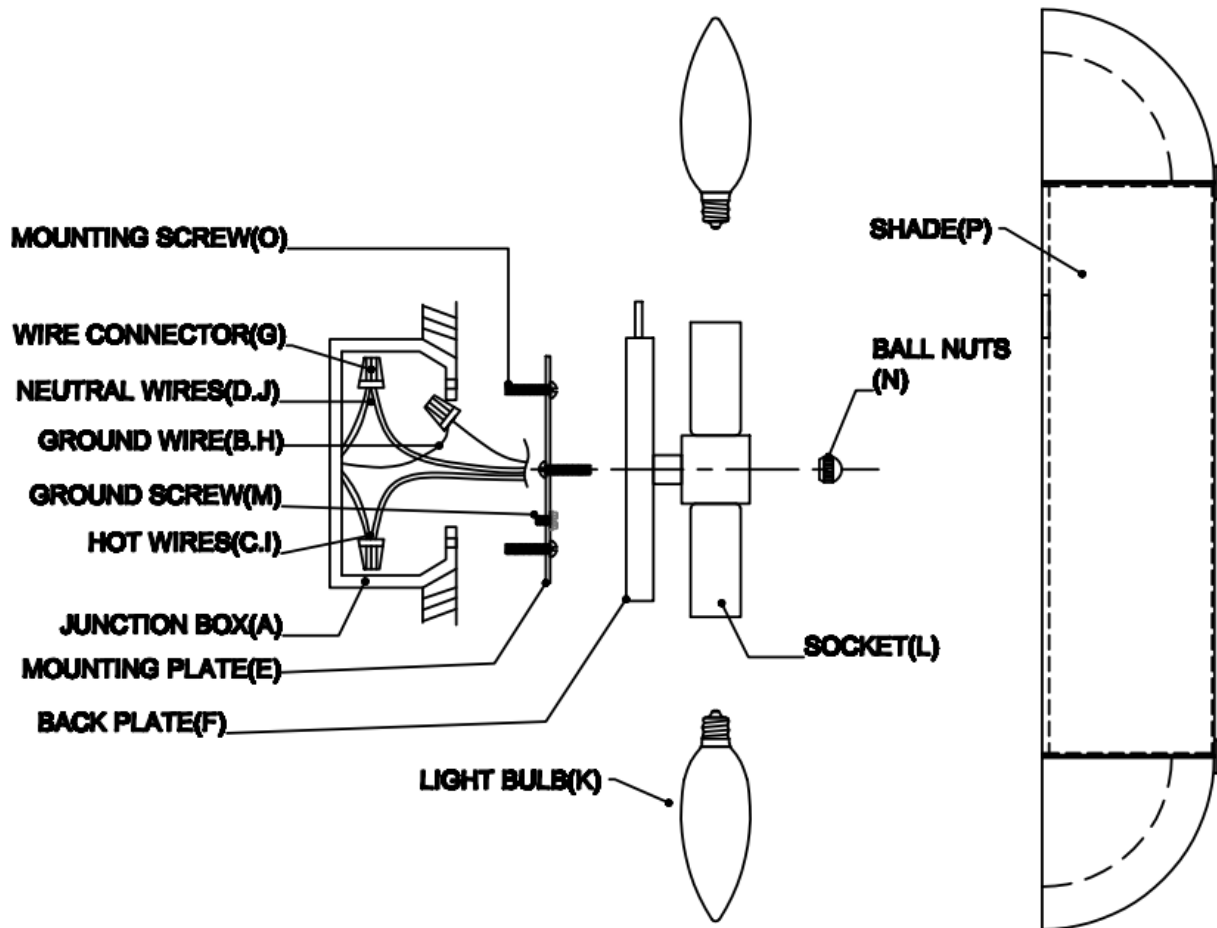

### CARE & CLEANING:

To clean, wipe the fixture ONLY with a soft, dry cloth.

SAVE THESE INSTRUCTIONS