
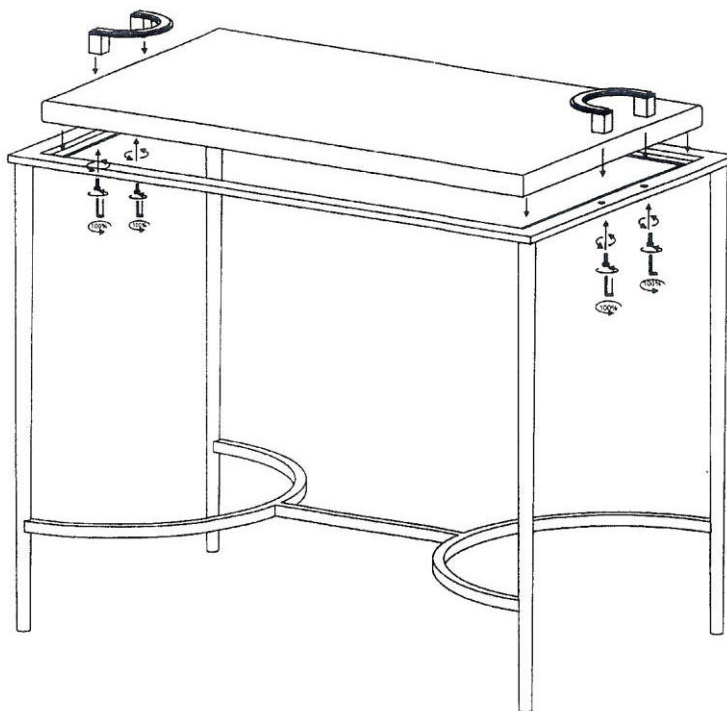


UTTERMOST

ASSEMBLY INSTRUCTIONS

ITEM # 50352

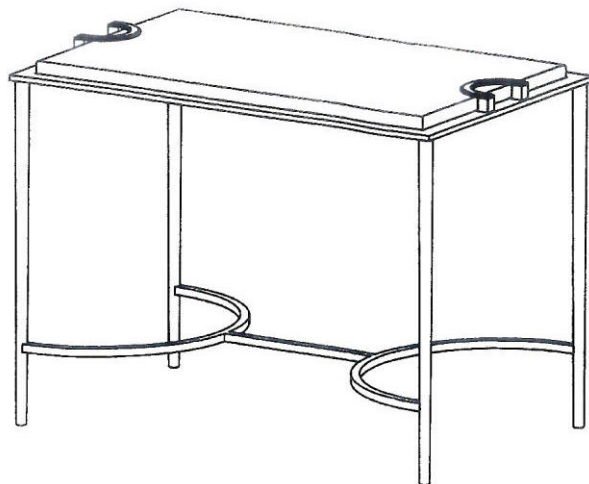

Glass to be placed carefully on the metal frame and short secure all screws tightly by using Allen Key.

Warning: To refrain from damaging the glass, avoid sudden impact of glass on metal frame.