




SAVOY
HOUSE

ITEM NO: 7-2916-1

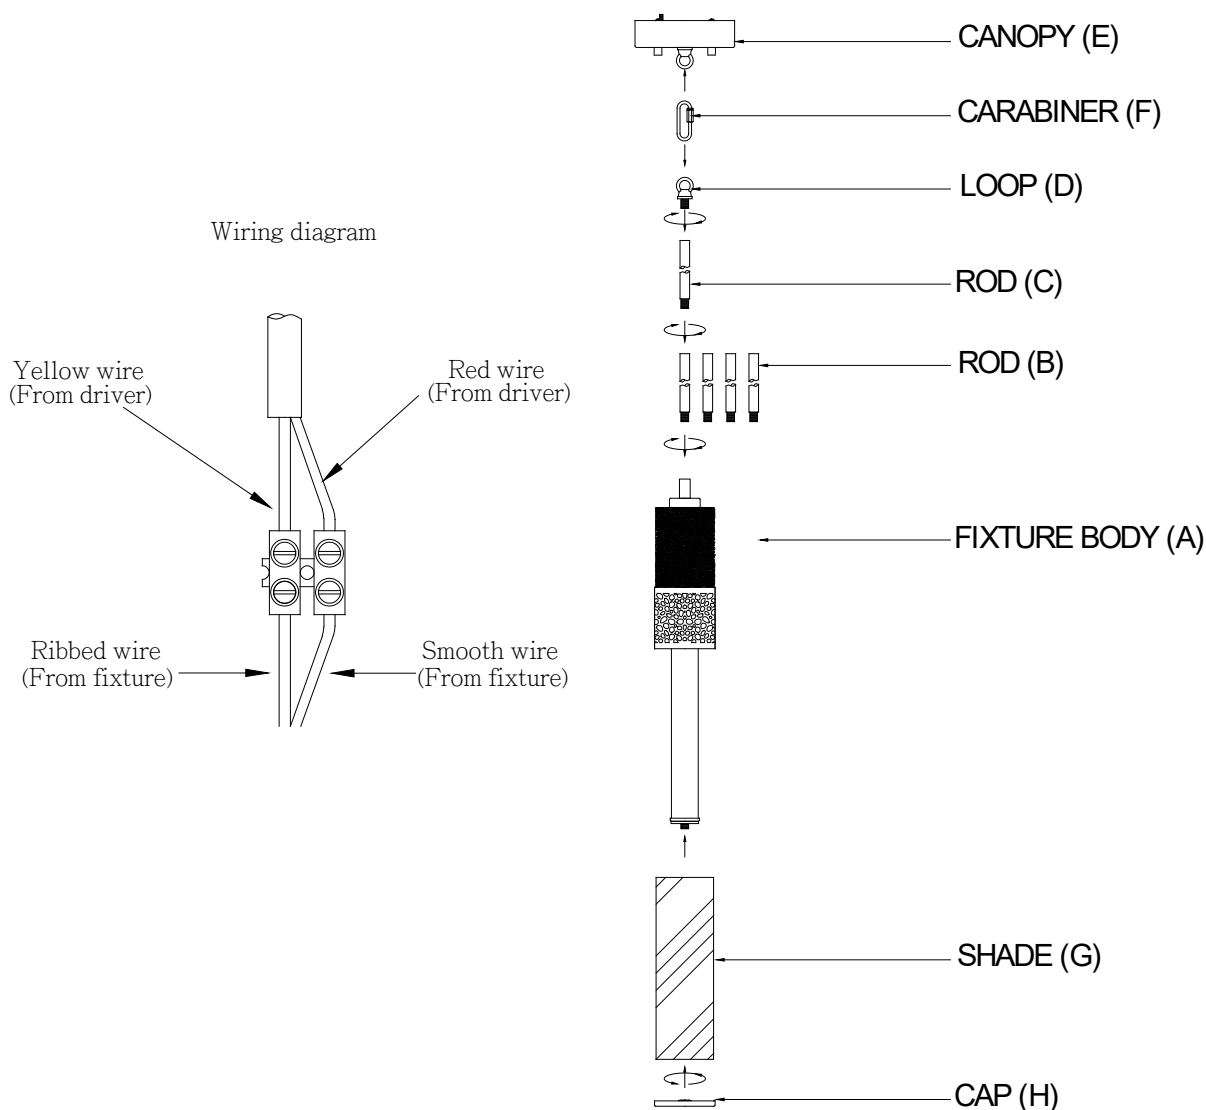

ASSEMBLY INSTRUCTIONS

1. Carefully unpack and identify all parts referring to illustration for parts identification.
2. Turn the power to the installation point OFF.
3. Unravel the supply power and ground wires and pass them through the rods (B), the rod (C), the loop (D) and the canopy (E).
4. Thread the bottoms of rods (B) and rod (C) into the fixture body (A) as shown, and hand-tighten until snug.
5. Thread the loop (D) to the uppermost rod. Hand-tighten until snug.
6. Use carabiner (F) to connect loop (D) to the loop on the canopy (E) and twist the locking mechanism to secure.
7. Place the shade (G) onto the fixture body (A) as shown, and secure it with the cap (H).
8. Refer to the additional installation instructions included with the product for wiring and installation.
9. Restore power to the installation point and retain this sheet for future reference.