



1718 W. Fullerton Chicago, IL 60614
 Ph: 773.770.1195 • Fax: 773.935.5613
www.PureEdgeLighting.com • info@PureEdgeLighting.com
 © 2016 PureEdge Lighting. All Rights Reserved.

Installation Instructions for TruLine 1A Inside Corner and Outside Corner Channel Connector

TL1A_IC


IMPORTANT INFORMATION

- This instruction must be used concurrently with other TruLine 1A BIY installation instructions.
- This product is wall or ceiling mount.
- This instruction shows a typical installation.

SAVE THESE INSTRUCTIONS!





Section One: Install Corner Channel Connector

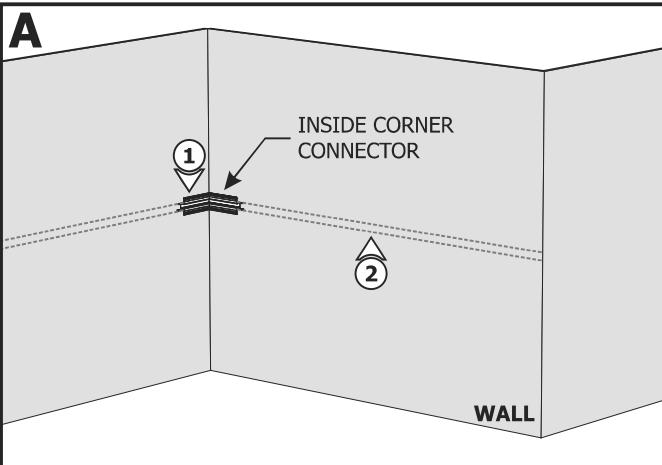

Inside Corner Channel Connector:



- 1: Place the Inside Corner Connector against a corner. Ensure the connector is aligned with the TruLine Channel installation location.
- 2: Mark the installation location of the Inside Corner Connector on the drywall using a pencil or chalk line before cutting.

- 3: Slide the TruLine 1A channel into the joiner bars of the Inside Corner Channel Connector. Tighten the two M3 set screws on each joiner bar with a 1.5mm Allen wrench.
- 4: Repeat step 3 for the other end of the Inside Corner Channel Connector.

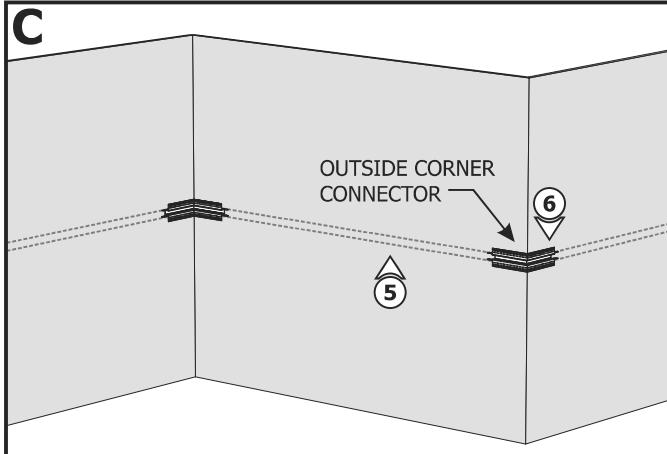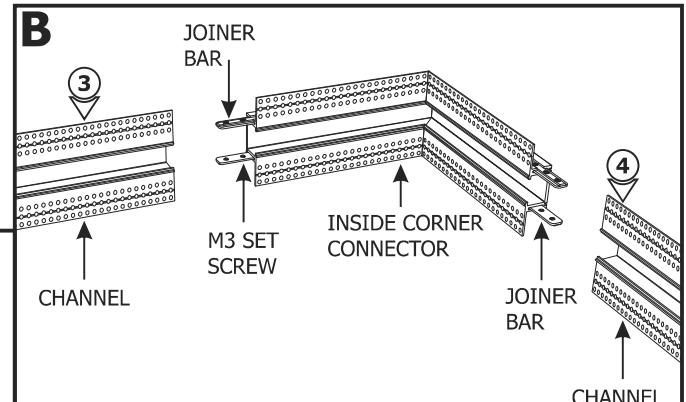

Outside Corner Channel Connector:

- 5: Place the Outside Corner Connector against a corner. Ensure the connector is aligned with the TruLine Channel installation location.
- 6: Mark the installation location of the Outside Corner Connector on the drywall using a pencil or chalk line before cutting.

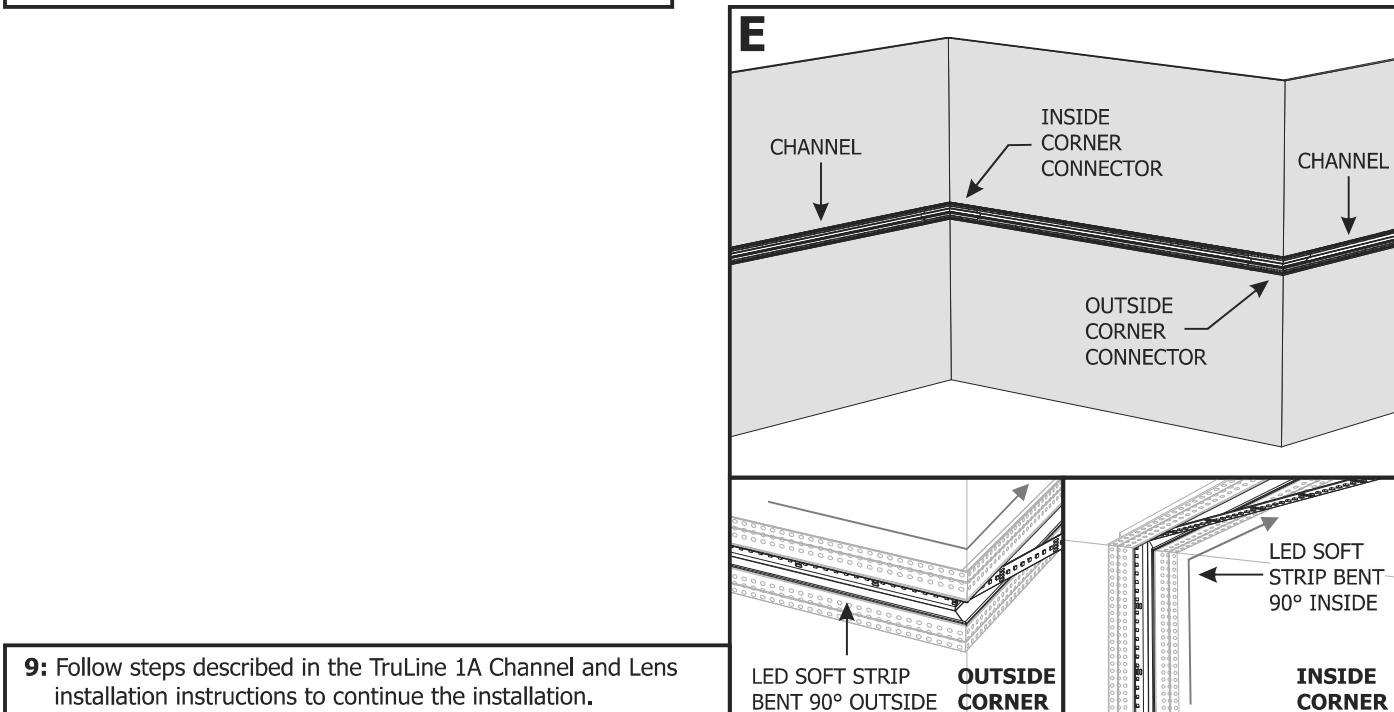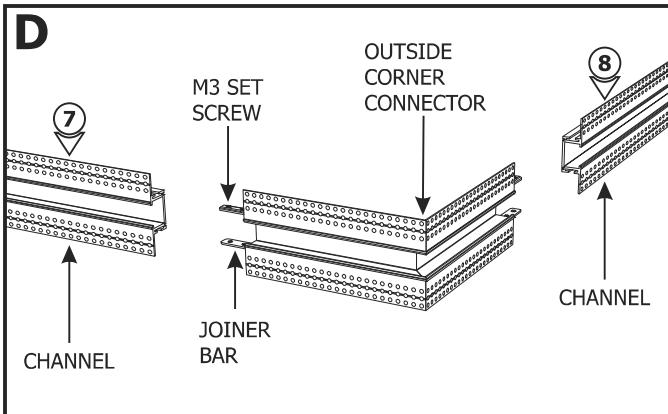

Section Two: Lenses

