

Installation Instructions for Monorail 2 Circuit Fast Jack Fixture Connector


IMPORTANT INFORMATION

- This product is ETL listed for indoor dry locations.
- The product is intended to be used with Edge Lighting Monorail 2 Circuit systems only.


SAVE THESE INSTRUCTIONS!




Install the Fixture Connector

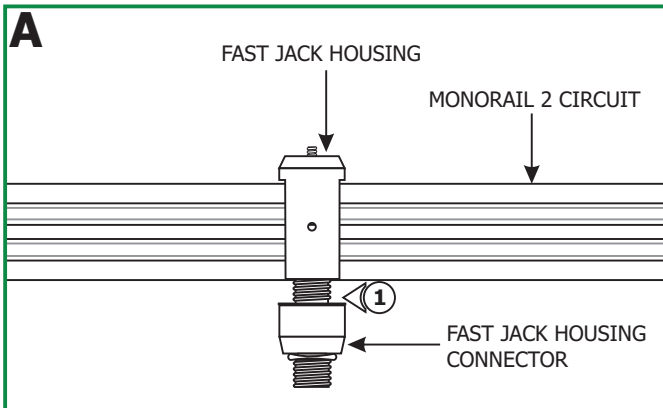

- 1:** Place the Fast Jack housing onto the Monorail 2 Circuit and use fingers to tighten the Fast Jack housing connector to the Fast Jack housing. **Make sure that the Fast Jack housing connector is not cross threaded.**

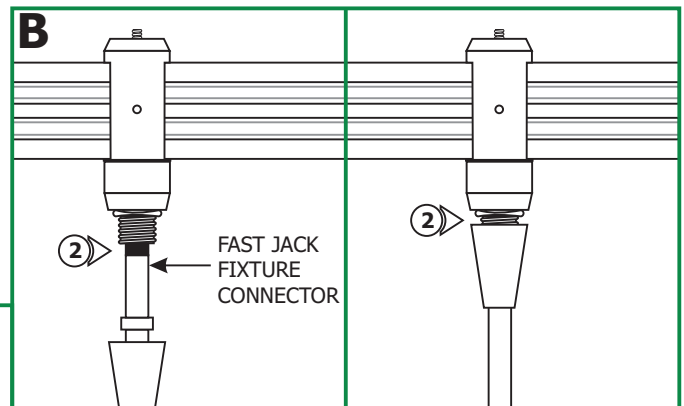

- 2:** Use fingers to tighten the Fast Jack fixture connector into the Fast Jack housing connector.

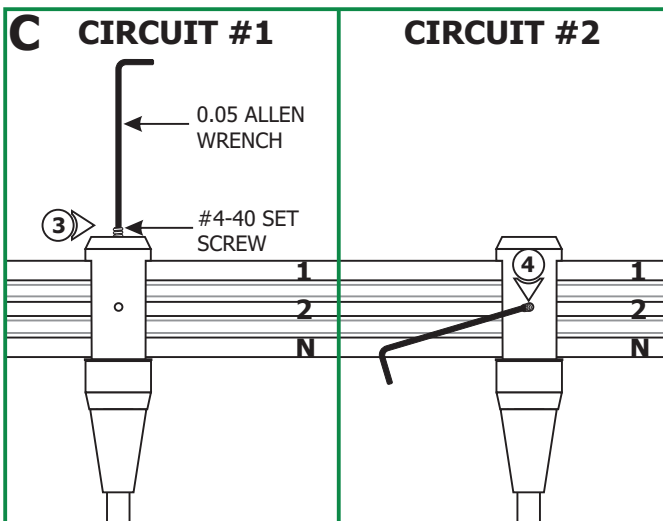

- 3:** To power the fixture from circuit #1, top and bottom (neutral) rails, tighten the #4-40 set screw on top of the housing with the 0.05 Allen wrench. **Make sure this set screw connection is very tight.**
- 4:** To power the fixture from circuit #2, middle and bottom (neutral) rails, remove the #4-40 set screw from the top of the housing and tighten it into the side threaded hole with the 0.05 Allen wrench. **Make sure this set screw connection is very tight.**

NOTE: To avoid shorting the system, do not use more than one set screw to select a circuit on the Monorail 2 Circuit connector.

NOTE: Do not load either circuit over the maximum system rating.