


## Installation Instructions for Monorail 2 Circuit Male End Flexible Connector


### IMPORTANT INFORMATION

- This product is ETL listed for indoor dry locations.
- The product is intended to be used with Edge Lighting Monorail 2 Circuit system only.
- This product jumps the power from one Monorail 2 Circuit run to the other Monorail 2 Circuit run.


**SAVE THESE INSTRUCTIONS!**

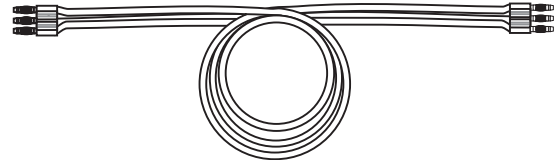

## Install the Monorail 2 Circuit Male End Flexible Connector

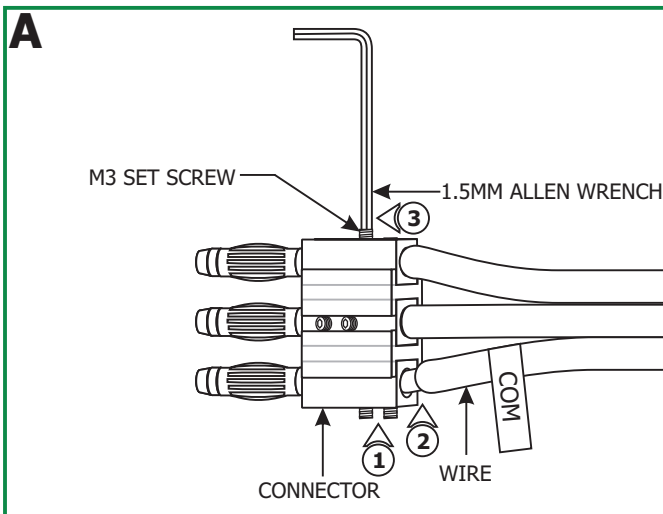

- 1: (OPTIONAL)** To shorten the adjustable cable loosen the six M3 set screws on one connector (**Do Not Remove**) with the 1.5mm Allen wrench provided, and pull the adjustable cable out of the connector.
- 2:** Shorten the adjustable cable to the desired length. Strip 3/8" off of the insulation from the end of the wires.
- 3:** Insert the stripped portion of the wires completely into the connectors and tighten firmly the six M3 set screws with the 1.5MM Allen wrench.

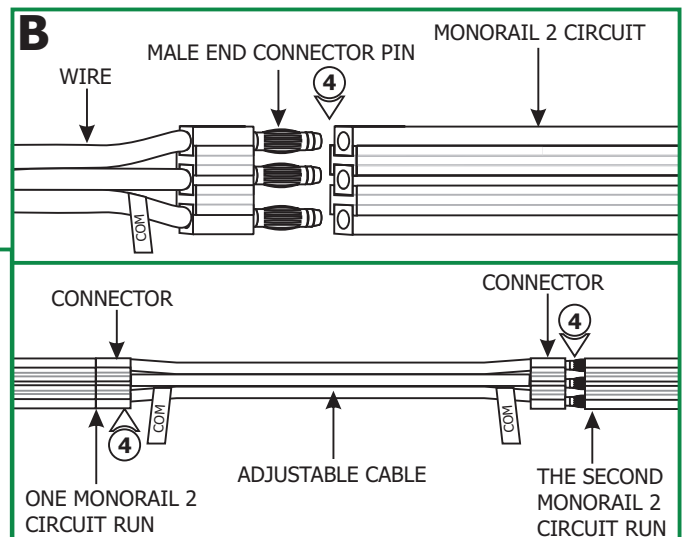

**NOTE:** Make sure that the connector with the "COM" tag is aligned with the bottom rail of Monorail 2 Circuit runs.

- 4:** Push one male end connector pins completely into one Monorail 2 circuit end run, and push the second connector pins of the other end completely into the second Monorail 2 circuit run. Make sure that the Monorail 2 circuit runs are supported by the standoffs. Refer to the instructions provided with the standoffs.