


Installation Instructions for Monorail 2 Circuit Straight Isolating Connector


IMPORTANT INFORMATION

- This product is ETL listed for indoor dry locations.
- This product joins and electrically isolates two Monorail 2 Circuit sections end to end.
- The product is intended to be used with Edge Lighting Monorail 2 Circuit systems only.


SAVE THESE INSTRUCTIONS!

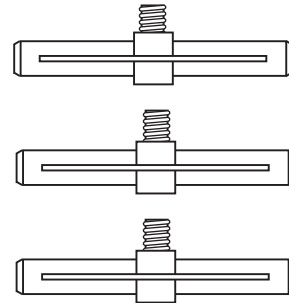


Install the Monorail 2 Circuit Straight Isolating Connector

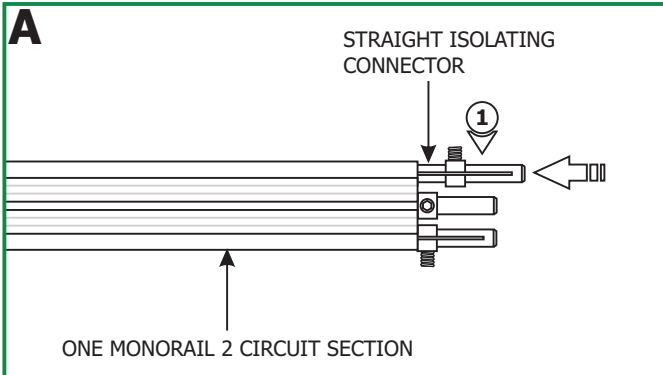

1: Push the straight isolating connectors completely into one Monorail 2 Circuit section end. **Make sure this Monorail 2 Circuit section is secured with the standoffs (Refer to the instructions provided with the standoffs).**

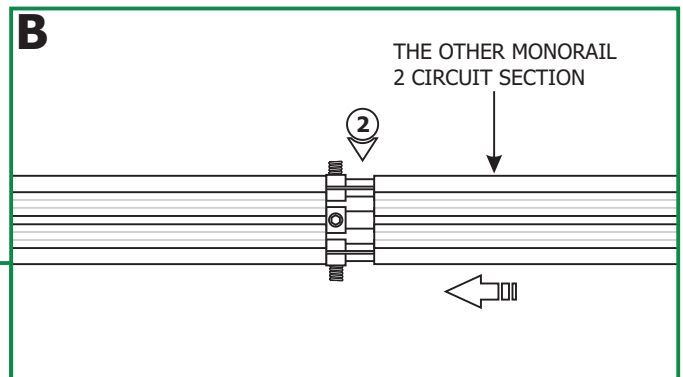

2: Push the other Monorail 2 Circuit section entirely onto the straight isolating connectors and simultaneously connect the Monorail 2 Circuit to the standoffs.

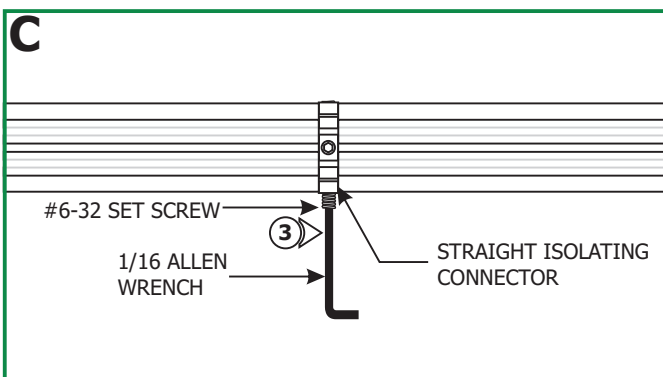

3: Tighten the #6-32 set screw on each of the isolating connectors firmly with the 1/16 Allen wrench. **Do not over tighten the set screws as this may strip the threads.**