

1718 W. Fullerton Chicago, IL 60614 Ph: 773.770.1195 • Fax: 773.935.5613 www.PureEdgeLighting.com • info@PureEdgeLighting.com © 2016 PureEdge Lighting. All Rights Reserved.


Installation Instructions for Lazer Line Direct/Indirect

LZUD-_


IMPORTANT INFORMATION


- This instruction shows a typical installation.
- This product is ETL listed.
- It is recommended more than one person assist in this installation.


SAVE THESE INSTRUCTIONS!

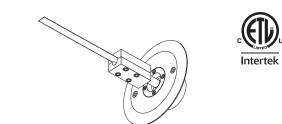


Section One: Install the Power Feed Turnbuckle

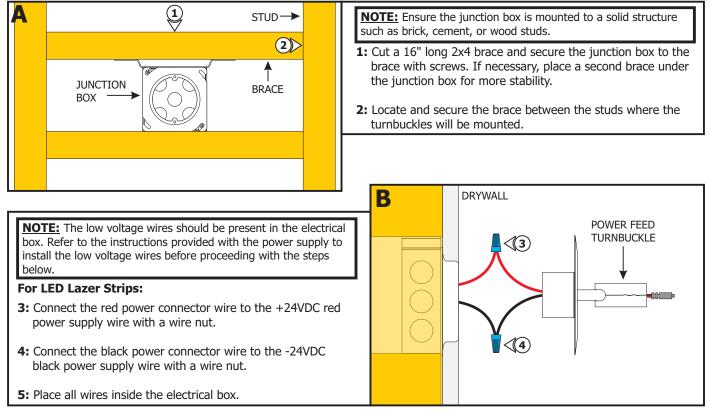


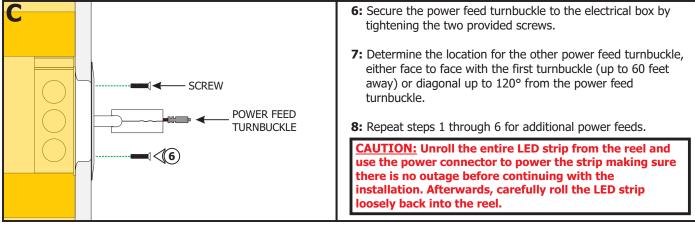

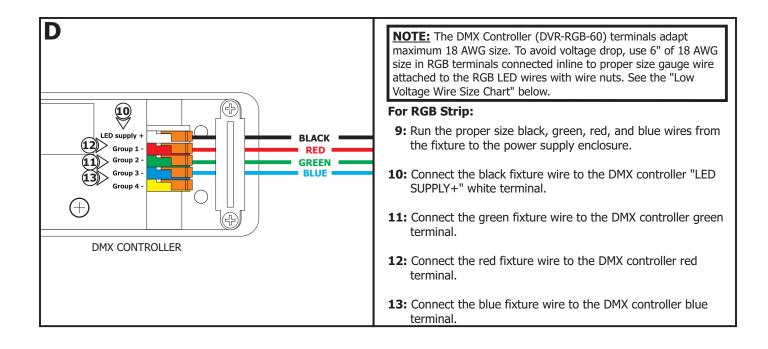

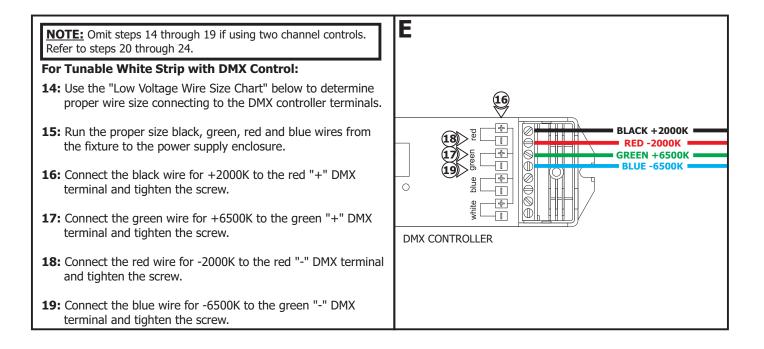


100W, 24VAC LOW VOLTAGE WIRE SIZE CHART						
3% VOLTAGE DROP	WIRE LENGTH IN FT	UP TO 31FT	32FT-49FT	50FT-81FT	82FT-124FT	
	WIRE SIZE	14 AWG	12 AWG	10 AWG	8 AWG	
	VOLTAGE AT END OF THE WIRE	23.28 VAC	23.29 VAC	23.28 VAC	23.28 VAC	

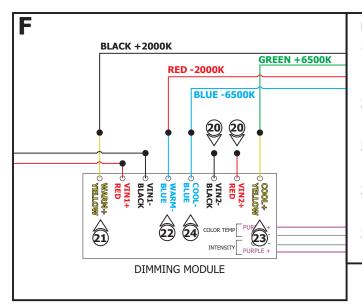

For Tunable White Strip with Two Channel Controls:


- 20: The Vin2+ Red and Vin2- Black wires are not used in this procedure. Cap the Vin2+ Red and Vin2- Black wires using wire nuts.
- 21: Connect the black wire for +2000K to the Warm+ Yellow dimming module wire using a wire nut.
- 22: Connect the red wire for -2000K to the Warm- Blue dimming module wire using a wire nut.
- 23: Connect the green wire for +6500K to the Cool+ Yellow dimming module wire using a wire nut.
- 24: Connect the blue wire for -6500K to the Cool- Blue dimming module wire using a wire nut.

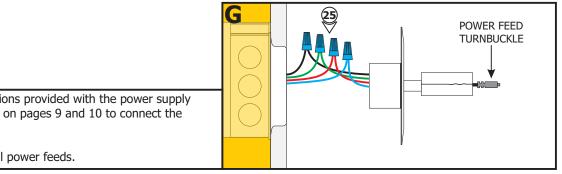

25: Refer to the instructions provided with the power supply and wiring diagrams on pages 9 and 10 to connect the wires properly.


26: Repeat for additional power feeds.


Section Two: Install the Non-Power Feed Turnbuckle

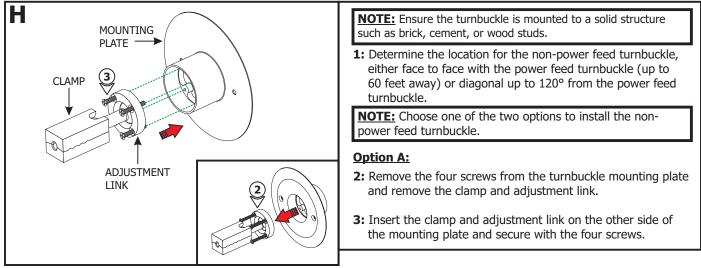

Ι	SURFACE	4: Place the turnbuckle against the surface and mark the two screw holes.


	J SURFACE	
NOTE: Omit step 5 if installing to a wood surface.	·5>	
5: Tap the anchors onto the marked points up to the threaded portion with a hammer. Screw in the threaded portion of the anchors with a Phillips screwdriver.	ANCHOR	

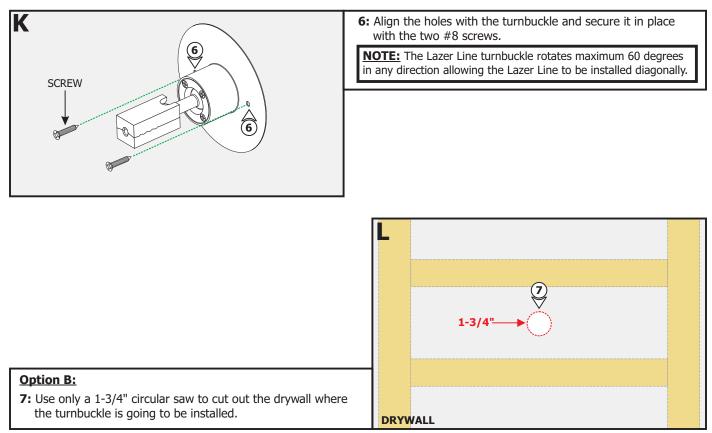

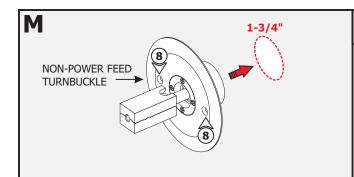


8: Place the turnbuckle into the hole and mark the two screw holes.


NOTE: Omit step 9 if installing to a wood surface.	9	<u>()</u>
9: Tap the anchors onto the marked points up to the threaded portion with a hammer. Screw in the threaded portion of the anchors with a Phillips screwdriver.	ANCHOR	3

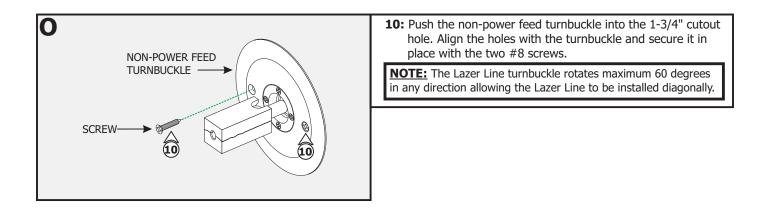


Section Three: Install the Aluminum Line Tape

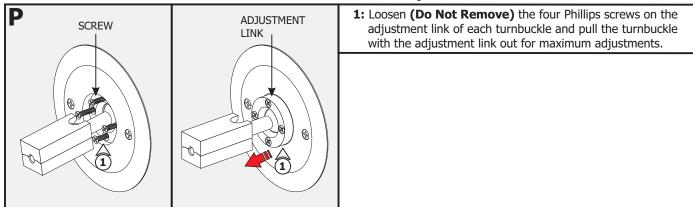



	2) LENGTH	NON-POWER FEED TURNBUCKLE		
2: Measure the distance between the two Turnbuckles hex head screws to determine the Aluminum Line Tape length.				
3: Cut the Aluminum Line Tape to determined	l length.			

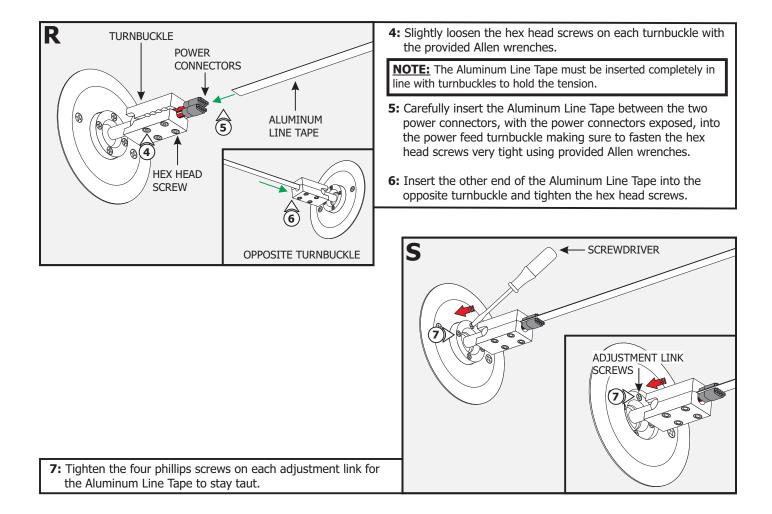

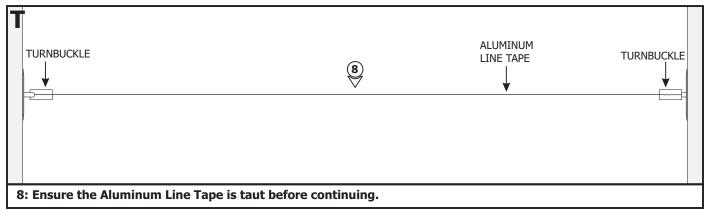



Section Four: Install the LED Strips - Two Power Feeds on One End

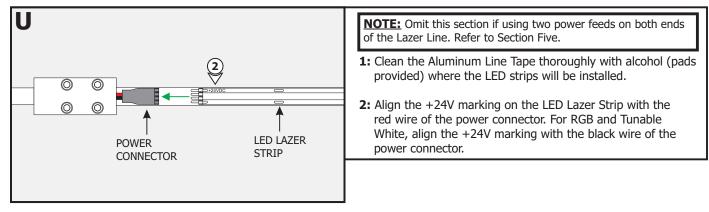

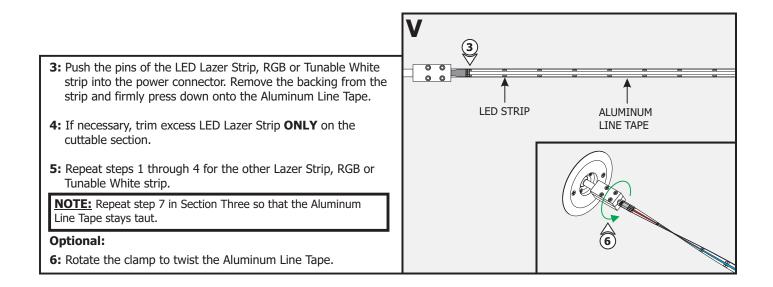



Section Five: Install the LED Strips - Two Power Feeds on Both Ends

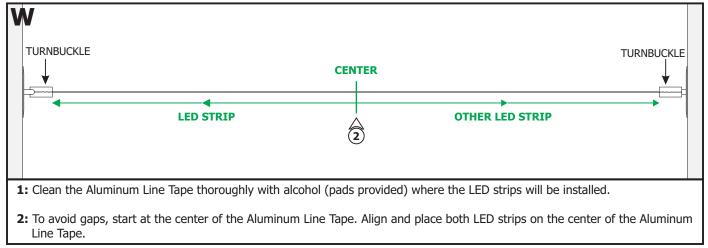

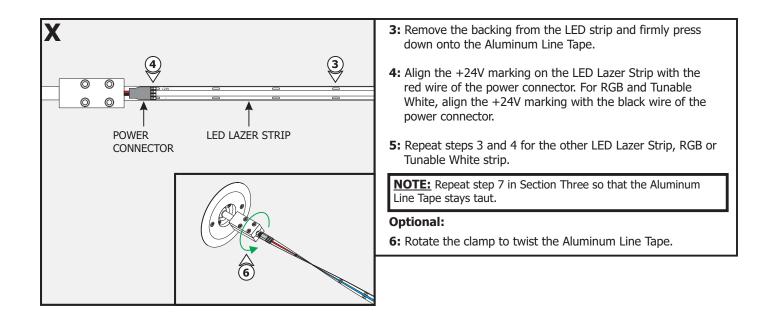

Section Six: Plaster the Turnbuckle (Optional)

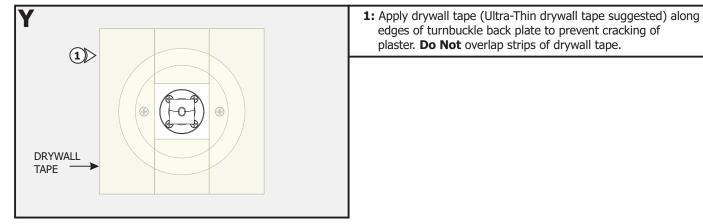

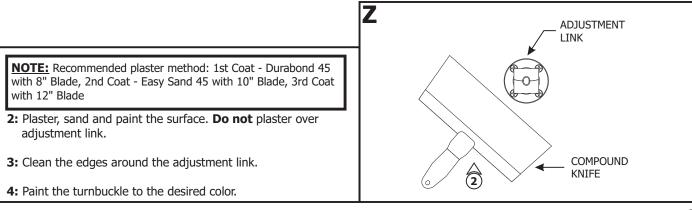

General Wiring Diagrams

