



1718 W. Fullerton Chicago, IL 60614
 Ph: 773.770.1195 • Fax: 773.935.5613
 www.PureEdgeLighting.com • info@PureEdgeLighting.com
 © 2016 PureEdge Lighting. All Rights Reserved.


Installation Instructions for Track Surface Mount Center Power Feed, Single Circuit with 4" Square Canopy

TS24-CP1-4SQ--_ _


IMPORTANT INFORMATION

- This instruction shows a typical installation.
- The fixtures used with the PureEdge Lighting systems must be identified for use with the corresponding PureEdge Lighting systems.

SAVE THESE INSTRUCTIONS!

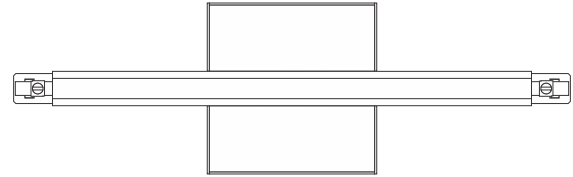

Section One: Install the Center Power Feed


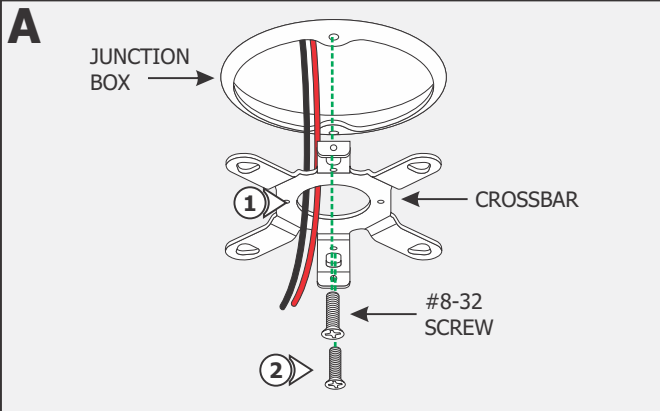


NOTE: Ensure that power to the junction box is **OFF** before beginning installation.


NOTE: Remote power supply wires must be present in the junction box. Refer to the instructions provided with the power supply.

- 1:** Feed the low voltage wires from the power supply through the crossbar center hole.
- 2:** Mount the crossbar to the junction box using two #8-32 screws.

- 3:** Feed the wires from the Power Feed Adapter through the hole on the Center Power Feed.
- 4:** Place the Power Feed Adapter inside the track and tighten the slotted screw with a flat-head screw driver to secure in place.

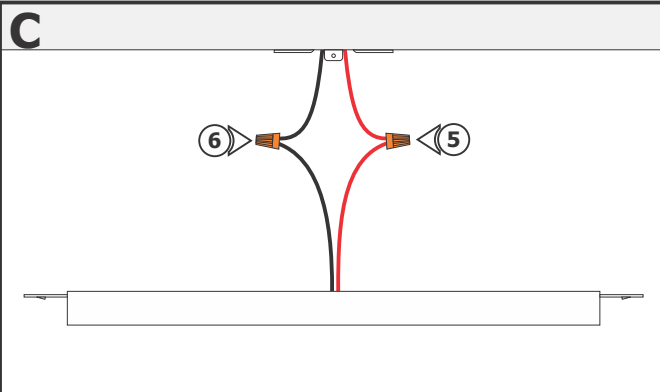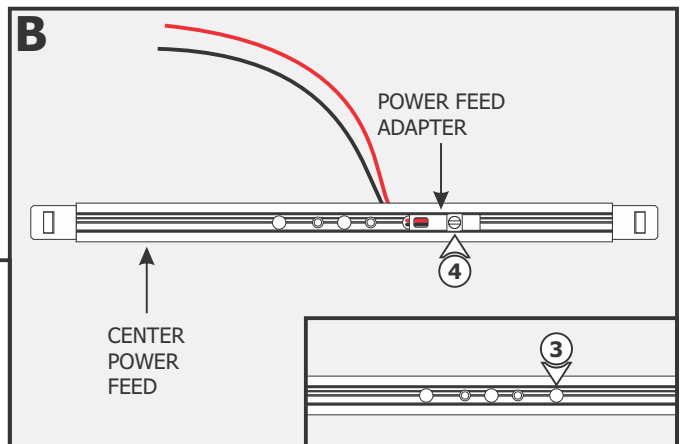


- 5:** Connect the low voltage +24VDC power supply wire to the red wire of the Power Feed Adapter with a wire nut.
- 6:** Connect the low voltage -24VDC power supply wire to the black wire of the Power Feed Adapter with a wire nut.
- 7:** Place all wire nut connections inside the junction box.

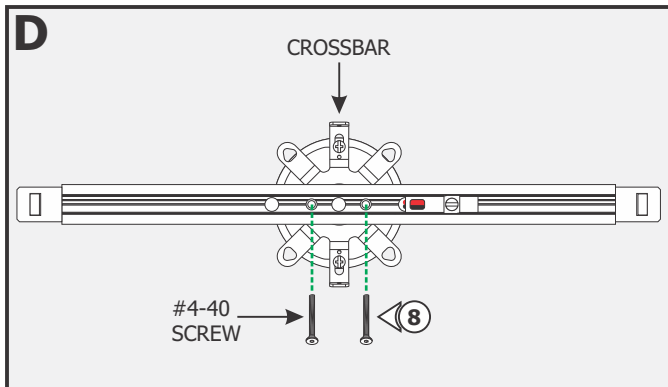


8: Secure the Center Power Feed to the crossbar with the two #4-40 screws using a 1/16" Allen wrench.

9: Place each canopy piece against the Center Power Feed and align the canopy holes with the crossbar holes. Secure the canopy pieces in place with the two #4-40 screws and 1/16" Allen wrench provided.

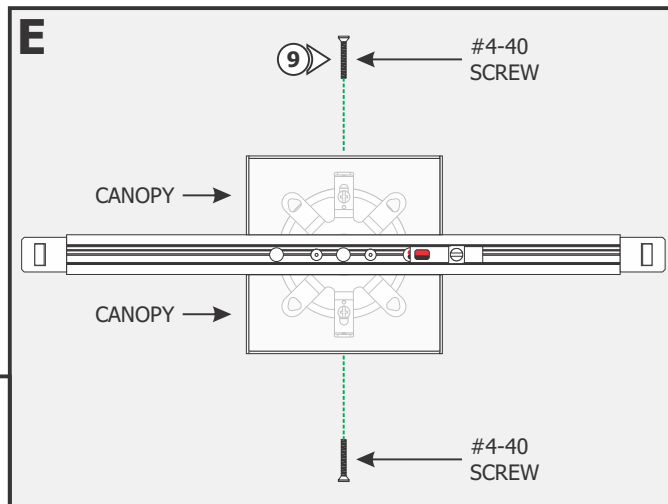

Section Two: Install the Track

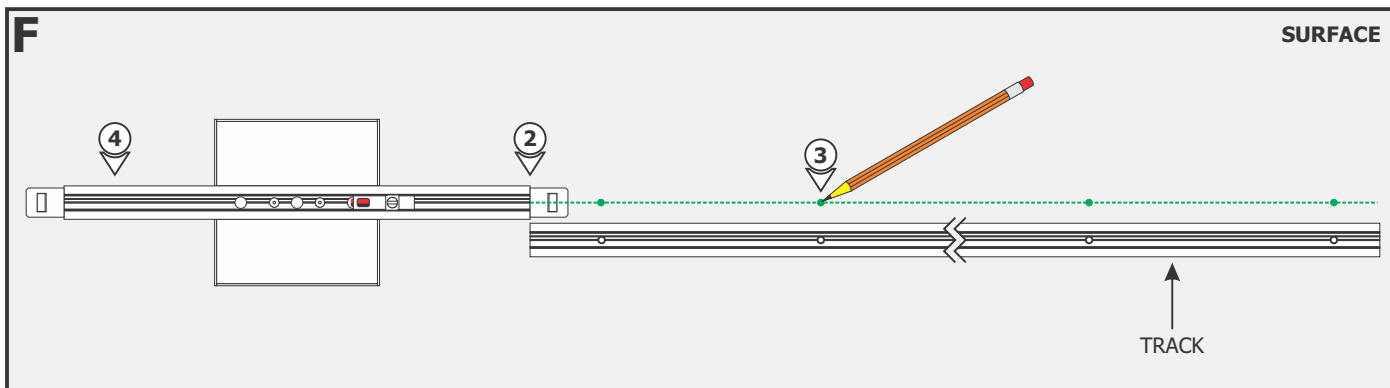


1: Determine the desired length of the track. Measure and cut the track to desired length using a chop saw with high speed RPM.

2: Align the end of the track with one end of the Center Power Feed. **(DO NOT join the tracks together.)**

3: Mark the location of the track holes on the surface, ensure they are centered with the Center Power Feed.


4: Repeat steps 1 through 3 for the other end of the Center Power Feed.

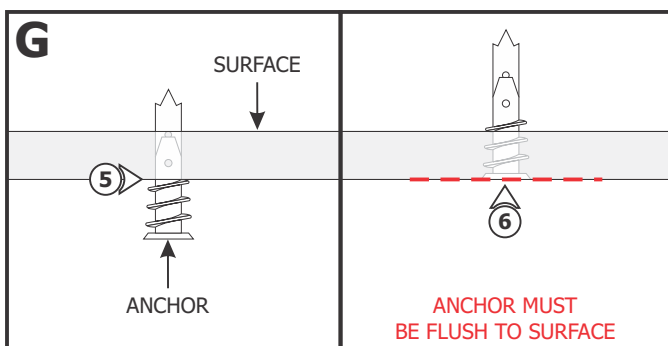


NOTE: Steps 5 and 6 are for drywall mounting. Omit these steps if mounting the clips to a wood surface directly.

5: Tap the anchors onto the marked points up to the threaded portion with a hammer.

6: Screw in the threaded portion of the anchors with a Phillips screwdriver.

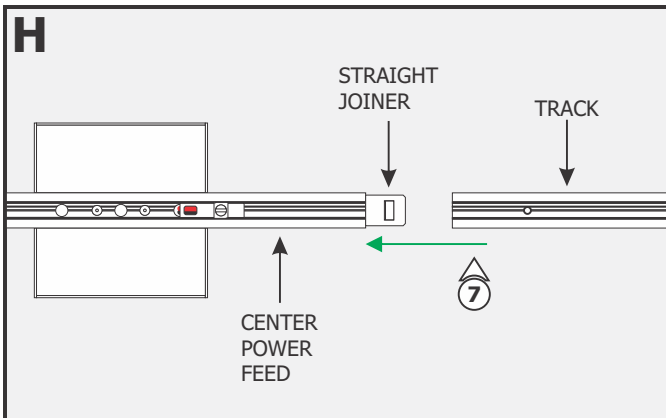


7: Slide the track into the straight joiner.

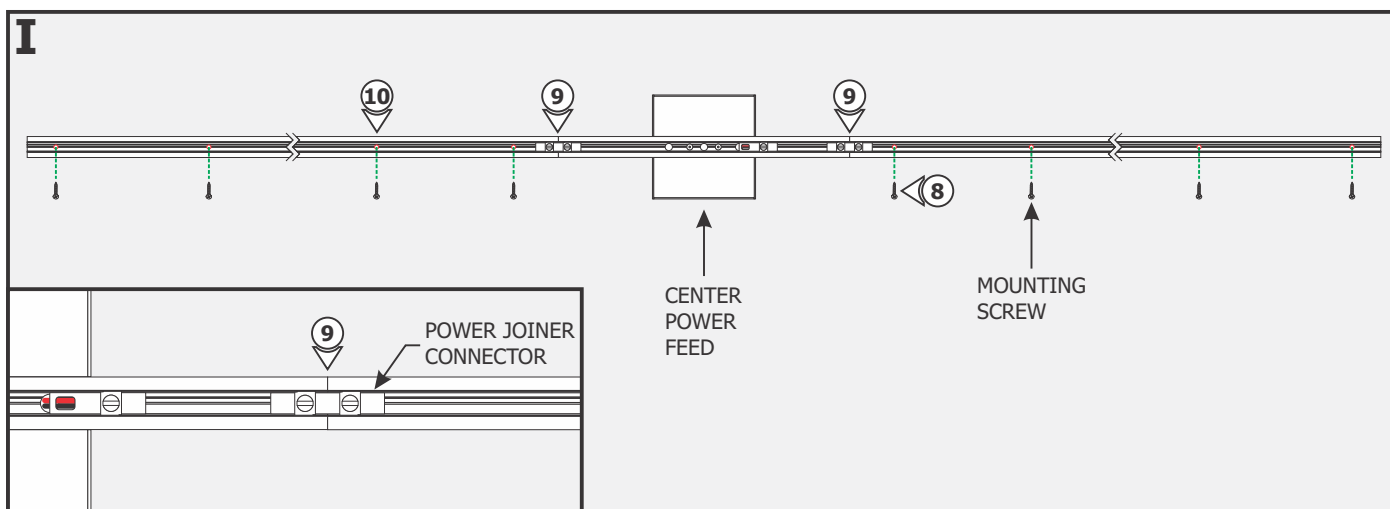

8: Secure the track to the anchors using the provided mounting screws.

9: Place the Power Joiner Connector where the tracks are joined and tighten the two slotted screws with a flat-head screwdriver to secure in place.

10: Repeat steps 7 through 9 for the other end of the Center Power Feed.

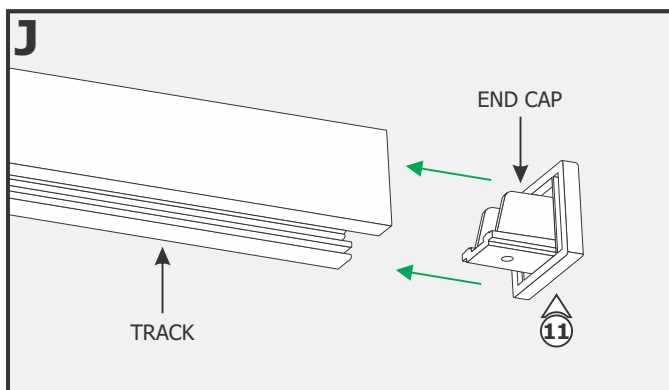

NOTE: If using the Straight Connector or L-Connector to join two tracks together, refer to the instructions provided with the connectors.

11: Push the end cap into the dead end of the track.

