
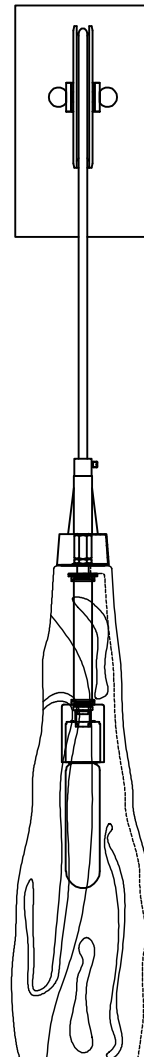
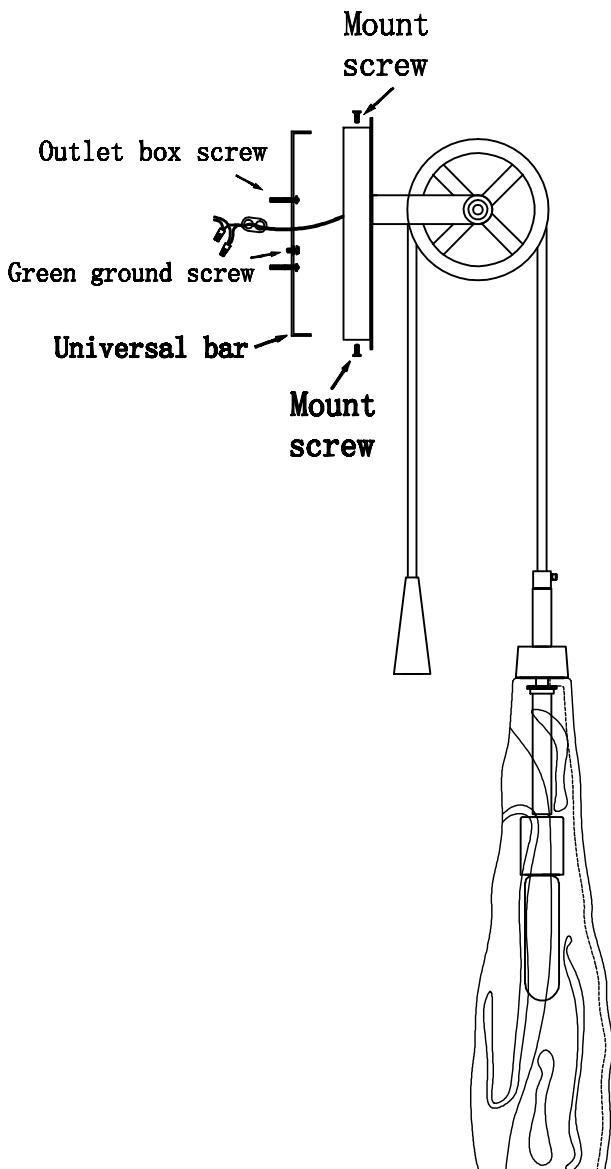


John-Richard

STYLE NO.: AJC-9130

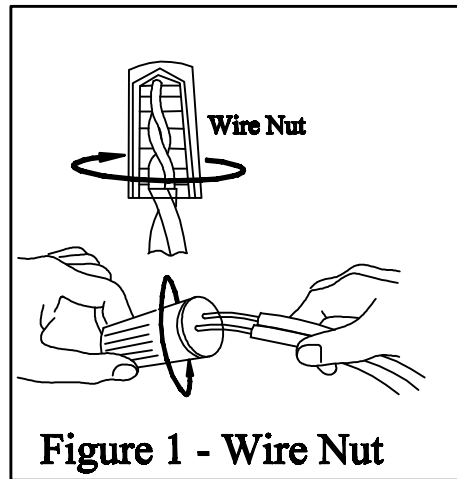

John-Richard

Installation Instructions

STYLE NO.: AJC-9130

These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning installation of this wall sconce. ***We strongly suggest that all direct wired fixtures be installed by a professional electrician.***

Carefully remove the parts from the carton and place them on a flat surface. Please make sure that you have all the parts indicated before you begin to assemble this item.

WARNING: BEFORE INSTALLING, make sure the electricity supply is shut off to avoid a possible electric shock.

Assembly Instructions

1. Carefully remove the parts and hardware from the carton.
2. Fasten the Universal bar onto the Outlet Box by using the Outlet Box Screw .
3. Install both ground wires in the Universal bar with the Green Ground Screw supplied.
4. Place the white wire, ribbed or tinted wire evenly against the white wire from the outlet box and place the black, smooth or un-tinted wire evenly against the black wire from the outlet box.
(Connecting the Wires - See Figure 1)
5. Use the Mount Screws to secure the Universal bar and Lamp Body through the Mount hole.
6. Install 40 Watt, Type A bulb into the socket of the fixture.

To clean, wipe with soft dry cloth.

NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY.