



# CRYSTORAMA


LIGHTING THE WAY FOR SIXTY YEARS

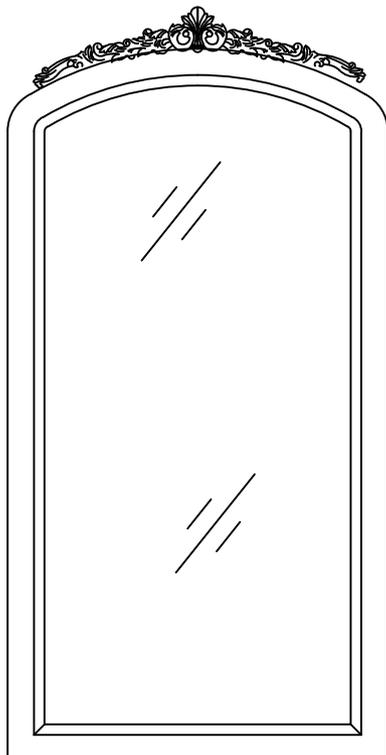

## ASSEMBLY INSTRUCTION MODEL# ARN-M700-BB

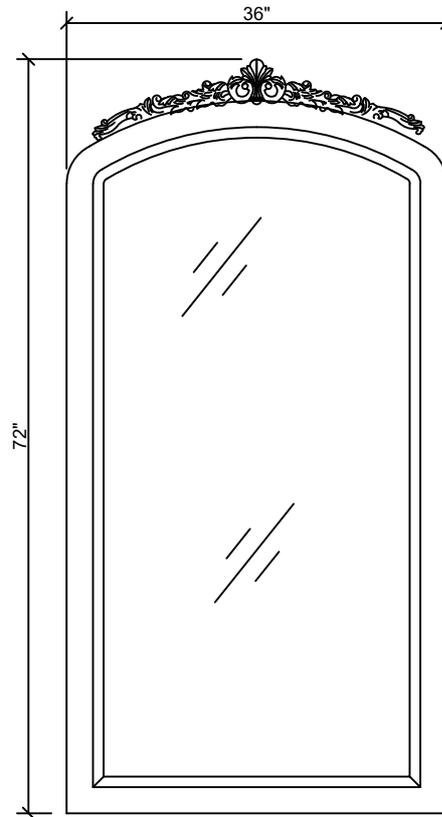

FRONT VIEW

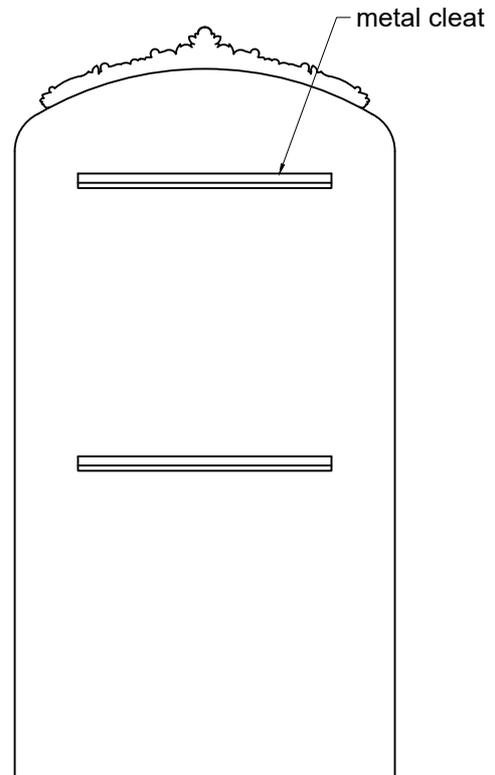

BACK VIEW







## INSTALLATION INSTRUCTIONS

### ITEMS INCLUDED

Anchor(A):  Ø7.5[mm]x36[mm]x12 Wall cleat:  x2  
Screws(B):  Ø4[mm]x40[mm]x12

### NECESSARY TOOLS (NOT INCLUDED)

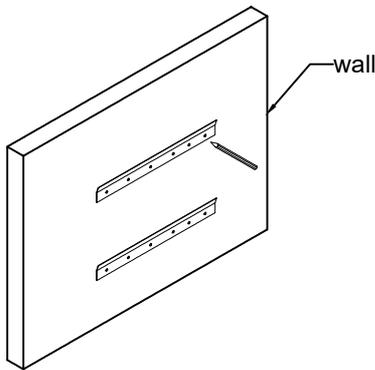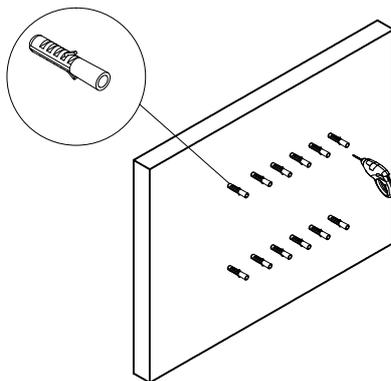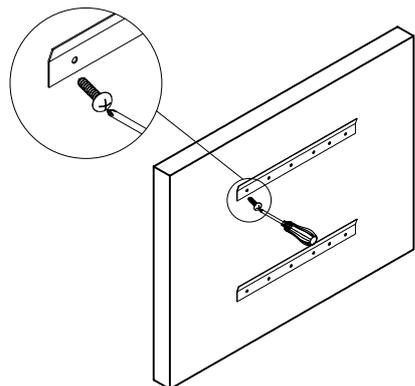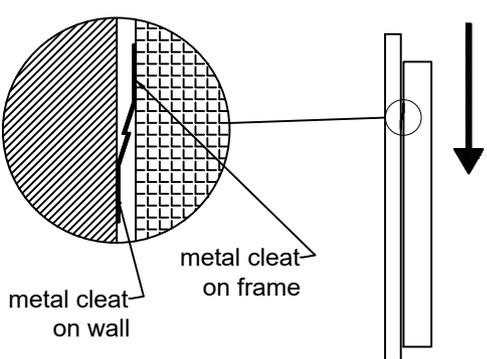

	<p><b>Step 1</b></p> <p>Place the metal cleat at the desired wall location and mark three points at the center of the hole on the metal cleat using the pencil.</p>
	<p><b>Step 2</b></p> <p>Drill the holes at the marked points and insert the anchors into the hole.</p>
	<p><b>Step 3</b></p> <p>Mount the metal cleat onto the wall surface using the screws supplied. Make sure that the metal cleat is straight using a level.</p>
	<p><b>Step 4</b></p> <p>Carefully lift from the mirror frame sides and hang onto the metal cleat</p>