


FRONT VIEW

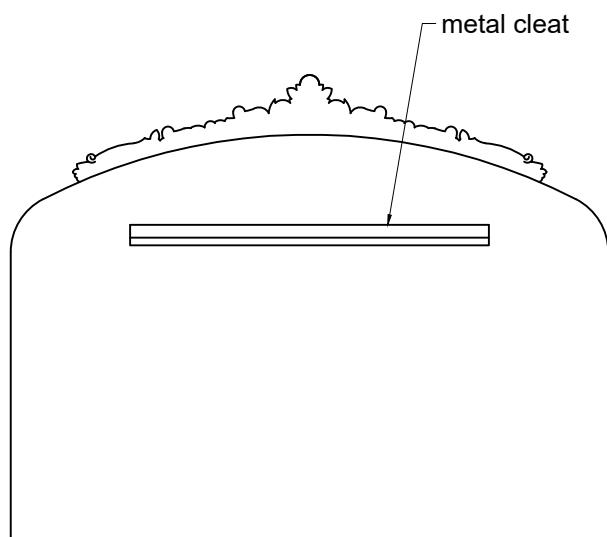

BACK VIEW

 **WARNING:** This product can expose you to Lead which is known to the state of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov

ASSEMBLY INSTRUCTION MODEL# ARN-M701-BB





INSTALLATION INSTRUCTIONS

ITEMS INCLUDED

Anchor(A):  Ø7.5[mm]x36[mm]x6 Wall cleat:  x1
Screws(B):  Ø4[mm]x40[mm]x6

NECESSARY TOOLS (NOT INCLUDED)

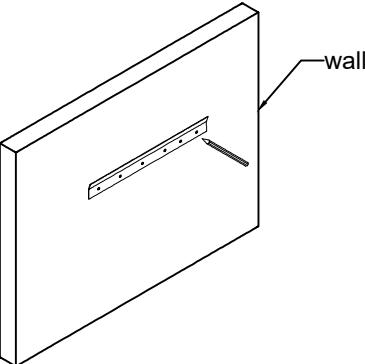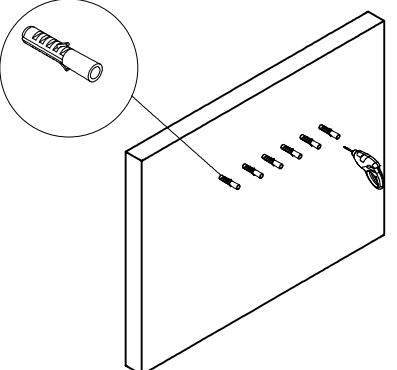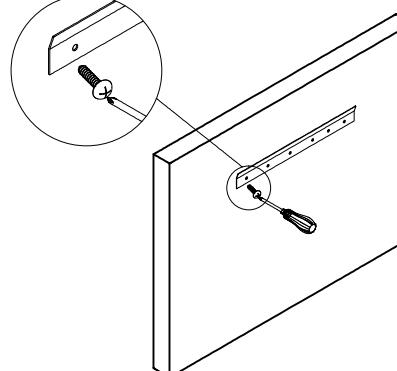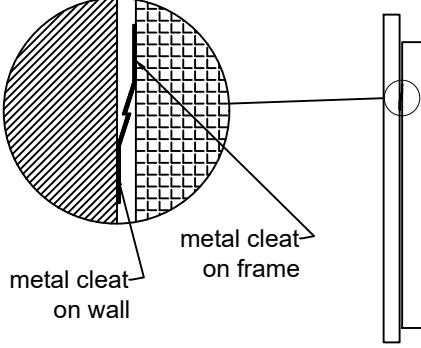

	<p>Step 1 Place the metal cleat at the desired wall location and mark six points at the center of the hole on the metal cleat using the pencil.</p>
	<p>Step 2 Drill the holes at the marked points and insert the anchors into the hole.</p>
	<p>Step 3 Mount the metal cleat onto the wall surface using the screws supplied. Make sure that the metal cleat is straight using a level.</p>
	<p>Step 4 Carefully lift from the mirror frame sides and hang onto the metal cleat</p>