



CRYSTORAMA


LIGHTING THE WAY FOR SIXTY YEARS

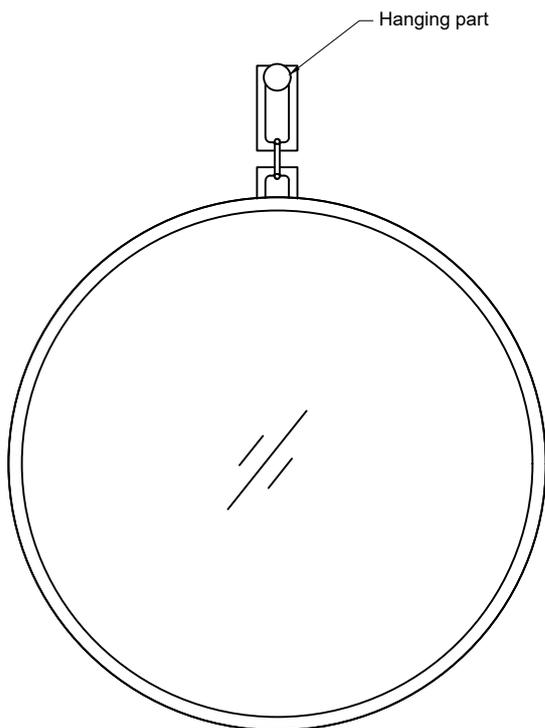

ASSEMBLY INSTRUCTION MODEL# AST-M860-MK

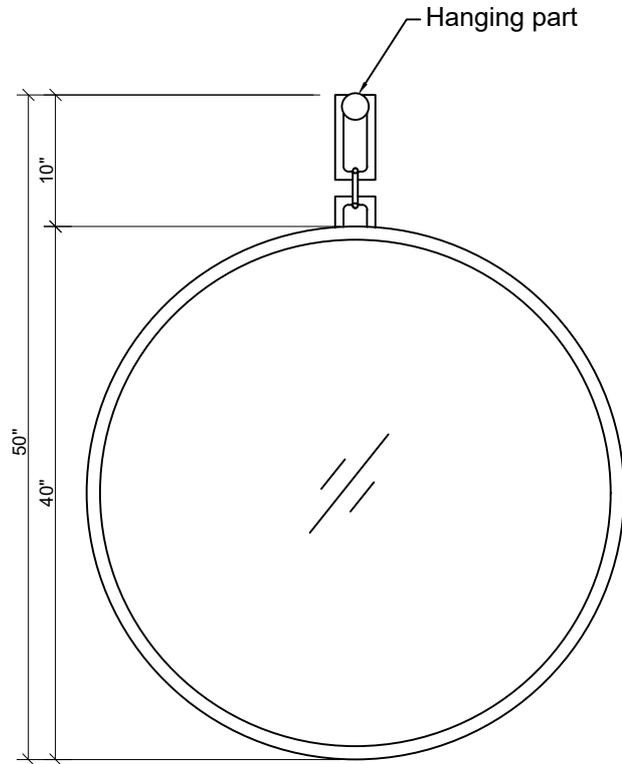

FRONT VIEW

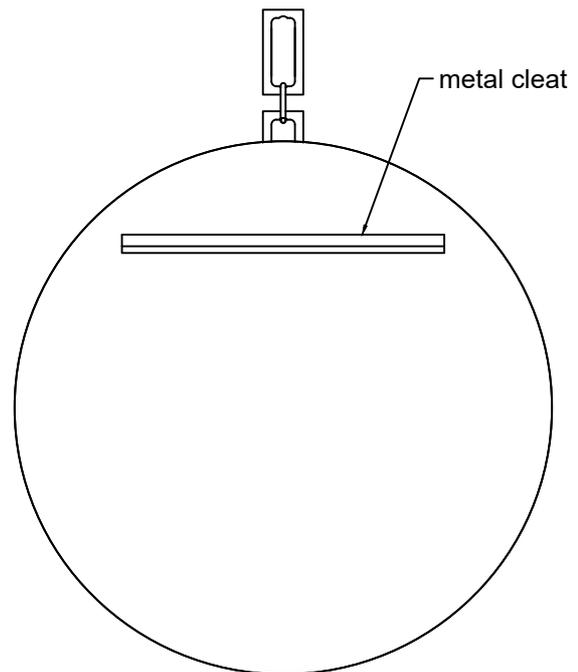

BACK VIEW

 **WARNING:** This product can expose you to Lead which is known to the state of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov







INSTALLATION INSTRUCTIONS

ITEMS INCLUDED

Anchor(A):  $\varnothing 7.5[\text{mm}] \times 36[\text{mm}] \times 7$ Wall cleat:  x1
Screws(B):  $\varnothing 4[\text{mm}] \times 40[\text{mm}] \times 7$ Hanging part:  x1

NECESSARY TOOLS (NOT INCLUDED)

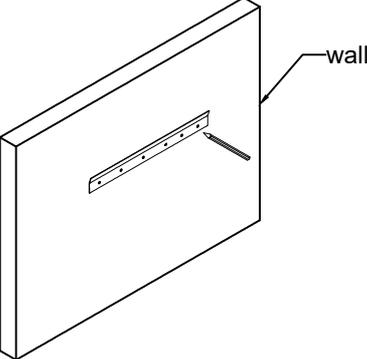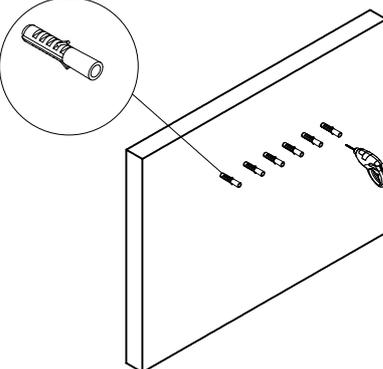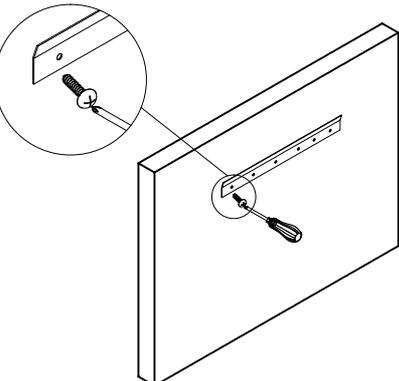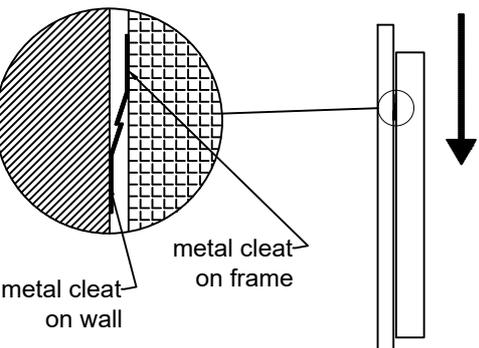

	<p>Step 1</p> <p>Place the metal cleat at the desired wall location and mark six points at the center of the hole on the metal cleat using the pencil.</p>
	<p>Step 2</p> <p>Drill the holes at the marked points and insert the anchors into the hole.</p>
	<p>Step 3</p> <p>Mount the metal cleat onto the wall surface using the screws supplied. Make sure that the metal cleat is straight using a level.</p>
	<p>Step 4</p> <p>Carefully lift from the mirror frame sides and hang onto the metal cleat</p>



To install the hanging part

Step 5:

Insert the stud through the loop, then rest it against the wall, making sure the loop remains straight.

Mark a point at the wall surface by passing the pencil through the stud.

Please do not remove the plastic wrap protection on the loop until the mirror installation is completed

Step 6:

Take the mirror off the wall and drill the hole at the marked point.

Insert the plastic anchor into the hole and insert the wood screw into the stud and tighten it onto the wall using the screw driver.

Step 7:

Hang the mirror over the stud and lean against the cleat.

Screw the cap into the stud.

