# ARA Neoteric Lighting Design




### Assembly and **Installation Instructions** for Model's

# 10050PN

**Warning** please make sure the electrical breaker is shut off before commencing with this installation

## **CAUTION - RISK OF FIRE**

Installation of this fixture should be done by a licensed electrician or by a person familiar with local electrical codes and the construction and operation of this fixture.

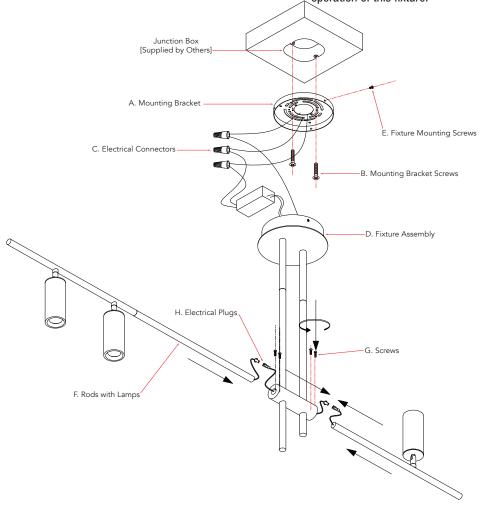

#### Package Contents Part Α Mounting bracket 2 В Mounting bracket screws C **Electrical connectors** 3 D Fixture assembly 1 E 3 **Fixture Mounting Screws** 2 F Rods with lamps 2 G Screws н 2 Electrical plugs

### Installing the fixture

please ensure the electrical breaker is in the Off position before commencing

- Attach the Mounting bracket (A) to the Junction Box [Supplied by others] using the Mounting bracket screws (B).
- Connect the supply wires to the fixture wires using the supplied electrical wire connectors (C). White supply wire to the White fixture wire, Black supply wire to Black fixture wire and the ground Bare Copper or Green wire to the Green fixture wire. Once the electrical wire connectors are securely fastened it is recommended to tape these connectors with electrical tape.
- Attach the Fixture assembly (D) to the Mounting bracket (A) using the Fixture mounting screws (E) provided.
- Plug in the Electrical plugs (H) for a Rod (F) and secure in place with a screw (G). Repeat this step for each Rod.
- Arrange the Rods (F) as desired and position the lamps in the desired direction.
- Switch on the electrical breaker switch and your new fixture is ready for many years of trouble free use.

