

Assembly and Installation Instructions for Model's

10067PN


CAUTION - RISK OF FIRE

Warning please make sure the electrical breaker is shut off before commencing with this installation

Installation of this fixture should be done by a licensed electrician or by a person familiar with local electrical codes and the construction and operation of this fixture.

Package Contents

| Part | Description | |
|----------|-------------------------|----|
| A | Mounting bracket | 1 |
| B | Mounting bracket screws | 2 |
| C | Electrical connectors | 5 |
| D | Canopy | 1 |
| E | Ceiling anchors | 3 |
| F | Ceiling anchor screws | 3 |
| G | Threaded rods | 3 |
| H | Fixture assembly | 1 |
| I | Cable stop with screws | 1 |
| J | Fixture mounting screws | 3 |
| K | Allen key | 1 |
| L | Allen screws | 12 |
| M | Glass diffusers | 6 |

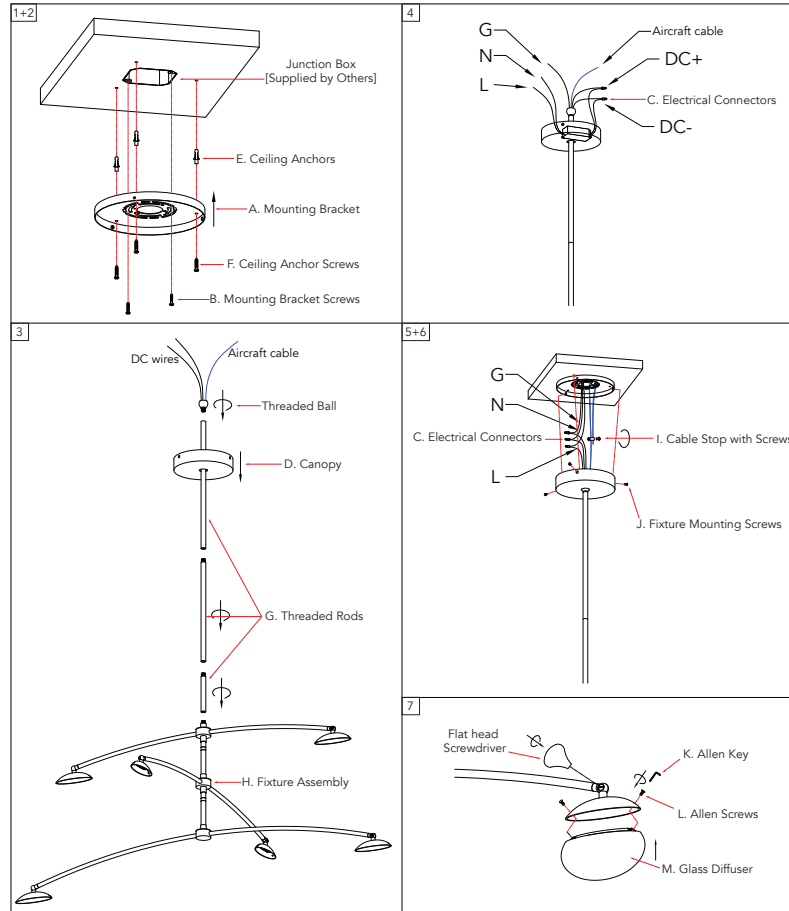

Installing the fixture

please ensure the electrical breaker is in the Off position before commencing

- Loosely attach the Mounting bracket (**A**) to the Junction Box [Supplied by others] and mark where the Ceiling anchors (**E**) will be placed. Remove the Mounting bracket.
- Insert the Ceiling anchors (**E**) into their marked positions on the ceiling and attach the Mounting bracket (**A**) to the Junction Box using the Mounting bracket screws (**B**). Secure the Mounting bracket to the ceiling by inserting the Ceiling anchor screws (**F**) through it and into the Ceiling anchors.
- Screw together the Threaded rods (**G**) and attach them to the Fixture assembly (**H**). Slide the Canopy (**D**) down and secure the Threaded ball onto the top of the Threaded rods.
- Connect the Fixture's wires [DC+ and DC-] to the Driver using supplied wire connectors (**C**).
- Connect the supply wires to the Driver and Fixture wires [G, N, L] using the supplied electrical wire connectors (**C**). White supply wire to the White fixture wire, Black supply wire to Black fixture wire and the ground Bare Copper or Green wire to the Green fixture wire. Once the electrical wire connectors are securely fastened it is recommended to tape these connectors with electrical tape.
- Loop the Aircraft cable through the Mounting bracket (**A**) and fasten tight with the Cable stop (**I**) to support the fixture. Attach the Canopy (**D**) to the Mounting bracket (**A**) using the Fixture mounting screws (**J**).
- Attach the Crystal glass diffusers (**M**) to the brackets and secure in place with supplied Allen screws (**L**) using the supplied Allen key (**K**). Set the angle of the pivot using a small flat head screwdriver, please do not overtighten.
- Switch on the electrical breaker switch and your new fixture is ready for many years of trouble free use.