

Neoteric Lighting Design




Assembly and Installation Instructions for Model's

20127WV

Installation of this fixture should be done by a licensed CAUTION - RISK OF FIRE electrician or by a person familiar with local electrical codes and the construction and operation of this fixture.

Warning please make sure the electrical breaker is shut off before commencing with this installation Read and familiarize yourself with these instructions before commencing

This fixture is certified for wall mounting only and is suitable for Damp locations

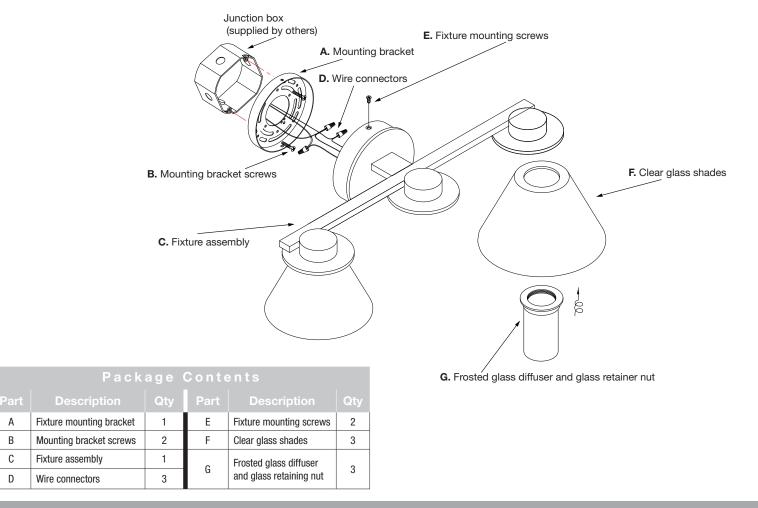

Installing the fixture please ensure the electrical breaker is switched off before commencing

- Attach and the Mounting bracket (A) to the Junction-Box with the two supplied Mounting bracket screws (B).
- Connect the supply wires to the fixture wires using the supplied electrical wire connectors (D). White supply wire to the White fixture wire, Black supply wire to Black fixture wire and the ground Bare Copper or Green wire to the Green fixture wire. Once the electrical wire connectors are securely fastened it is recommended to tape these connectors with electrical tape.
- Attach the fixture assembly (C) to the mounting bracket (A) and secure with supplied Fixture mounting screws (E)
- With the Frosted glass diffuser with retaining nut (G), secure the Clear glass shades (F) to the Fixture assembly (C) and gently tighten in place.
- Switch on the electrical breaker and your new fixture is ready for many years of trouble free use

Α

В

C

D

